
2018 Multiplex Electrical System
Version 6.7

Contents

| | |
|---|-----------|
| Chapter 1: Introduction | 9 |
| About this Programming Guide | 10 |
| How to Read This Document | 10 |
| Cummins Engine Integration on Vehicles with VECU | 10 |
| Chapter 2: Applies To | 13 |
| Build Information for Models with VECU | 14 |
| Identifying Control Units | 14 |
| Identifying System Using DAVIE4 | 14 |
| Chapter 3: Special Tools | 17 |
| Special Tools | 18 |
| Chapter 4: PACCAR Vehicle Pro | 19 |
| Accessing PACCAR Vehicle Pro | 20 |
| Programming Modules on a Truck | 20 |
| Programming a new Multiplex Switch | 22 |
| Chapter 5: Fast Idle Control | 23 |
| Fast Idle Control (FIC) | 24 |
| Maximum target engine speed in fast idle control (N726) | 24 |
| Increase in FIC Target Engine Speed on a Long Press of the SET/ACCEL SWITCH (N727) | 25 |
| Decrease in FIC Target Engine Speed on a Long Press of the RESUME/DECEL SWITCH (N728) | 25 |
| Decrease in FIC Target Engine Speed on a Bump of the RESUME/DECEL SWITCH (N729) | 25 |
| Increase in FIC Target Engine Speed on a Bump of the SET/ACCEL SWITCH (N730) | 26 |
| Chapter 6: Speed Control Management | 27 |
| Speed Control Management (SCM) | 28 |
| Enable the gear down protection feature (S864) | 29 |
| Enable the progressive shift feature (S865) | 30 |
| Minimum gear to enable GDP (N850) | 30 |
| GDP Engine Speed Limit (N851) | 30 |
| Maximum gear for GDP to be enabled (N856) | 31 |
| Maximum gear for PGS Step 2 (N858) | 31 |
| Minimum gear for PGS Step 2 (N859) | 32 |
| Maximum gear for PGS Step 1 (N860) | 32 |
| Minimum gear for PGS Step 1 (N861) | 32 |
| Engine Speed Soft Limit for PGS Step 1 (N862) | 33 |
| Engine Speed Soft Limit for PGS Step 2 (N863) | 33 |
| Chapter 7: Driver Reward | 35 |
| Driver Reward | 36 |
| Enable the Driver reward speed limiter functionality. (S615) | 37 |
| Maximum Vehicle Speed Bonus 1 (N618) | 37 |
| Maximum Vehicle Speed Penalty 1 (N621) | 38 |
| Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter (S624) | 38 |
| Fuel consumption threshold for BONUS driver reward state (N625) | 38 |
| Fuel consumption threshold for EXPECTED driver reward state (N626) | 39 |
| Fuel consumption threshold for PENALTY driver reward state (N627) | 39 |
| Enable the Vehicle Idle Time Percentage (S628) | 40 |
| Idle percentage threshold for BONUS driver reward state (N629) | 40 |

| | |
|--|-----------|
| Idle percentage threshold for EXPECTED driver reward state (N630) | 40 |
| Idle percentage threshold for PENALTY driver reward state (N631) | 41 |
| Offset Mode (N632) | 41 |
| Chapter 8: Driver Shift Aid | 43 |
| Driver Shift Aid | 44 |
| Enables driver shift aid functionality (S636) | 44 |
| Min Vehicle Speed for Driver Shift Aid Active (N637) | 44 |
| Highest transmission gear ratio that DSA will be active(Lowest Gear) (N638) | 44 |
| Lowest transmission gear ratio that DSA will be active(Highest Gear) (N639) | 45 |
| Trans gear ratio (S642) | 45 |
| Chapter 9: Cruise Control | 47 |
| Cruise Control (CC) | 48 |
| Decrement step for brief operation of switch (N502) | 48 |
| Increment step for brief operation of switch (N503) | 49 |
| Max limit for cruise control vehicle speed (N504) | 49 |
| Offset to enable cruise control (N506) | 50 |
| Enable the Dynamic Cruise Control function. (N509) | 50 |
| Large decrement step for the cruise target speed when the km/h - mph switch is set to km/h. (N510) | 50 |
| Large increment step for the cruise target speed when the km/h - mph switch is set to km/h. (N511) | 51 |
| Enable or disable the corrective braking functionality. (N512) | 51 |
| Engine brake uninterrupted if cruise control is 'set' while engine brakes are active (N923) | 52 |
| Chapter 10: Engine Retarder Control | 53 |
| PACCAR Engine Brake | 54 |
| DSL target vehicle speed offset (N870) | 55 |
| (Auto-Retarder) Target Vehicle Speed Offset (N871) | 55 |
| Delay time (in seconds) before the engine brakes become active when engaged by the driver (N874) | 56 |
| Retarder mode when cruise control switch on but not active (S875) | 56 |
| Chapter 11: Engine Idle Shutdown Timer | 57 |
| Engine Idle Shutdown Timer (EIST) | 58 |
| EIST Enable Park brake reset (N681) | 58 |
| Enable Engine Idle Shutdown Timer (S682) | 58 |
| Enable Air temperature idle timer override (S683) | 59 |
| Engine load above which the idle timer will reset (N685) | 59 |
| Ambient temp above which the idle timer will be overridden (N686) | 59 |
| Ambient temp below which the idle timer will be overridden (N687) | 60 |
| Idle time in PTO mode (N688) | 60 |
| Idle time with park brake set (N689) | 61 |
| Idle time with park brake not set (N690) | 61 |
| Enable EIST in PTO mode (S691) | 61 |
| Enable engine load as idle time reset condition (N692) | 62 |
| Enable engine load as idle timer overrule condition (N693) | 62 |
| Enable EIST timer when the parking brake is not set (N694) | 63 |
| Time remaining to shutdown from the moment of EIST warning (N696) | 63 |
| Enable accelerator position as timer reset condition (N699) | 64 |
| Enable foot brake position as timer reset condition (N700) | 64 |
| Enable clutch pedal position as timer reset condition (N701) | 64 |
| Enables to overrule EIST to recharge vehicle batteries (S703) | 65 |
| Enable EIST park brake timer (N705) | 65 |
| Enable Override Conditions In PTO Mode (N702) | 66 |
| Resets EIST on PTO change (N704) | 66 |
| Chapter 12: Vehicle Speed Limiter - SSL/GHG | 67 |
| Vehicle Speed Limiter (VSL) | 68 |
| Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711) | 68 |

| | |
|--|------------|
| Standard Maximum Speed Limit (LSL) (N718) | 68 |
| Chapter 13: Vehicle Acceleration Limiter - Enabling and Setpoint | |
| Gen | 71 |
| Vehicle Acceleration Limiter | 72 |
| Scale acceleration target based on customer choice (N750) | 72 |
| Chapter 14: Electric Over Air | 73 |
| Air Solenoids | 74 |
| Multiplexed Solenoid Bank (MSB) System | 74 |
| Multiplex Solenoid Bank (MSB) Functions | 76 |
| EOA Parameter Options | 81 |
| Dump Functions | 91 |
| Lift Axle Functions | 92 |
| Differential Lock Functions | 95 |
| Defines the speed threshold for the work brakes function (N815) | 97 |
| Defines when EOH PTO is installed (N816) | 97 |
| Determines if Suspension Dump is required (N817) | 97 |
| Defines the speed threshold for fifth wheel slide (N820) | 98 |
| Defines the speed threshold for Air Suspension Dump (N821) | 98 |
| Defines the speed threshold for trailer suspension dump function (N822) | 98 |
| Defines the speed threshold for air over inflation function (N823) | 98 |
| Axle Interlock Functions | 99 |
| Boolean KW only parameter to enable single switch control of lift axles (TRACTOR ONLY) (S780) | 100 |
| Determines location of switches and which CAN will deliver control messages (S781) | 101 |
| Defines the high speed threshold for Wheel Differential Lock Center Rear Axle function (N924) | 101 |
| Defines the high speed threshold for Wheel Differential Lock Dual Rear Axle function (N925) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Front Axle function (N926) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Forward Rear Axle function (N927) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Rear Rear Axle function (N928) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Single Rear Axle function (N929) | 103 |
| Chapter 15: Electric Trailer Options | 105 |
| Electric Trailer Options | 106 |
| Determine whether Trailer Dump Gate Single and Forward are present on the chassis. (N775) | 106 |
| Determine whether Trailer Dump Gate Single and Rear are present on the chassis. (N776) | 106 |
| Set the function to be sent on the configurable pin 3 of the ISO 3731 connector. (N777) | 107 |
| Determine whether Trailer Dump Gate Single is present on the chassis. (N778) | 108 |
| Trailer Hotline Switch (N779) | 108 |
| Chapter 16: Backup Alarm | 111 |
| Backup alarm parameters | 112 |
| Configuration parameter that enables the complete backup alarm function (S830) | 112 |
| Backup Alarm Mute Switch (S917) | 112 |
| Chapter 17: Driveline Protection & Multi Torque | 113 |
| PACCAR Driveline Protection | 114 |
| Impact to vehicle speed/acceleration determination for trucks with multispeed axles. (S911) | 114 |
| No multi torque (S910) | 114 |
| Multi Torque with Cruise Control only (N890) | 115 |
| Chapter 18: Exterior Lighting | 117 |
| Exterior lighting parameters | 118 |
| Parameter to enable Flood light during reverse (N882) | 118 |
| Beacon Lamp DTC - On/Off (N930) | 118 |
| Spot Lamp DTC - On/Off (N931) | 118 |

| | |
|--|-----|
| Sleeper Dome Lamp DTC - On/Off (N932) | 119 |
| Work Lights or Flood Lamps 2 DTC - On/Off (N933) | 119 |
| Work Lights or Flood Lamps 3 DTC - On/Off (N934) | 119 |
| Work Lights or Flood Lamps 1 DTC - On/Off (N935) | 119 |

Chapter 19: Vehicle Parameters 121

| | |
|--------------------------|-----|
| Vehicle Parameters | 122 |
| Tires (S836) | 122 |

Chapter 20: Power Take Off (PTO) 123

| | |
|---|-----|
| Power Take Off (PTO) | 124 |
| PTO Controls | 125 |
| PTO: PTO Mode Control Configurations | 127 |
| PTO: Cab Station Limits | 130 |
| PTO: Cab Station Engine Speed Control Interlocks | 133 |
| PTO: Cab Station Engine Speed Control Options | 136 |
| PTO: Cab Station Presets | 138 |
| PTO: Cab Station Custom Presets | 142 |
| PTO: Remote Station Limits | 145 |
| PTO: Remote Station Engine Speed Control Interlocks | 147 |
| PTO: Remote Station Engine Speed Control Options | 150 |
| PTO: Remote Station Presets | 152 |
| PTO: Cab And/Or Remote Station Custom Presets | 156 |
| PTO: Cab And/Or Remote Station: Engine Speed Control Interlocks | 159 |
| PTO: Pedal | 159 |
| PTO: Remote CAN Control | 160 |
| PTO: Advanced Settings | 161 |

Chapter 21: CMP - Analog DTC Enable/Disable 163

| | |
|--|-----|
| Chassis Modules (CMP and CMS) | 164 |
| Fuel Level Sensor (Secondary) (N401) | 164 |
| Main Transmission Oil Temp (N403) | 164 |
| Filter Gauges (fuel filter restriction) (N404) | 164 |
| Axle Temp Gauges (Rear Rear) (N406) | 165 |
| Battery Energy Monitoring (via Ammeter) (N407) | 165 |
| Remote Throttle Input (N408) | 165 |
| Axle Temp Gauges (Rear Front) (N409) | 165 |

Chapter 22: CMS - Analog DTC Enable/Disable 167

| | |
|---|-----|
| Chassis Modules (CMP and CMS) | 168 |
| Auto Start/Stop Hood Tilt Switch (N421) | 168 |
| Axle Temp Gauges (Rear Center) (N422) | 168 |
| Axle Temp Gauges (Steer) (N423) | 168 |
| Fuel Temp Sensor (N424) | 169 |
| Oil Temp Gauges (Aux Trans) (N429) | 169 |
| Oil Temp Gauges (Split shaft PTO/transfer case) (N430) | 169 |
| Lift Axle Air PressureGauge (#1) - DTC Enable (N425) | 170 |
| Lift Axle Air PressureGauge (#2) - DTC Enable (N426) | 170 |
| Lift Axle Air PressureGauge (#3) - DTC Enable (N427) | 170 |
| Lift Axle Air PressureGauge (tag) - DTC Enable (N428) | 171 |
| Spare Analog Input DTC Enable (NA-OCM60) (N431) | 171 |
| Spare Analog Input DTC Enable (NA-OCM61) (N432) | 171 |
| Spare Analog Input DTC Enable (NA-OCM62) (N433) | 171 |
| Suspension Load Air Pressure Gauge #2 - DTC Enable (N434) | 172 |

Chapter 23: After-Treatment 173

| | |
|---|-----|
| Exterior Notification of Regen | 174 |
| Exterior Notification for Regen Active (N915) | 174 |

Chapter 24: CMP - Digital Output FMI 5 (Undercurrent / Open) 175

| | |
|---|-----|
| Chassis Modules (CMP and CMS) | 176 |
| Lift Axle #1 Solenoid Undercurrent/Open DTC Control (N412) | 176 |
| Lift Axle #2 Solenoid Undercurrent/Open DTC Control (N413) | 176 |
| Electric Over Air Solenoid Kingpin Release (N414) | 176 |
| Direction Indication/Hazard Lights LH Trailer (rear) Undercurrent/Open DTC Control (N415) | 177 |
| Direction Indication/Hazard Lights RH Trailer (rear) Undercurrent/Open DTC Control (N416) | 177 |
| Daytime Running Lights (DRL) LH (Peterbilt) Undercurrent/Open DTC Control (N417) | 177 |
| Daytime Running Lights (DRL) RH (Peterbilt) Undercurrent/Open DTC Control (N418) | 178 |
| Fog/Driving Lamps (front) 1st set Undercurrent/Open DTC Control (N419) | 178 |
| Front Tractor Position Lights (Park Lamps) Undercurrent/Open DTC Control (N420) | 178 |
| Main Beam (High Beam) LH Undercurrent/Open DTC Control (N489) | 179 |
| Main Beam (High Beam) RH Undercurrent/Open DTC Control (N490) | 179 |
| Rear Tractor Position Lamps (Park Lamps) Undercurrent/Open DTC Control (N491) | 179 |
| Reverse Lamps Undercurrent/Open DTC Control (N492) | 179 |
| Tractor Direction Indication, Brake and Hazard - RH Rear Lamp Undercurrent/Open DTC Control (N493) | 180 |
| Tractor Direction Indication, Brake and Hazard - LH Rear Lamp Undercurrent/Open DTC Control (N494) | 180 |
| Reverse Warning (aka Backup Alarm) Undercurrent/Open DTC Control (N495) | 180 |
| Tractor Direction Indication/Hazard/Side Turn Indication RH Front Lamp Undercurrent/Open DTC Control (N496) | 181 |
| Tractor Direction Indication/Hazard/Side Turn Indication LH Front Lamp Undercurrent/Open DTC Control (N497) | 181 |
| Tractor Direction Indication/Hazard/DRL - RH Front Lamp Undercurrent/Open DTC Control (N498) | 181 |
| Tractor Direction Indication/Hazard/DRL - LH Front Lamp Undercurrent/Open DTC Control (N499) | 182 |

Chapter 25: CMS - Digital Output FMI 5 (Undercurrent / Open) 183

| | |
|--|-----|
| Chassis Modules (CMP and CMS) | 184 |
| City Horn Relay Undercurrent/Open DTC Control (N435) | 184 |
| Aftertreatment External Notification Undercurrent/Open DTC Control (N436) | 184 |
| Spare Digital Output Undercurrent/Open DTC Control (NA-OCM02) (N437) | 184 |
| Lift Axle #3 Solenoid Undercurrent/Open DTC Control (N438) | 185 |
| Lift Axle #4 Solenoid Undercurrent/Open DTC Control (N439) | 185 |
| Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM69) (N480) | 185 |
| Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM72) (N481) | 185 |
| Trailer Options - Dump Gate/Configurable Output Undercurrent/Open DTC Control (NA-OCM10) (N482) | 186 |
| Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM25) (N483) | 186 |
| Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM26) (N484) | 186 |
| Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM33) (N485) | 187 |
| Sky/Aux Lights (Panel) Undercurrent/Open DTC Control (N486) | 187 |
| Work Lamps (Frame Mounted) Undercurrent/Open DTC Control (N487) | 187 |
| Snow Plow Lamp Undercurrent/Open DTC Control (N488) | 187 |

| | |
|----------------|-----|
| Glossary | 189 |
|----------------|-----|

© 2018 PACCAR Inc. - All Rights Reserved

This manual illustrates and describes the operation of features or equipment which may be either standard or optional on this vehicle. This manual may also include a description of features and equipment which are no longer available or were not ordered on this vehicle. Please disregard any illustrations or descriptions relating to features or equipment which are not on this vehicle. PACCAR reserves the right to discontinue, change specifications, or change the design of its vehicles at any time without notice and without incurring any obligation. The information contained in this manual is proprietary to PACCAR. Reproduction, in whole or in part, by any means is strictly prohibited without prior written authorization from PACCAR Inc.

Chapter 1 | INTRODUCTION

| | |
|--|----|
| About this Programming Guide | 10 |
| How to Read This Document | 10 |
| Cummins Engine Integration on Vehicles with VECU | 10 |

About this Programming Guide

This programming guide is designed to help dealers and technicians understand some of the programming options available for Kenworth and Peterbilt trucks, as well as how to update those parameters.

How to Read This Document

The programming guide is divided into several chapters. Each chapter either covers the parameters that can be programmed or procedures used to program the parameters.

Each parameter detailed includes an explanation of the parameter, any related or connected parameters, and a table detailing the parameter. The columns in each of these parameter tables are described in the following table.

Table 1: Parameter Table Explanation

| Column Name | Explanation |
|---------------|---|
| Sel Code | Parameter's sel code number |
| Default Value | Default value entered in the parameter |
| Minimum Value | Minimum value that can be entered |
| Maximum Value | Maximum value that can be entered |
| Unit Type | Unit value of parameter, such as 'mph' or 'seconds' |




NOTE

Some parameters are visible to customers but cannot be modified by them. These parameters will be noted as either nonprogrammable (cannot be changed) or only modifiable by PACCAR employees.

Cummins Engine Integration on Vehicles with VECU

Vehicle Electronic Control Unit (VECU) BUS communication is different for vehicles with a Cummins engine versus those with an MX engine. On vehicles equipped with a Cummins engine, most engine parameters are controlled by the Cummins *Electronic Control Unit (ECU)*. The *VECU* is not used to control or program these functions. Instead, the *VECU* works as a pass-through router, sending signals from sensors or switches to the Cummins *ECU*, and notifications from the Cummins *ECU* to the instrument panel. The *VECU* does not make any decisions on the signal being sent.

Figure 1: Cummins Integration Block Diagram

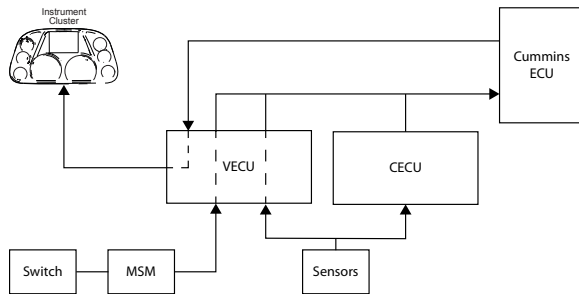

Many of the parameters covered in this document are for MX engines only. If your vehicle has a Cummins engine, these settings will not be shown in the *PACCAR Vehicle Pro (PVP)* system, and cannot be modified using *PVP*. *Fast Idle Control (FIC)* must instead be programmed on the Cummins *ECU* using Cummins INSITE™. PTO function has to be programmed using Cummins INSITE™ and *PVP* if the *Power Take Off (PTO)* is air actuated. The *Multiplex Solenoid Bank (MSB)* would need to be programmed for the air solenoid to assign a function to the solenoid that activates the *PTO*. *DAVIE4* is required to update the software parameters in addition to performing a "switch learn" for the *PTO* switch being assigned for the function.

Please refer to the Cummins manual for information on adjusting these variables.



NOTE

The *Cab Electronic Control Unit (CECU)* still handles its functions and settings on vehicles with a Cummins engine.

Chapter 2 | APPLIES TO

Build Information for Models with VECU 14

Identifying Control Units 14

Identifying System Using DAVIE4 14

Build Information for Models with VECU

The [CECU VECU Multiplex \(CVMux\)](#) architecture includes both a [CECU](#) and the new [VECU](#) to control various systems on the truck.

Full [VECU](#) system installation began October 08, 2018 (although some trucks were built and released before this date) on PACCAR Heavy Duty vehicles with 2.1m cabs and either EPA17 Diesel or EPA18 Natural Gas engines. The tables below may help identify trucks equipped with the [VECU](#) system.

Table 2: Kenworth Trucks

| Models | Production Build Dates | Engine Emissions Level | Control Unit | Hardware Part Number | Software Version |
|------------|------------------------|-------------------------------------|-----------------|---|---|
| T680, T880 | Oct 08, 2018 - Present | EPA18 (Natural Gas), EPA17 (Diesel) | VECU, CECU3-500 | CECU3-500: Q21-1128-XXX-XXX VECU: Q21-1126-XXX-XXX | CECU3-500: P30-1041-XXX VECU: 2188275 ¹ |

Table 3: Peterbilt Trucks

| Models | Production Build Dates | Engine Emissions Level | Control Unit | Hardware Part Number | Software Version |
|----------|------------------------|-------------------------------------|-----------------|---|---|
| 579, 567 | Oct 08, 2018 - Present | EPA18 (Natural Gas), EPA17 (Diesel) | VECU, CECU3-500 | CECU3-500: Q21-1128-XXX-XXX VECU: Q21-1126-XXX-XXX | CECU3-500: P30-1041-XXX VECU: 2188275 ² |

Identifying Control Units

Control Units can be identified using any of the methods below:

- [Menu Control Switch \(MCS\)](#) and Driver Information Center
- [DAVIE4](#)
- [Electronic Catalog \(ECAT\)](#)
- [Electronic Service Analyst \(ESA\)](#)



NOTE


Using [MCS](#) is the recommended method for determining the type of control unit in the truck.

Identifying System Using DAVIE4


¹ This is the value that is displayed in the Truck Settings of the instrument cluster for software number.

² This is the value that is displayed in the Truck Settings of the instrument cluster for software number.


1. Connect to the vehicle with **DAVIE4**.
2. Once the truck is identified select **Quick Check**.

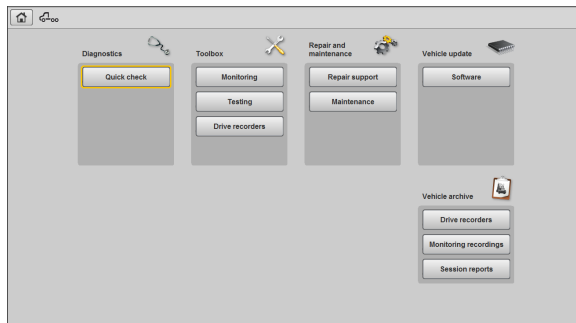

If the truck is equipped with a **VECU**, it will be displayed on the **ECU Overview** screen.

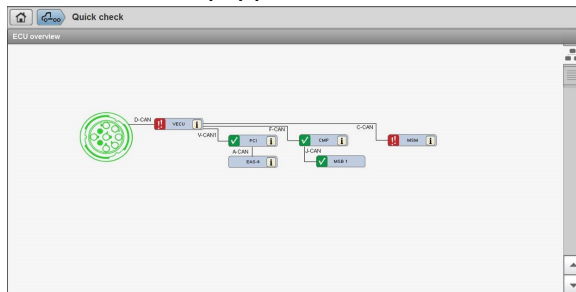

3. To view the software and hardware part numbers, click on the **VECU i-pane**.

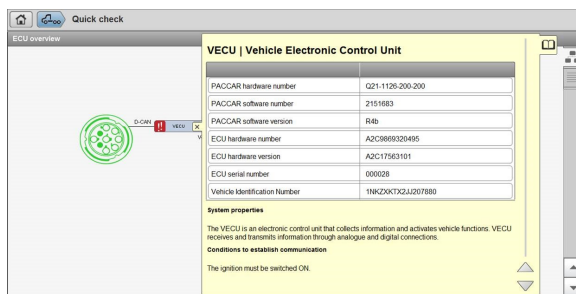

Chapter 3 | SPECIAL TOOLS

Special Tools 18

Special Tools

You need special tools to program and update the [VECU](#).

PACCAR Vehicle Pro (PVP) - Formerly called [PACCAR Engine Pro \(PEP\)](#), [PVP](#) is a North American software application used for making changes or adjusting engine parameters.

DAVIE4 - DAVIE4 is the diagnostic tool used for programming and troubleshooting the [VECU](#) and the functions it controls. Connecting to the [VECU](#) with [DAVIE4](#) requires content version 18.29.5 or higher and toolset version 6.2.8 or higher. Refer to ePortal for the latest release.

Chapter 4 | PACCAR VEHICLE PRO

Accessing PACCAR Vehicle Pro 20

Programming Modules on a Truck 20

Programming a new Multiplex Switch 22

Accessing PACCAR Vehicle Pro

You will need a username and password set up for the [PVP](#) system.

Use this procedure to access the [PVP](#) system. The [PVP](#) system is used to see current settings for a chassis and to make changes to the system.

1. Sign in to ePortal using your ePortal username and password.

The PVP ePortal website is <https://eportal.paccar.com/PVP>.

2. From ePortal, click on the **Service** tab.

3. Click on the **Software** link.

The Software link is found on the left hand menu.

4. Click on the **PACCAR Vehicle Pro** link.

The Home Page opens to the Chassis Lookup section.



5. Enter the eight character chassis number in the Chassis Lookup field and press **Search**.

The chassis number is the last 8 of the truck's [Vehicle Identification Number \(VIN\)](#).

The *Edit Current Engine Parameters for Chassis* page appears.

If the chassis number entered is not found, the page indicates the chassis number is not found. Check the chassis number entered and try again. If you are still unable to access the chassis, contact your support representative.

Programming Modules on a Truck



WARNING

The vehicle's battery should be fully charged or connected to an external power source before beginning this procedure. Failure to do so could cause the vehicle to lose power during the procedure, which can damage the module.



WARNING

The service computer connected to the diagnostic connector should be fully charged or connected to an external power source before beginning this procedure. Failure to do so could cause the computer to lose power during the procedure, which can damage the module.



NOTE

All parameter changes must be made using [PVP](#) before beginning this procedure.




NOTE


This procedure does not apply to programming new/blank modules.

This procedure describes programming a VECU as an example, but can be used to program any component listed in DAVIE4.

1. Open [DAVIE4](#) and select **Identify Vehicle**.

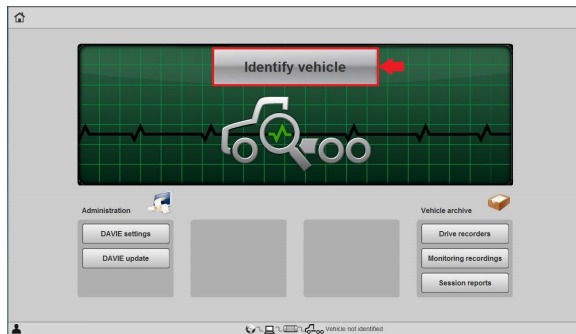

2. Click on **Software**.

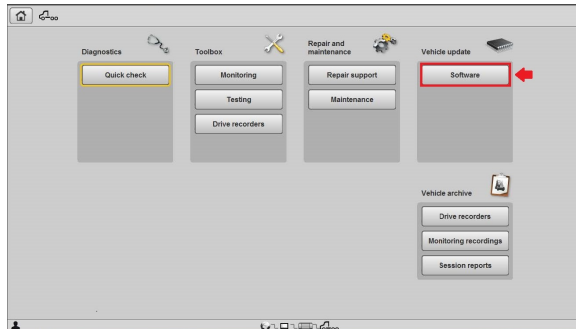


3. Select the module that needs to be programmed, then click **Retrieve Software**.




NOTE

Modules with out of date software will display a yellow triangle in the status column.

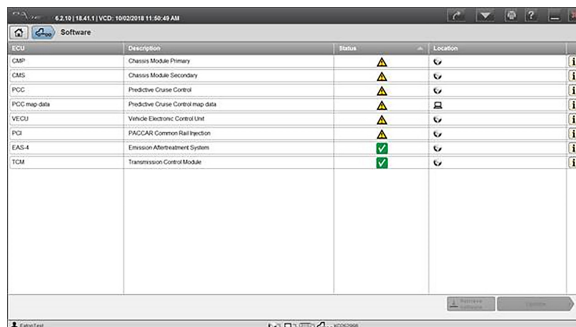


The new software downloads. If the download is successful an expiration date displays in the **Location** column to the right of the **Status** column.


4. Select the module, then click **Update**.
5. Confirm that you would like to proceed with programming.

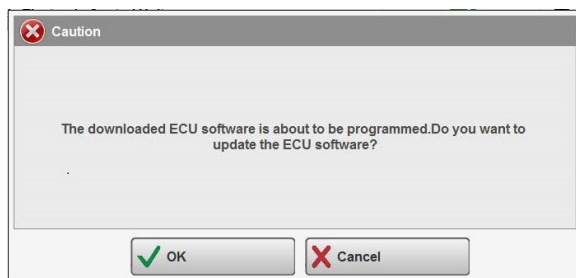


6. Verify that the conditions are fulfilled, then click the arrow to proceed.

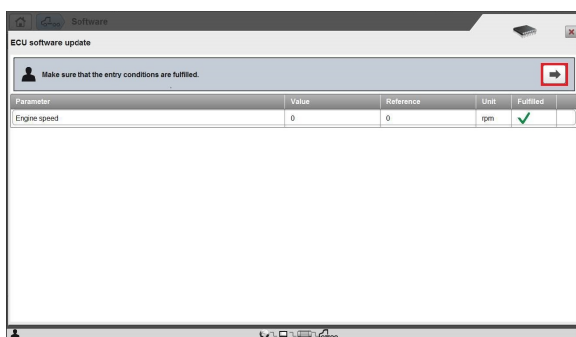

7. Follow the instructions on the screen.

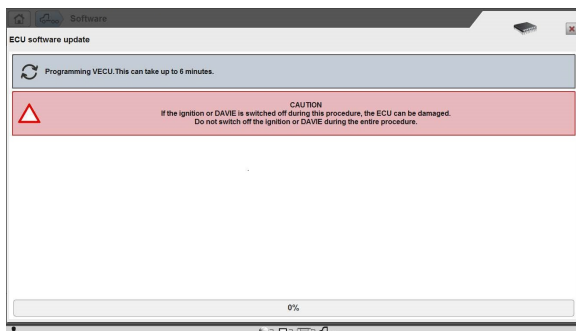

Programming is successful. Click the arrow to go back to the software screen. From there you may exit or program another module.

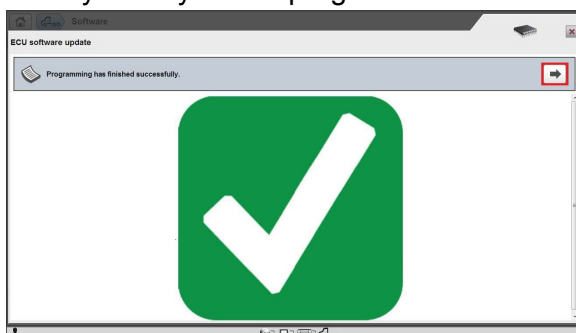

Programming a new Multiplex Switch

1. Turn off the engine and set all switches to OFF.
2. Connect computer to *On Board Diagnostics (OBD)* connector.
3. Login to the *DAVIE4* application.
The username and password for the *DAVIE4* application is the same as for ePortal.
4. Run **Quick Check** before adding a switch to show the current configuration.
5. Select the *Repair Support* tab.
6. Select the *Learn Dash Switches*.
7. Cycle the key when prompted by *DAVIE4*.
8. Run *Quick Check* and verify new switch is included in system.
9. Clear any inactive *Diagnostic Trouble Code (DTC)*.

Chapter 5 | FAST IDLE CONTROL

Fast Idle Control (FIC) 24

Maximum target engine speed in fast idle control (N726) 24

Increase in FIC Target Engine Speed on a Long Press of the SET/ACCEL SWITCH (N727) 25

Decrease in FIC Target Engine Speed on a Long Press of the RESUME/DECEL SWITCH
(N728) 25

Decrease in FIC Target Engine Speed on a Bump of the RESUME/DECEL SWITCH (N729) 25

Increase in FIC Target Engine Speed on a Bump of the SET/ACCEL SWITCH (N730) 26

Fast Idle Control (FIC)

FIC is a function that allows the operator to increase the engine rpm during stationary operations. The function receives input from switches on the dash and throttle, service brake, clutch pedal. This function has preprogrammed minimum and maximum values. This allows the driver to adapt to changing engine speed requirements. Examples include:

- Raising engine speed for faster engine warm-up on cold days.
- Raising engine speed to improve *Heating, Ventilation and Air Conditioning (HVAC)* performance in extreme conditions while parked.
- Improving service operations, such as charging of the batteries or air system.

FIC becomes active and allows the operator to control the engine speed with the Set/Accel and Resume/Decel switches when all of the following conditions are met:

- The Cruise Control switch is in the ON position.
- The vehicle is stationary.
- The transmission is in neutral.
- The parking brake is set.

FIC is canceled if the accelerator is pressed down and exceeds the value that is set by the **FIC** setting. **FIC** also automatically deactivates if the clutch pedal or the service brake pedal are depressed.

Fleet managers may find that adjusting some of the **FIC** settings yields better fuel economy when an application requires extended idle operations. The FIC module allows a fleet owner to set limits in order to enhance overall operating economy. FIC is a standard feature of the engine, but can be disabled to ensure that engine idle speed cannot be altered.



NOTE

The default **FIC** settings are useful for the majority of applications, so modifications of the default settings typically are not necessary. Before changing the default parameters, it is strongly recommended to consult the customer and/or body builder to determine the specific vehicle application.

Maximum target engine speed in fast idle control (N726)

This setting controls the maximum engine speed available during **FIC** mode. While engine idle speed can be controlled during **FIC**, engine speed will not exceed the value listed in this setting.



NOTE

This parameter is for MX engines only.

Table 4: Maximum Target Engine Speed in FIC (N726)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N726 | 1900 | 650 | 1900 | RPM |

Increase in FIC Target Engine Speed on a Long Press of the SET/ACCEL SWITCH (N727)

This setting controls the amount engine speed is increased during *FIC* mode when the Set/Accel switch is pressed and held.



NOTE

This parameter is for MX engines only.

Table 5: Increase in FIC Target Engine Speed on a Long Press of the SET/ACCEL SWITCH (N727)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N727 | 250 | 10 | 1000 | RPM/S |

Decrease in FIC Target Engine Speed on a Long Press of the RESUME/DECEL SWITCH (N728)

This setting controls the amount engine speed is decreased during *FIC* mode when the Resume/Decel switch is pressed and held.



NOTE

Briefly pressing the Resume/Decel switch reduces engine speed by the amount entered in *Decrease in FIC Target Engine Speed on a Bump of the RESUME/DECEL SWITCH (N729)* on page 25 .



NOTE

This parameter is for MX engines only.

Table 6: Decrease in FIC Target Engine Speed on a Long Press of the RESUME/DECEL SWITCH (N728)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N728 | 250 | 10 | 1000 | RPM/S |

Decrease in FIC Target Engine Speed on a Bump of the RESUME/DECEL SWITCH (N729)

This setting controls the amount engine speed is decreased during *FIC* mode when the Resume/Decel switch is briefly pressed.



NOTE

Pressing and holding the Resume/Decel switch reduces engine speed by the amount entered in [Decrease in FIC Target Engine Speed on a Long Press of the RESUME/DECEL SWITCH \(N728\)](#) on page 25 .



NOTE

This parameter is for MX engines only.

Table 7: Decrease in FIC Target Engine Speed on a Bump of the RESUME/DECEL SWITCH (N729)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N729 | 100 | 10 | 1000 | RPM |

Increase in FIC Target Engine Speed on a Bump of the SET/ACCEL SWITCH (N730)

This setting controls the amount engine speed is increased during [FIC](#) mode when the Set/Accel switch is briefly pressed.



NOTE

Pressing and holding the Set/Accel switch increases engine speed by the amount entered in [Increase in FIC Target Engine Speed on a Long Press of the SET/ACCEL SWITCH \(N727\)](#) on page 25 .



NOTE

This parameter is for MX engines only.

Table 8: Increase in FIC Target Engine Speed on a Bump of the SET/ACCEL SWITCH (N730)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N730 | 100 | 10 | 1000 | rpm |

Chapter 6 | SPEED CONTROL MANAGEMENT

| | |
|--|----|
| Speed Control Management (SCM) | 28 |
| Enable the gear down protection feature (S864) | 29 |
| Enable the progressive shift feature (S865) | 30 |
| Minimum gear to enable GDP (N850) | 30 |
| GDP Engine Speed Limit (N851) | 30 |
| Maximum gear for GDP to be enabled (N856) | 31 |
| Maximum gear for PGS Step 2 (N858) | 31 |
| Minimum gear for PGS Step 2 (N859) | 32 |
| Maximum gear for PGS Step 1 (N860) | 32 |
| Minimum gear for PGS Step 1 (N861) | 32 |
| Engine Speed Soft Limit for PGS Step 1 (N862) | 33 |
| Engine Speed Soft Limit for PGS Step 2 (N863) | 33 |

Speed Control Management (SCM)

The *Standard Chassis Module (SCM)* feature is intended to help encourage fuel-efficient shifting habits by reducing engine performance or restricting vehicle speed at elevated engine speeds. Speed Control Management consists of two control strategies: *Progressive Shift (PGS)* and *Gear Down Protection (GDP)*, which may be enabled separately or in combination.

PACCAR offers pre-approved and validated *PGS* and *GDP* settings for most manual and automated-manual transmission powertrain configurations. Upon selection of at least one of the *SCM* features, optimized shift points and the gears in which *SCM* functionality will be active are identified by PACCAR and programmed into the vehicle. These shift points are based on the customer's powertrain configuration and requested performance optimization goals.

Standard Feature

- Without *SCM*

Feature Options

- *PGS*
- *GDP*
- *PGS* and *GDP*

Progressive Shift (PGS)

The *PGS* module is typically used to encourage earlier shifts in lower gears to improve fuel economy. By shifting earlier, the engine speed is reduced, improving fuel economy. *PGS* is a “soft” RPM limit that restricts the rate of engine acceleration when the engine speed is above a predefined engine speed limit. This provides a balance between encouraging a driver to shift at lower engine speeds and the driver's needs to remain in a gear longer to execute a shift under heavy load and/or on a hill. The driver's perception of the restricted engine acceleration gives a clear indication to execute an upshift. Full engine acceleration is restored after the driver executes a shift where the engine speed falls below the customer-defined limit in the next gear. Along with limiting engine acceleration, this function also provides a visual notification to the driver to shift via the driver display.

The *PGS* module will provide up to two engine speed limits, allowing customers to use a more aggressive limit in lower gears and a less aggressive limit in higher gears. 10-speed and 13-speed transmissions will receive a two-step engine speed limit, and 18-speed transmissions will receive a single step. The first and last gear in which each progressive shift range is programmed ensuring it is properly configured to the customer's application and for the specified powertrain components.

Minimum gear for PGS Step 1 (N861) on page 32 indicates the first gear number in which *PGS* will become active and *Maximum gear for PGS Step 1 (N860)* on page 32 indicates the last gear the first *PGS* step will be active.

Engine Speed Soft Limit for PGS Step 2 (N863) on page 33 defines the maximum engine speed when the vehicle is in *PGS* step 2.

Maximum gear for PGS Step 2 (N858) on page 31 specifies the last gear that the second step of *PGS* will be active.

While *PGS* is active, engine speed will be “soft” limited to *Engine Speed Soft Limit for PGS Step 1 (N862)* on page 33 or *Engine Speed Soft Limit for PGS Step 2 (N863)* on page 33 depending on the currently selected gear and the defined gear ranges for each step.

Gear Down Protection (GDP)

The **GDP** module encourages the driver to shift into top gear when operating the vehicle at the target operating speed. This is done by restricting the road speed in gears below top gear. When enabled, **GDP** restricts operation of the vehicle at the target operating speed when not in top gear. This effectively prevents engine operation at excessive RPMs and, as a result, helps to improve fuel economy. **GDP** is a “hard” limit. The engine RPM, and therefore vehicle speed, will be limited to a specified value in the specified gears. Along with limiting engine RPM and vehicle speed, this function also provides a visual notification to the driver to shift via the driver display.

The **GDP** module offers a single programmable engine speed limit. Selection of the **GDP** module will automatically set the engine speed limit at one or two gears below top gear depending upon the combination of transmission, rear axle ratio, and equipped tires. Changes to the factory settings can be made post-delivery via a PRS file from the PACCAR Engine Support Center.

Minimum gear to enable GDP (N850) on page 30 specifies the first selected gear in which the **GDP** “hard” engine speed limiter will become active, while **Maximum gear for GDP to be enabled (N856)** on page 31 specifies the last selected gear that the **GDP** engine speed limiter will remain active.

Application Guidelines

The **SCM** features are intended to be used with manual and automated-manual transmissions while operating in manual mode. The **SCM** feature is not available with 2-speed rear axles, auxiliary transmissions, Allison transmissions, or multi-speed transfer cases. A full list of application guidelines includes:

- Transmissions
 - Available on chassis equipped with Eaton 9, 10, 11, 13, or 18-speed manual transmissions
 - Available on chassis equipped with Eaton Ultrashift automated manual transmissions (while operating in manual mode)
 - Not available on chassis equipped with Allison transmissions
 - Not available on chassis with auxiliary transmissions
- Rear Axle Ratio
 - Available on chassis with 2.53 to 4.33 rear axle ratios
 - Not available on chassis equipped with multi-speed rear axles

Enable the gear down protection feature (S864)

This setting enables the gear down protection.



NOTE

This parameter is for MX engines only.

Table 9: Enable the gear down protection feature (S864)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S864 | NONE | NONE | ON | FLAG |

Enable the progressive shift feature (S865)

This setting enables the progressive shift feature.



NOTE

This parameter is for MX engines only.

Table 10: Enable the progressive shift feature (S865)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S865 | NONE | NONE | ON | FLAG |

Minimum gear to enable GDP (N850)

This setting controls the minimum gear the vehicle can be in to enable [GDP](#).



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 11: Minimum gear to enable GDP (N850)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N850 | 9 | 0 | 18 | GEAR |

GDP Engine Speed Limit (N851)

This setting controls the engine speed limit when the vehicle is in [GDP](#).



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

This parameter is for MX engines only.

Table 12: GDP Engine Speed Limit (N851)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N851 | 1680 | 1330 | 1930 | RPM |

Maximum gear for GDP to be enabled (N856)

This setting controls the maximum gear the vehicle can be in to enable *GDP*.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

This parameter is for MX engines only.

Table 13: Maximum gear for GDP to be enabled (N856)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N856 | 9 | 0 | 18 | GEAR |

Maximum gear for PGS Step 2 (N858)

This setting controls the maximum gear the vehicle can be in for *PGS* step 2.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

This parameter is for MX engines only.

Table 14: Maximum gear for PGS Step 2 (N858)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N858 | 8 | 0 | 18 | GEAR |

Minimum gear for PGS Step 2 (N859)

This setting controls the minimum gear the vehicle can be in for *PGS* step 2.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 15: Minimum gear for PGS Step 2 (N859)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N859 | 7 | 0 | 18 | GEAR |

Maximum gear for PGS Step 1 (N860)

This setting controls the maximum gear the vehicle can be in for *PGS* step 1.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 16: Maximum gear for PGS Step 1 (N860)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N860 | 6 | 0 | 18 | GEAR |

Minimum gear for PGS Step 1 (N861)

This setting controls the minimum gear the vehicle can be in for *PGS* step 1.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 17: Minimum gear for PGS Step 1 (N861)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N861 | 2 | 0 | 18 | GEAR |

Engine Speed Soft Limit for PGS Step 1 (N862)

This settings controls the maximum engine speed when the vehicle is in [PGS](#) step 1.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 18: Engine Speed Soft Limit for PGS Step 1 (N862)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N862 | 1500 | 0 | 4000 | RPM |

Engine Speed Soft Limit for PGS Step 2 (N863)

This settings controls the maximum engine speed when the vehicle is in [PGS](#) step 2.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 19: Engine Speed Soft Limit for PGS Step 2 (N863)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N863 | 1500 | 0 | 4000 | RPM |

Chapter 7 | DRIVER REWARD

Driver Reward 36

Enable the Driver reward speed limiter functionality. (S615) 37

Maximum Vehicle Speed Bonus 1 (N618) 37

Maximum Vehicle Speed Penalty 1 (N621) 38

Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter (S624) 38

Fuel consumption threshold for BONUS driver reward state (N625) 38

Fuel consumption threshold for EXPECTED driver reward state (N626) 39

Fuel consumption threshold for PENALTY driver reward state (N627) 39

Enable the Vehicle Idle Time Percentage (S628) 40

Idle percentage threshold for BONUS driver reward state (N629) 40

Idle percentage threshold for EXPECTED driver reward state (N630) 40

Idle percentage threshold for PENALTY driver reward state (N631) 41

Offset Mode (N632) 41

Driver Reward

The Driver Reward feature is designed to improve fuel economy by providing incentive for drivers to meet customer-defined goals for fuel economy and idle time. The vehicle speed limit may be lowered when goals are not met, or increased to reward drivers for meeting the goals.



NOTE

The Driver Reward feature is only available vehicles equipped with PACCAR MX engines manufactured after June 2015, and is not compatible with vehicles equipped with early model year 2015 or prior engines.

Standard Feature

- Without Driver Reward

Feature Options

- Fuel Economy Evaluation
- Idle Time Evaluation

The Driver Reward feature provides the driver with increased vehicle speed for meeting customer-defined fuel consumption and idle time goals. The customer has the option of evaluating driver performance based on Fuel Economy, Idle Time Percentage, or both. [Offset Mode \(N632\)](#) on page 41 may also be configured to apply vehicle speed rewards to the cruise control vehicle speed limit, the accelerator pedal vehicle speed limit, or both.

The Fuel Economy option allows the engine to monitor and compare actual fuel economy to [Idle percentage threshold for EXPECTED driver reward state \(N630\)](#) on page 40 , which is the threshold at which neither a reward nor penalty will be imposed on the driver. The [Maximum Vehicle Speed Bonus 1 \(N618\)](#) on page 37 will be applied if the measured fuel economy is greater than or equal to [Fuel consumption threshold for BONUS driver reward state \(N625\)](#) on page 38 . The [Maximum Vehicle Speed Penalty 1 \(N621\)](#) on page 38 will be applied if the measured fuel economy is less than or equal to [Idle percentage threshold for PENALTY driver reward state \(N631\)](#) on page 41 . As the driver improves the measured fuel economy, the maximum vehicle speed will increase with the driver's performance, until the [Maximum Vehicle Speed Bonus 1 \(N618\)](#) on page 37 has been reached. As the driver decreases the measured fuel economy, the vehicle speed penalty will gradually increase with the driver's performance, until the [Maximum Vehicle Speed Penalty 1 \(N621\)](#) on page 38 has been reached.

The Percent Idle Time option allows the engine to monitor the percentage of engine idle time and compare it to [Idle percentage threshold for EXPECTED driver reward state \(N630\)](#) on page 40 , which is the threshold at which neither a reward nor penalty will be imposed on the driver. The [Maximum Vehicle Speed Bonus 1 \(N618\)](#) on page 37 will be applied if the recorded percentage of idle time is less than or equal to [Idle percentage threshold for BONUS driver reward state \(N629\)](#) on page 40 . The [Maximum Vehicle Speed Penalty 1 \(N621\)](#) on page 38 will be applied if the recorded percentage of idle time is greater than or equal to [Idle percentage threshold for PENALTY driver reward state \(N631\)](#) on page 41 . As the driver decreases the recorded percentage of idle time, the maximum vehicle speed will increase until the [Maximum Vehicle Speed Bonus 1 \(N618\)](#) on page 37 has been reached. As the driver decreases the recorded percentage of idle time, the vehicle speed penalty will gradually increase until the [Maximum Vehicle Speed Penalty 1 \(N621\)](#) on page 38 has been reached.

If Fuel Economy and Percent Idle Time are both enabled, the Driver Reward performance criteria are evaluated individually and the overall vehicle speed bonus or penalty will be determined from the lowest individual bonus or penalty.

On Greenhouse Gas (GHG) compliant vehicles, *Standard Maximum Speed Limit (LSL) (N718)* on page 69 will limit the overall maximum speed of the vehicle, until the *Vehicle Speed Limiter (VSL)* expiration distance has been exceeded. The *VSL* expiration distance is available in the chassis information within *PEP*, and may not be changed. For vehicles which have exceeded the *VSL* expiration distance, the *Standard Maximum Speed Limit (LSL) (N718)* on page 69 will be ignored. In order to provide a speed bonus on vehicles subject to the GHG *VSL*, the *Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711)* on page 68 or *Max limit for cruise control vehicle speed (N504)* on page 49 must be lower than *Standard Maximum Speed Limit (LSL) (N718)* on page 69.

The six parameters which control the bonus, expected, and penalty thresholds of fuel economy and idle time evaluations are configurable using ONLY the *PVP* interface, and the default values listed in Programmable Parameters will be applied automatically during the ordering process. As the engine progresses in mileage or changes duty-cycles, these parameters may be altered to more appropriately fit the engine's expected behavior.

Enable the Driver reward speed limiter functionality. (S615)

This setting is used to enable Driver Reward speed limiter functionality. This setting must be enabled first before the other Driver Reward functions can be enabled and/or changed.



NOTE

This parameter is for MX engines only.

Table 20: Enable the Driver reward speed limiter functionality. (S615)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S615 | NONE | NONE | ON | FLAG |

Maximum Vehicle Speed Bonus 1 (N618)

This setting controls the maximum speed bonus that can be applied through the Driver Reward system.



NOTE

This parameter is for MX engines only.

Table 21: Maximum Vehicle Speed Bonus 1 (N618)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N618 | 5 | 0 | 10 | MPH |

Maximum Vehicle Speed Penalty 1 (N621)

This setting controls the maximum speed penalty that can be applied through the Driver Reward system.



NOTE

This parameter is for MX engines only.

Table 22: Maximum Vehicle Speed Penalty 1 (N621)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N621 | -5 | -10 | 0 | MPH |

Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter (S624)

This setting enables the Driver Reward system to use fuel efficiency as a control for increasing or decreasing maximum vehicle speed.



NOTE

This parameter is for MX engines only.

Table 23: Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter (S624)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S624 | Disabled | Disabled | Enabled | FLAG |

Fuel consumption threshold for BONUS driver reward state (N625)

This setting controls the minimum mpg the vehicle must have before the Driver Reward system can increase the vehicle's maximum speed.



NOTE

The [Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter \(S624\)](#) on page 38 setting must be enabled for this setting to be used.



NOTE

This parameter is for MX engines only.

Table 24: Fuel consumption threshold for BONUS driver reward state (N625)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N625 | 6.49 | 0 | 63 | MPG |

Fuel consumption threshold for EXPECTED driver reward state (N626)

This setting controls the expected mpg of the vehicle for the Driver Reward system.



NOTE

The [Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter \(S624\)](#) on page 38 setting must be enabled for this setting to be used.



NOTE

This parameter is for MX engines only.

Table 25: Fuel consumption threshold for EXPECTED driver reward state (N626)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N626 | 6 | 0 | 63 | MPG |

Fuel consumption threshold for PENALTY driver reward state (N627)

This setting controls the mpg the vehicle must drop below before the Driver Reward system can decrease the vehicle's maximum speed.



NOTE

The [Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter \(S624\)](#) on page 38 setting must be enabled for this setting to be used.



NOTE

This parameter is for MX engines only.

Table 26: Fuel consumption threshold for PENALTY driver reward state (N627)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N627 | 5.5 | 0 | 63 | MPG |

Enable the Vehicle Idle Time Percentage (S628)

This setting enables the Driver Reward system to use the percentage of vehicle idle time as a control for increasing or decreasing maximum vehicle speed.



NOTE

This parameter is for MX engines only.

Table 27: Enable the Vehicle Idle Time Percentage (S628)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S628 | None | None | Enabled | FLAG |

Idle percentage threshold for BONUS driver reward state (N629)

This setting controls the percentage of idle time the vehicle must be below before the Driver Reward system can increase the vehicle's maximum speed.



NOTE

The [Enable the Vehicle Idle Time Percentage \(S628\)](#) on page 40 setting must be enabled for this setting to be used.



NOTE

This parameter is for MX engines only.

Table 28: Idle percentage threshold for BONUS driver reward state (N629)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N629 | 5.00 | 0 | 100 | % |

Idle percentage threshold for EXPECTED driver reward state (N630)

This setting controls the expected percentage of idle time of the vehicle for the Driver Reward system.



NOTE

The [Enable the Vehicle Idle Time Percentage \(S628\)](#) on page 40 setting must be enabled for this setting to be used.



NOTE

This parameter is for MX engines only.

Table 29: Idle percentage threshold for EXPECTED driver reward state (N630)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N630 | 10.00 | 0 | 100 | % |

Idle percentage threshold for PENALTY driver reward state (N631)

This setting controls the percentage of idle time the vehicle must be above before the Driver Reward system can decrease the vehicle's maximum speed.



NOTE

The [Enable the Vehicle Idle Time Percentage \(S628\)](#) on page 40 setting must be enabled for this setting to be used.



NOTE

This parameter is for MX engines only.

Table 30: Idle percentage threshold for PENALTY driver reward state (N631)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N631 | 15.00 | 0 | 100 | % |

Offset Mode (N632)

This setting controls whether the bonuses and penalties from the Driver Reward system apply to driving using pedals, cruise control, or both.

The possible values for this setting are:

NONE - No Reward

PEDAL - Pedal

CRUZ - Cruise

BOTH - Both

Table 31: Offset Mode (N632)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N632 | BOTH | NONE | BOTH | DISCRETE |

Chapter 8 | DRIVER SHIFT AID

Driver Shift Aid 44

Enables driver shift aid functionality (S636) 44

Min Vehicle Speed for Driver Shift Aid Active (N637) 44

Highest transmission gear ratio that DSA will be active(Lowest Gear) (N638) 44

Lowest transmission gear ratio that DSA will be active(Highest Gear) (N639) 45

Trans gear ratio (S642) 45

Driver Shift Aid

Driver Shift Aid (DSA) helps reduce engine fuel consumption by informing the driver to upshift in order to reduce engine speed. It provides visual notifications through the driver display, encouraging the operator to perform upshifts at predefined engine speeds. *DSA* is compatible with vehicles equipped with manual transmissions or automatic transmissions operating in manual mode.

Enables driver shift aid functionality (S636)

This setting enables *DSA* functionality.



NOTE

This parameter is for MX engines only.

Table 32: Enables driver shift aid functionality (S636)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S636 | NONE | NONE | ON | FLAG |

Min Vehicle Speed for Driver Shift Aid Active (N637)

This setting controls the minimum vehicle speed needed to enable *DSA*. *DSA* will not activate unless the vehicle is traveling at or above the speed entered in this option.



NOTE

This parameter is for MX engines only.

Table 33: Min Vehicle Speed for Driver Shift Aid Active (N637)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N637 | 3.11 | 0 | 124.27 | MPH |

Highest transmission gear ratio that DSA will be active(Lowest Gear) (N638)

This setting indicates the lowest transmission gear available to maintain active *DSA*. If the current gear is lower than the entry in in this setting, then *DSA* is not active.

**NOTE**

This parameter is for MX engines only.

Table 34: Highest transmission gear ratio that DSA will be active(Lowest Gear) (N638)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N638 | 10 | 1 | 30 | DISCRETE |

Lowest transmission gear ratio that DSA will be active(Highest Gear) (N639)

This setting indicates the highest transmission gear available to maintain active [DSA](#). If the current gear is higher than the entry in this setting, then DSA is not active.

**NOTE**

This parameter is for MX engines only.

Table 35: Lowest transmission gear ratio that DSA will be active(Highest Gear) (N639)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N639 | 1 | 1 | 30 | DISCRETE |

Trans gear ratio (S642)

This setting determines the gear number for the vehicle's top gear. For example, on trucks with 16 gear speeds this would be the 16th gear, while on trucks with 10 speeds this would be the 10th gear.

**NOTE**

This parameter is for MX engines only.

Table 36: Trans gear ratio (S642)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S642 | 1 | 1 | 18 | GEAR |

Chapter 9 | CRUISE CONTROL

| | |
|---|----|
| Cruise Control (CC) | 48 |
| Decrement step for brief operation of switch (N502) | 48 |
| Increment step for brief operation of switch (N503) | 49 |
| Max limit for cruise control vehicle speed (N504) | 49 |
| Offset to enable cruise control (N506) | 50 |
| Enable the Dynamic Cruise Control function. (N509) | 50 |
| Large decrement step for the cruise target speed when the km/h - mph switch is set to km/h. (N510) | 50 |
| Large increment step for the cruise target speed when the km/h - mph switch is set to km/h. (N511) | 51 |
| Enable or disable the corrective braking functionality. (N512) | 51 |
| Engine brake uninterrupted if cruise control is 'set' while engine brakes are active (N923) | 52 |

Cruise Control (CC)

The **Cruise Control (CC)** feature allows the operator to set and maintain a target vehicle speed, as well as adjust it when necessary, within programmable limits. This allows the driver to keep the vehicle at a constant vehicle speed, but still easily adapt to changing vehicle speed requirements. The **CC** module also allows a fleet owner to set preprogrammed limits in order to enhance overall operating economy.



NOTE

CC is a standard feature of the engine, and the default **CC** settings are useful for a majority of applications. Before changing the default parameters, it is strongly recommended to consult the customer and/or body builder to review the **CC** options.

CC is controlled using the:

- ON/OFF switch.
- Set/Accel switch.
- Resume/Decel switch.

The ON/OFF switch is used to activate and deactivate **CC**. When the switch is in the ON position, the operator can use the Set/Accel switch and Resume/Decel switch to control **CC** functions. When the switch is in the OFF position, **CC** is deactivated and the engine does not automatically maintain an operator-desired vehicle speed.

When **CC** is on, the Set/Accel switch allows the operator to activate **CC** and assign the current vehicle speed as the Cruise Control target speed. While **CC** is active, the operator is free from having to control the vehicle speed using the accelerator pedal. While **CC** is actively controlling vehicle speed, the Set Accel switch can be used two ways:

1. Briefly pressing the Set/Accel switch will cause the vehicle speed to increase by the value in the *Increment step for brief operation of switch (N503)* on page 49 setting.
2. Pressing and holding the Set/Accel switch accelerates vehicle speed until the switch is released or the speed entered in the *Max limit for cruise control vehicle speed (N504)* on page 49 setting is reached.

When **CC** is on, the Resume/Decel switch allows the operator to activate **CC** and resume maintaining a previously set vehicle cruise speed. The stored target vehicle speed is reset with an ignition key cycle. While **CC** is actively controlling vehicle speed, the Set/Resume switch can be used two ways:

1. Briefly pressing the Resume/Decel switch will cause the vehicle speed to decrease by the value in the *Decrement step for brief operation of switch (N502)* on page 48 setting.
2. Pressing and holding Resume/Decel switch decreases vehicle speed until the switch is released or the speed entered in the *Offset to enable cruise control (N506)* on page 50 setting is reached.

Decrement step for brief operation of switch (N502)

This setting controls the amount vehicle speed is decreased during **CC** mode when the Resume/Decel switch is briefly pressed.

**NOTE**

Pressing and holding the Resume/Decel switch reduces vehicle speed by the amount entered in [Large decrement step for the cruise target speed when the km/h - mph switch is set to km/h. \(N510\)](#) on page 50 .

**NOTE**

This parameter is for MX engines only.

Table 37: Decrement step for brief operation of switch (N502)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N502 | 1 | .62 | 6.21 | MPH |

Increment step for brief operation of switch (N503)

This setting controls the amount vehicle speed is increased during **CC** mode when the Set/Accel switch is briefly pressed.

**NOTE**

Pressing and holding the Set/Accel switch increases vehicle speed by the amount entered in [Large increment step for the cruise target speed when the km/h - mph switch is set to km/h. \(N511\)](#) on page 51 .

**NOTE**

This parameter is for MX engines only.

Table 38: Increment step for brief operation of switch (N503)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N503 | 1 | .62 | 6.21 | MPH |

Max limit for cruise control vehicle speed (N504)

This setting controls the maximum vehicle speed available during **CC** mode.

**NOTE**

For vehicles with Cummins engine, the default value for this setting is 100.04 mph.

**NOTE**

This setting cannot be higher than the maximum vehicle speed.

Table 39: Max limit for cruise control vehicle speed (N504)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N504 | 64 | 24.85 | 100.04 | MPH |

Offset to enable cruise control (N506)

This setting controls the minimum speed required to activate **CC**. If the vehicle is not traveling at or above this speed, then CC mode cannot be activated.



NOTE

This parameter is for MX engines only.

Table 40: Offset to enable cruise control (N506)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N506 | 10 | 10 | 40.39 | MPH |

Enable the Dynamic Cruise Control function. (N509)

This setting is used to enable *Dynamic Cruise Control (DCC)*. DCC allows the vehicle to adjust cruising speed based on other vehicles on the road and to maintain a safe distance from vehicles ahead.



NOTE

This parameter is for MX engines only.

Table 41: Enable the Dynamic Cruise Control function. (N509)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N509 | OFF | OFF | ON | FLAG |

Large decrement step for the cruise target speed when the km/h - mph switch is set to km/h. (N510)

This setting controls the amount vehicle speed is decreased during **CC** mode when the Resume/Decel switch is pressed and held.



NOTE

Briefly pressing the Resume/Decel switch reduces vehicle speed by the amount entered in [Decrement step for brief operation of switch \(N502\)](#) on page 48 .



NOTE

This parameter is for MX engines only.

Table 42: Large decrement step for the cruise target speed when the km/h - mph switch is set to km/h. (N510)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N510 | 1 | 0 | 6.21 | MPH |

Large increment step for the cruise target speed when the km/h - mph switch is set to km/h. (N511)

This setting controls the amount vehicle speed is increased during [CC](#) mode when the Set/Accel switch is pressed and held.



NOTE

Briefly pressing the Set/Accel switch increases vehicle speed by the amount entered in [Increment step for brief operation of switch \(N503\)](#) on page 49 .



NOTE

This parameter is for MX engines only.

Table 43: Large increment step for the cruise target speed when the km/h - mph switch is set to km/h. (N511)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N511 | 2 | 0 | 6.21 | MPH |

Enable or disable the corrective braking functionality. (N512)

This setting controls whether corrective braking functionality is enabled during [CC](#) mode.



NOTE

This parameter is for MX engines only.

Table 44: Enable or disable the corrective braking functionality. (N512)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N512 | Disable | Disable | Enable | FLAG |

Engine brake uninterrupted if cruise control is 'set' while engine brakes are active (N923)

This setting determines whether the engine brake is interrupted if the vehicle's cruise control setting is on and a cruise speed is set.

Table 45: Engine brake uninterrupted if cruise control is 'set' while engine brakes are active. (N923)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N923 | 1 | 0 | 1 | FLAG |

Chapter 10 | ENGINE RETARDER CONTROL

PACCAR Engine Brake 54

DSL target vehicle speed offset (N870) 55

(Auto-Retarder) Target Vehicle Speed Offset (N871) 55

Delay time (in seconds) before the engine brakes become active when engaged by the driver
(N874) 56

Retarder mode when cruise control switch on but not active (S875) 56

PACCAR Engine Brake

The PACCAR Engine Brake is a fully integrated engine compression brake that provides braking forces through the driveline. It reduces wear on the service brakes and improves vehicle control in deceleration events when active. The PACCAR Engine Brake operates using standard dash switches, and is customizable to meet the requirements of the driver or fleet.

Standard Feature

- PACCAR Engine Brake ON/OFF Switch
- Retarder Select Switch
- Manual Mode (both with **CC** turned ON and OFF)

The PACCAR Engine Brake ON/OFF switch allows the driver to turn retarder ON and OFF.

The default setting for the PACCAR Engine Brake is Manual Mode. Manual Mode allows the engine to provide braking when the PACCAR Engine Brake switch is in the ON position, the engine is not being fueled, and the **CC** is inactive. The driver may use the Retarder Select Switch to select from three levels of braking power: Low (33%), Medium (66%), and High (100%).

When the PACCAR Engine Brake switch is in the ON position, the driver will be notified by an indicator on the driver display.

Feature Options

- Engine Brake Engagement Delay
- Minimum Vehicle Speed to Enable Engine Brake
- Engine Brake Disable when Out of Gear
- Engine Brake Behavior When **CC** is ON:
 - Manual Mode
 - Coast Mode
 - Latch Mode
- *Downhill Speed Control (DSC)* (Auto-Retard in **CC**)
- *Downhill Speed Limiter (DSL)*

The customer has the option to select from three operating modes for the PACCAR Engine Brake when the PACCAR Engine Brake ON/OFF switch is ON and **CC** is ON and inactive. The three operating modes are mutually exclusive of one another:

- Manual Mode is the default setting for the PACCAR Engine Brake when the PACCAR Engine Brake ON/OFF switch is ON and **CC** is ON and inactive. It behaves the same way as the Manual Mode described in Standard Features portion of this section.
- Coast Mode allows the engine to provide braking when the PACCAR Engine Brake ON/OFF switch is ON, the **CC** is ON and inactive, and the service brake is applied. The PACCAR Engine Brake will deactivate in Coast Mode when the service brake pedal is released or **CC** is activated.
- Latch Mode allows the engine to provide braking when the PACCAR Engine Brake ON/OFF switch is ON, **CC** is ON and inactive, and the service brake pedal is applied. Latch Mode will continue to provide braking after the service brake pedal is released and will deactivate when the accelerator pedal is applied or **CC** is activated.

The engine can be programmed to delay the activation of the engine brake, if needed, using *Delay time (in seconds) before the engine brakes become active when engaged by the driver (N874)* on

page 56 . For example, the driver may wish to deactivate **CC** by quickly pressing the brake pedal without activating the engine brake when using Coast or Latch mode. Specifying a delay would allow this to occur, but still provide engine braking when the driver presses the brake pedal for a prolonged period during a braking event.

DSC allows the engine to provide braking when the PACCAR Engine Brake ON/OFF switch is ON, **CC** is active and the vehicle speed exceeds the **CC** target speed plus the **(Auto-Retarder) Target Vehicle Speed Offset (N871)** on page 55 . A large offset will reduce engine brake usage, while a lower offset will increase engine brake usage. A lower offset is recommended for vehicles operating in steep terrain. **DSC** will deactivate when the vehicle speed has been reduced to the **CC** target speed or when **CC** is deactivated. **DSC** will function independently of all other PACCAR Engine Brake parameters.

The **DSL** allows the engine to provide braking when the PACCAR Engine Brake ON/OFF switch is ON and the vehicle speed exceeds the **Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711)** on page 68 plus the **DSL target vehicle speed offset (N870)** on page 55 . The **DSL** will function independently of all other PACCAR Engine Brake parameters.

In Manual Mode, the **DSL** will activate if the vehicle speed exceeds the **Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711)** on page 68 plus the **DSL target vehicle speed offset (N870)** on page 55 . If the **DSL** is already active, the PACCAR Engine Brake power will be increased, but if the **DSL** is already at maximum capacity, the **DSL** will have no effect on the PACCAR Engine Brake. The **DSL** will automatically deactivate when the vehicle speed has been reduced to the **Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711)** on page 68 .

DSL target vehicle speed offset (N870)

This settings controls the vehicle offset speed for the **DSL** system.



NOTE

This parameter is for MX engines only.

Table 46: DSL target vehicle speed offset (N870)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N870 | 4.04 | 1.86 | 6.21 | MPH |

(Auto-Retarder) Target Vehicle Speed Offset (N871)

This setting controls the vehicle offset speed for the **DSC** system.



NOTE

This parameter is for MX engines only.

Table 47: (Auto-Retarder) Target Vehicle Speed Offset (N871)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N871 | 2.02 | 1.86 | 6.21 | MPH |

Delay time (in seconds) before the engine brakes become active when engaged by the driver (N874)

This setting controls the time delay from when the driver engages the engine brakes and when the brakes activate.



NOTE

This parameter is for MX engines only.

Table 48: Delay time (in seconds) before the engine brakes become active when engaged by the driver (N874)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N874 | 0.1 | 0.1 | 3 | SEC |

Retarder mode when cruise control switch on but not active (S875)

This setting controls the retarder mode type when cruise control is turned on but not being actively used.

The possible values for this setting are:

- 0 - Manual Retarder Control
- 1 - Coast Retarder Mode
- 2 - Latch Retarder Mode



NOTE

This parameter is for MX engines only.

Table 49: Retarder mode when cruise control switch on but not active (S875)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S875 | 0 | 0 | 2 | DISCRETE |

Chapter 11 | ENGINE IDLE SHUTDOWN TIMER

| | |
|---|----|
| Engine Idle Shutdown Timer (EIST) | 58 |
| EIST Enable Park brake reset (N681) | 58 |
| Enable Engine Idle Shutdown Timer (S682) | 58 |
| Enable Air temperature idle timer override (S683) | 59 |
| Engine load above which the idle timer will reset (N685) | 59 |
| Ambient temp above which the idle timer will be overridden (N686) | 59 |
| Ambient temp below which the idle timer will be overridden (N687) | 60 |
| Idle time in PTO mode (N688) | 60 |
| Idle time with park brake set (N689) | 61 |
| Idle time with park brake not set (N690) | 61 |
| Enable EIST in PTO mode (S691) | 61 |
| Enable engine load as idle time reset condition (N692) | 62 |
| Enable engine load as idle timer overrule condition (N693) | 62 |
| Enable EIST timer when the parking brake is not set (N694) | 63 |
| Time remaining to shutdown from the moment of EIST warning (N696) | 63 |
| Enable accelerator position as timer reset condition (N699) | 64 |
| Enable foot brake position as timer reset condition (N700) | 64 |
| Enable clutch pedal position as timer reset condition (N701) | 64 |
| Enables to overrule EIST to recharge vehicle batteries (S703) | 65 |
| Enable EIST park brake timer (N705) | 65 |
| Enable Override Conditions In PTO Mode (N702) | 66 |
| Resets EIST on PTO change (N704) | 66 |

Engine Idle Shutdown Timer (EIST)

The [Engine Idle Shutdown Timer \(EIST\)](#) allows fleet owners to impose limits on engine idling time for MX-powered vehicles. EIST initiates when engine speed is at idle, the vehicle is stationary, and the accelerator pedal is motionless or not depressed. EIST has several customizable options to meet the needs of any application, including:

- Overruling EIST by fuel, engine coolant, and/or oil temperatures, allowing uninterrupted engine warm-up intervals.
- Overruling EIST during low battery voltage, allowing uninterrupted battery recharging.
- Separate timer intervals depending on if the parking brake is engaged or not.
- Separate timer intervals during, or completely disabling EIST, while engine is in [PTO](#) mode.

EIST Enable Park brake reset (N681)

This setting enables using the parking brake as a reset timer for [EIST](#). If this setting is enabled, using the parking brake will delay engine shutdown by the amount of time entered in [Time remaining to shutdown from the moment of EIST warning \(N696\)](#) on page 63 .



NOTE

This parameter is for MX engines only.

Table 50: EIST Enable Park brake reset (N681)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N681 | ON | OFF | ON | FLAG |

Enable Engine Idle Shutdown Timer (S682)

This setting is used to enable [EIST](#).



NOTE

This parameter is for MX engines only.

Table 51: Enable Engine Idle Shutdown Timer (S682)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S682 | ENABLED | DISABLED | ENABLED | FLAG |

Enable Air temperature idle timer override (S683)

This setting is used to enable the air temp idle timer override for *EIST*. When enabled, the engine will continue operation whenever the air temperature is above the setting in *Ambient temp above which the idle timer will be overridden (N686)* on page 59 or below the setting in *Ambient temp below which the idle timer will be overridden (N687)* on page 60 .



NOTE

This parameter is for MX engines only.

Table 52: Enable Air temperature idle timer override (S683)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S683 | NONE | NONE | ENABLE | FLAG |

Engine load above which the idle timer will reset (N685)

This setting is used to determine the maximum engine load that can be put on the engine during *EIST*. If the engine load exceeds the value entered in this setting, then the engine idle timer will either reset if *Enable engine load as idle time reset condition (N692)* on page 62 is enabled, or *EIST* will be overridden if *Enable engine load as idle timer overrule condition (N693)* on page 62 is enabled.



NOTE

This parameter is for MX engines only.

Table 53: Engine load above which the idle timer will reset (N685)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N685 | 664 | 0 | 1903 | LB-FT |

Ambient temp above which the idle timer will be overridden (N686)

This setting is used to set the maximum ambient air temperature needed to override *EIST*. If the *Enable Air temperature idle timer override (S683)* on page 59 setting is enabled, then the *EIST* is overridden whenever the ambient air temperature is above the value entered in this setting.



NOTE

The value entered in this setting must be above the value entered in *Ambient temp below which the idle timer will be overridden (N687)* on page 60 .

**NOTE**

This parameter is for MX engines only.

Table 54: Ambient temp above which the idle timer will be overridden (N686)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|------------|
| N686 | 80.3 | -40.3 | 490.7 | FAHRENHEIT |

Ambient temp below which the idle timer will be overridden (N687)

This setting is used to set the minimum ambient air temperature needed to override *EIST*. If the *Enable Air temperature idle timer override (S683)* on page 59 setting is enabled, then the EIST is overridden whenever the ambient air temperature is below the value entered in this setting.

**NOTE**

The value entered in this setting must be below the value entered in *Ambient temp above which the idle timer will be overridden (N686)* on page 59 .

**NOTE**

This parameter is for MX engines only.

Table 55: Ambient temp below which the idle timer will be overridden (N687)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|------------|
| N687 | 38.9 | -40.3 | 490.7 | FAHRENHEIT |

Idle time in PTO mode (N688)

This setting controls the maximum engine idle time when the vehicle is in *PTO* Mode.

**NOTE**

This parameter is for MX engines only.

Table 56: Idle time in PTO mode (N688)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N688 | 5 | 1 | 1092 | MINUTE |

Idle time with park brake set (N689)

This setting controls the maximum time engine idle time when the vehicle is in *EIST* mode and the parking brake is set.



NOTE

This parameter is for MX engines only.

Table 57: Idle time with park brake set (N689)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N689 | 5 | 1 | 1092 | MINUTE |

Idle time with park brake not set (N690)

This setting controls the maximum time engine idle time when the vehicle is in *EIST* mode and the parking brake is not set.



NOTE

The *Enable EIST timer when the parking brake is not set (N694)* on page 63 setting must be enabled to allow engine idle operation when the parking brake is not set.



NOTE

This parameter is for MX engines only.

Table 58: Idle time with park brake not set (N690)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N690 | 5 | 1 | 1092 | MINUTE |

Enable EIST in PTO mode (S691)

This setting is used to enable *EIST* during *PTO* mode. If this setting is enabled, then EIST can be activated while the vehicle is in PTO mode.



NOTE

This parameter is for MX engines only.

Table 59: Enable EIST in PTO mode (S691)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S691 | NONE | NONE | ENABLE | FLAG |

Enable engine load as idle time reset condition (N692)

This setting enables using the engine load as a reset timer for *EIST*. When this setting is enabled, engine load requirements that exceed the value entered in *Engine load above which the idle timer will reset (N685)* on page 59 while EIST is active, then engine shutdown is delayed by the amount of time entered in Set Time to Engine Shutdown After EIST Warning.



NOTE

If the *Enable engine load as idle timer overrule condition (N693)* on page 62 setting is enabled, then this setting must be disabled.



NOTE

This parameter is for MX engines only.

Table 60: Enable engine load as idle time reset condition (N692)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N692 | Enabled | Disabled | Enabled | FLAG |

Enable engine load as idle timer overrule condition (N693)

This setting is used to override *EIST* if the load on the engine exceeds the value entered in the *Engine load above which the idle timer will reset (N685)* on page 59 setting.



NOTE

If the *Enable engine load as idle time reset condition (N692)* on page 62 setting is enabled, then this setting must be disabled.



NOTE

This parameter is for MX engines only.

Table 61: Enable engine load as idle timer overrule condition (N693)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N693 | Disabled | Disabled | Enabled | FLAG |

Enable EIST timer when the parking brake is not set (N694)

This setting is used to enable *EIST* when the parking brake is not set. If this setting is enabled, then EIST mode can be activated when the parking brake is not set. Otherwise, the parking brake must be set for EIST mode to be activated.



NOTE

This parameter is for MX engines only.

Table 62: Enable EIST timer when the parking brake is not set (N694)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N694 | Enabled | Disabled | Enabled | FLAG |

Time remaining to shutdown from the moment of EIST warning (N696)

This setting is used to set how long after an *EIST* shutdown warning message is displayed before the engine shuts down. When a shutdown warning message is sent from EIST, the engine will continue operating for the amount of time entered in this setting unless an EIST override occurs.

For example, if the value entered in this setting is '60,' then the engine will shut down 60 seconds (1 minute) after a shutdown warning timer begins. If an EIST override occurs during this time, then the time entered in Set Additional Time Before Shutdown After EIST Override is added to the overall time before the engine shuts down.

The following settings are used to control the available shutdown override options:

- *Enable accelerator position as timer reset condition (N699)* on page 64
- *Enable clutch pedal position as timer reset condition (N701)* on page 64
- *Enable engine load as idle time reset condition (N692)* on page 62
- *Enable foot brake position as timer reset condition (N700)* on page 64
- *EIST Enable Park brake reset (N681)* on page 58



NOTE

This parameter is for MX engines only.

Table 63: Time remaining to shutdown from the moment of EIST warning (N696)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N696 | 60 | 30 | 255 | SEC |

Enable accelerator position as timer reset condition (N699)

This setting enables using the accelerator pedal as a reset timer for *EIST*. If this setting is enabled, depressing the accelerator pedal will delay engine shutdown by the amount of time entered in *Time remaining to shutdown from the moment of EIST warning (N696)* on page 63 .



NOTE

This parameter is for MX engines only.

Table 64: Enable accelerator position as timer reset condition (N699)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N699 | Enabled | Disabled | Enabled | FLAG |

Enable foot brake position as timer reset condition (N700)

This setting enables using the foot brake as a reset timer for *EIST*. If this setting is enabled, depressing the foot brake will delay engine shutdown by the amount of time entered in *Time remaining to shutdown from the moment of EIST warning (N696)* on page 63 .



NOTE

This parameter is for MX engines only.

Table 65: Enable foot brake position as timer reset condition (N700)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N700 | Enabled | Disabled | Enabled | FLAG |

Enable clutch pedal position as timer reset condition (N701)

This setting enables using the clutch pedal as a reset timer for *EIST*. If this setting is enabled, depressing the clutch pedal will delay engine shutdown by the amount of time entered in *Time remaining to shutdown from the moment of EIST warning (N696)* on page 63 .



NOTE

This parameter is for MX engines only.

Table 66: Enable clutch pedal position as timer reset condition (N701)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N701 | Enabled | Disabled | Enabled | FLAG |

Enables to overrule EIST to recharge vehicle batteries (S703)

This setting allows *EIST* to be overridden when the vehicle's batteries need to be recharged. When enabled, if the vehicle is in engine idle mode and the vehicle's batteries have a low level of charge, the vehicle will stay idling to help recharge the batteries.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 67: Enables to overrule EIST to recharge vehicle batteries

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S703 | NONE | NONE | ON | FLAG |

Enable EIST park brake timer (N705)

This setting enables the parking brake to be used to start the *EIST* timer. When enabled, activating the parking brake activates the EIST timer.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 68: Enable EIST park brake timer (N705)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N705 | Enabled | Disabled | Enabled | FLAG |

Enable Override Conditions In PTO Mode (N702)

This setting is used to allow *EIST* overrides during *PTO* mode. When this setting is enabled, any valid override settings that are enabled on the truck will override EIST while the vehicle is in PTO Mode.



NOTE

The *Enable engine load as idle timer overrule condition (N693)* on page 62 override setting is not available with EIST when the vehicle is in PTO Mode.

Table 69: Enable Override Conditions In PTO Mode (N702)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N702 | Enabled | Disabled | Enabled | FLAG |

Resets EIST on PTO change (N704)

This setting controls whether *EIST* resets when the vehicle either enters into or leaves *PTO* Mode.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 70: Resets EIST on PTO change (N704)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|-----------------|---------------|-----------------|-----------|
| N704 | NON GHG CHASSIS | GHG CHASSIS | NON GHG CHASSIS | FLAG |

Chapter 12 | VEHICLE SPEED LIMITER - SSL/GHG

Vehicle Speed Limiter (VSL) 68

Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711) 68

Standard Maximum Speed Limit (LSL) (N718) 68

Vehicle Speed Limiter (VSL)

The [VSL](#) is designed to improve fuel economy by reducing the maximum vehicle speed.

Standard Feature

- Without [VSL](#)

The speed of the vehicle will be limited to the maximum value of [Maximum Accelerator Pedal Vehicle Speed \(Vmax, non-GHG\) \(N711\)](#) on page 68 or [Max limit for cruise control vehicle speed \(N504\)](#) on page 49 .

Feature Options

- [VSL](#)

On Greenhouse Gas (GHG) compliant vehicles, [Standard Maximum Speed Limit \(LSL\) \(N718\)](#) on page 68 will limit the overall maximum speed of the vehicle. For example, if [Maximum Accelerator Pedal Vehicle Speed \(Vmax, non-GHG\) \(N711\)](#) on page 68 is set to 55 mph, [Max limit for cruise control vehicle speed \(N504\)](#) on page 49 is set to 70 mph, and [Standard Maximum Speed Limit \(LSL\) \(N718\)](#) on page 68 is set to 64 mph, the vehicle can be driven to a maximum speed of 55 mph with the pedal. If [CC](#) is enabled the vehicle speed may be increased to a maximum of 64 mph, as the vehicle will not exceed the value of [Standard Maximum Speed Limit \(LSL\) \(N718\)](#) on page 68 when the engine is fueled.

For non-GHG compliant vehicles, [Standard Maximum Speed Limit \(LSL\) \(N718\)](#) on page 68 is ignored, allowing [Maximum Accelerator Pedal Vehicle Speed \(Vmax, non-GHG\) \(N711\)](#) on page 68 and [Max limit for cruise control vehicle speed \(N504\)](#) on page 49 to determine the overall maximum speed of the vehicle.

Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711)

This setting controls the top vehicle speed using the accelerator pedal. When driving using the accelerator pedal, the vehicle will not go faster than the speed entered in this setting.



NOTE

For vehicles with Cummins engine, the default setting for this value is 155.34 mph.

Table 71: Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N711 | 64 | 24.85 | 155.34 | MPH |

Standard Maximum Speed Limit (LSL) (N718)

This setting controls the [Legal Speed Limit \(LSL\)](#). The LSL is the vehicle's normal maximum speed, except in special circumstances, such as speed bonuses received through the Driver Reward system.



NOTE

For vehicles with Cummins engine, the default setting for this value is 155.34 mph.

Table 72: Standard Maximum Speed Limit (LSL) (N718)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N718 | 155.34 | 0 | 155.34 | MPH |

Chapter 13 | VEHICLE ACCELERATION LIMITER - ENABLING AND SETPOINT GEN

Vehicle Acceleration Limiter 72

Scale acceleration target based on customer choice (N750) 72

Vehicle Acceleration Limiter

The vehicle acceleration limiter's [Scale acceleration target based on customer choice \(N750\)](#) on page 72 parameter may be modified from the default setting to increase performance or increase fuel economy. Entering a lower value will decrease the vehicle's acceleration capabilities, while entering a higher value will increase the vehicle's acceleration capabilities over the default setting.

Scale acceleration target based on customer choice (N750)

This setting controls the vehicle acceleration limiter. A number less than 1 decreases throttle response, making the truck slower but increasing fuel economy. Conversely, a number greater than 1 will increase throttle response, resulting in a more 'performance' acceleration mode but decreasing fuel economy.



NOTE

This parameter is for MX engines only.

Table 73: Scale acceleration target based on customer choice (N750)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N750 | 1 | 0.01 | 5 | GAIN |

Chapter 14 | ELECTRIC OVER AIR

| | |
|---|-----|
| Air Solenoids | 74 |
| Multiplexed Solenoid Bank (MSB) System | 74 |
| Multiplex Solenoid Bank (MSB) Functions | 76 |
| EOA Parameter Options | 81 |
| Dump Functions | 91 |
| Lift Axle Functions | 92 |
| Differential Lock Functions | 95 |
| Defines the speed threshold for the work brakes function (N815) | 97 |
| Defines when EOH PTO is installed (N816) | 97 |
| Determines if Suspension Dump is required (N817) | 97 |
| Defines the speed threshold for fifth wheel slide (N820) | 98 |
| Defines the speed threshold for Air Suspension Dump (N821) | 98 |
| Defines the speed threshold for trailer suspension dump function (N822) | 98 |
| Defines the speed threshold for air over inflation function (N823) | 98 |
| Axle Interlock Functions | 99 |
| Boolean KW only parameter to enable single switch control of lift axles (TRACTOR ONLY) (S780) | 100 |
| Determines location of switches and which CAN will deliver control messages (S781) | 101 |
| Defines the high speed threshold for Wheel Differential Lock Center Rear Axle function (N924) . | 101 |
| Defines the high speed threshold for Wheel Differential Lock Dual Rear Axle function (N925) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Front Axle function (N926) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Forward Rear Axle function (N927) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Rear Rear Axle function (N928) | 102 |
| Defines the high speed threshold for Wheel Differential Lock Single Rear Axle function (N929) . | 103 |

Air Solenoids

Air solenoids are the devices that translate the electrical signal into physical change that controls the air pressure in various circuits. The air solenoids are mounted to a [MSB](#) in the frame rail. The solenoids are designed to stack on each other so that they share a common air supply rail which reduces the amount of air lines on the vehicle.

Table 74: Air Solenoid Types

| Type | Description |
|----------------------------------|--|
| Latching (MSB) | Requires a signal voltage to close or open a solenoid. Will remain in position if power is disconnected. |
| Non-latching | Requires 12v to change a valve from its normal position. Will revert back to its normal position if power is disconnected. |

For safety reasons, certain circuits are designed with non-latching type solenoids. Since the [MSB](#) only contains latching solenoids, all non-latching air solenoid functions are not controlled by the [MSB](#). These circuits include but are not limited to Lift Axles, Tag Axle Lock, [Engine Over-speed Air Shutdown \(EOAS\)](#), Inside/Outside Air Intake and [Hill Start Aid \(HSA\)](#).

Multiplexed Solenoid Bank (MSB) System

The [MSB](#) are [Controller Area Network \(CAN\)](#) driven modules mounted either in passenger side frame rail behind the cab, or on the rearward crossmember behind the cab. It communicates to the [Chassis Module Primary \(CMP\)](#) via [Frame CAN \(F-CAN\)](#) to control the multiplexed air solenoids. This reduces the amount of wires needed to run up to 6 air solenoids per bank. The air supply connects directly to the [MSB](#), distributing air to each solenoid.



NOTE

Solenoid functions and positions are assigned through PACCAR Vehicle Pro (PVP), then programmed using [DAVIE4](#).

The Multiplexed Air Solenoids are mounted directly to the [MSB](#). When commanded, the solenoids apply or remove air pressure from its respective circuit. All multiplexed solenoids are latching solenoids, meaning they require signal voltage to open or close a solenoid. The solenoid will remain in position if power is disconnected.

Figure 2: MSB Identification

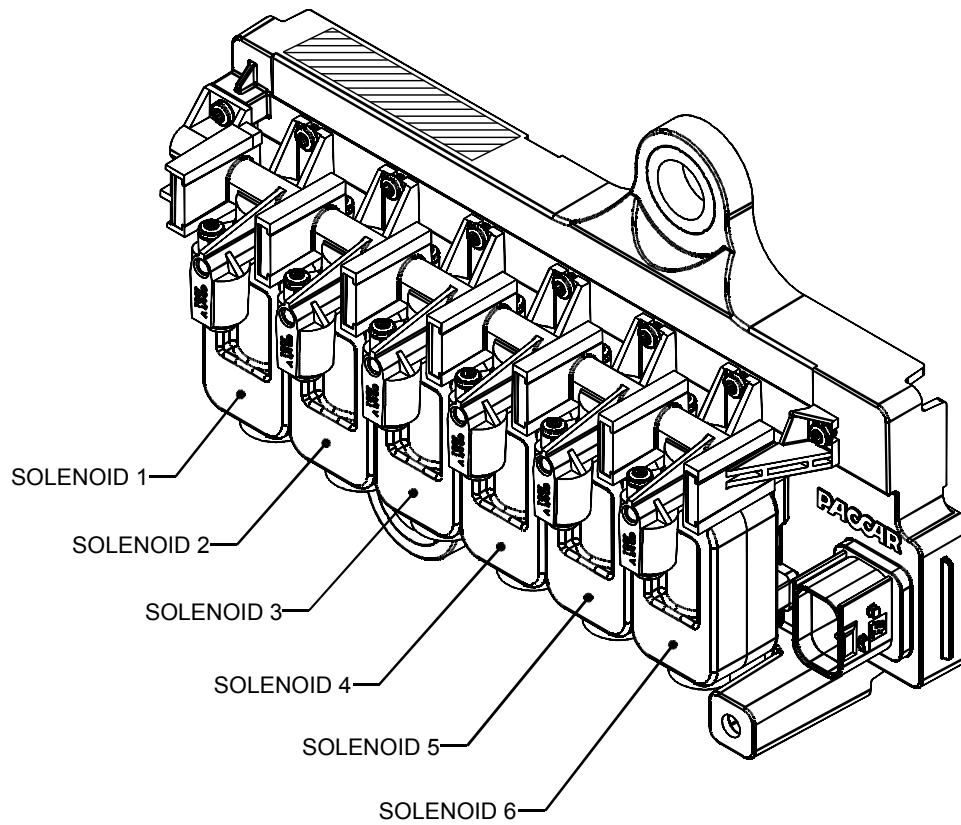


Figure 3: Multiplex Solenoid Bank Architecture


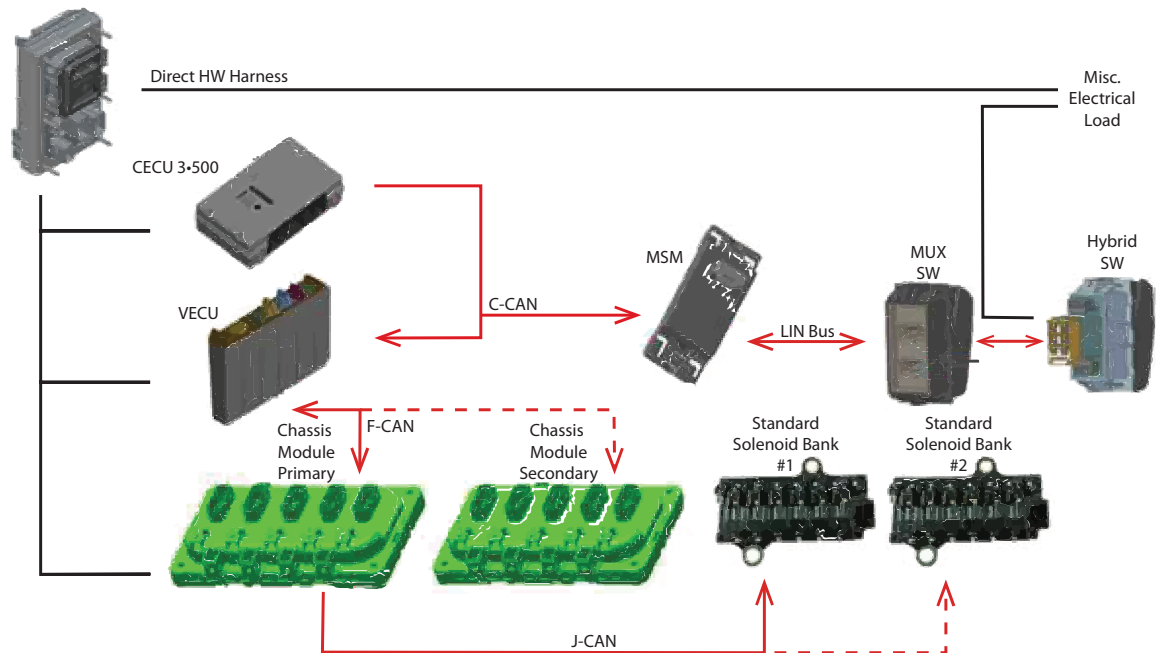


Figure 4: MSB Harness Schematic

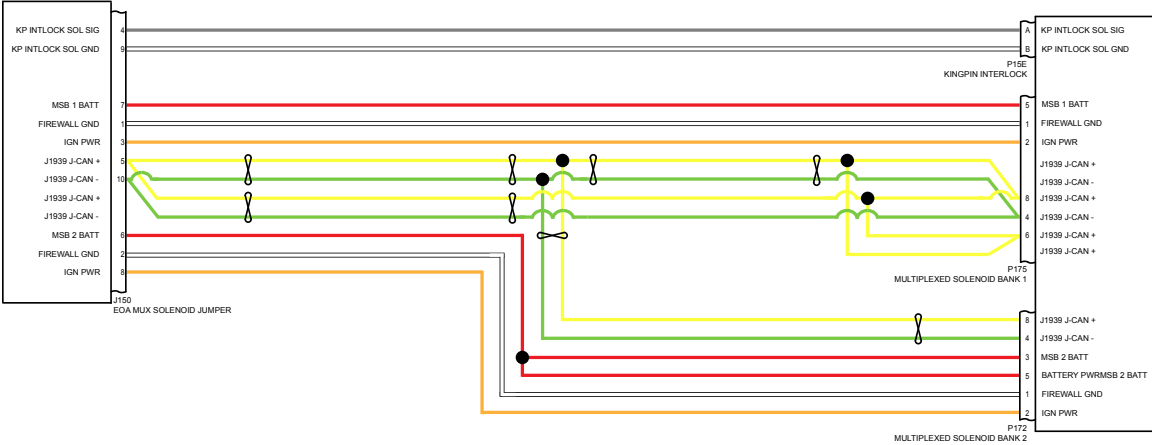

Multiplex Solenoid Bank (MSB) Functions

The following section details the *Electric Over Air (EOA)* parameters related to the *MSB*.

Defines the function assignment for bank 1 valve 1 (N755)

This setting controls what option is assigned to *EOA* function 1. EOA function 1 is located at *MSB* 1, valve 1.

NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

NOTE

See *EOA Parameter Options* on page 81 for the list of options available for this parameter.

Table 75: Defines the function assignment for bank 1 valve 1 (N755)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N755 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 1 valve 2 (N756)

This setting controls what option is assigned to *EOA* function 2. EOA function 2 is located at *MSB* 1, valve 2.

NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

NOTE

See *EOA Parameter Options* on page 81 for the list of options available for this parameter.

Table 76: Defines the function assignment for bank 1 valve 2 (N756)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N756 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 1 valve 3 (N757)

This setting controls what option is assigned to [EOA](#) function 3. EOA function 3 is located at [MSB](#) 1, valve 3.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 77: Defines the function assignment for bank 1 valve 3 (N757)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N757 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 1 valve 4 (N758)

This setting controls what option is assigned to [EOA](#) function 4. EOA function 4 is located at [MSB](#) 1 valve 4.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 78: Defines the function assignment for bank 1 valve 4 (N758)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N758 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 1 valve 5 (N759)

This setting controls what option is assigned to [EOA](#) function 5. EOA function 5 is located at [MSB](#) 1 valve 5.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 79: Defines the function assignment for bank 1 valve 5 (N759)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N759 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 1 valve 6 (N760)

This setting controls what option is assigned to [EOA](#) function 6. EOA function 6 is located at [MSB](#) 1 valve 6.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 80: Defines the function assignment for bank 1 valve 6 (N760)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N760 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 2 valve 1 (N761)

This setting controls what option is assigned to [EOA](#) function 7. EOA function 7 is located at [MSB](#) 2 valve 1.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 81: Defines the function assignment for bank 2 valve 1 (N761)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N761 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 2 valve 2 (N762)

This setting controls what option is assigned to [EOA](#) function 8. EOA function 8 is located at [MSB 2](#) valve 2.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 82: Defines the function assignment for bank 2 valve 2 (N762)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N762 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 2 valve 3 (N763)

This setting controls what option is assigned to [EOA](#) function 9. EOA function 9 is located at [MSB 2](#) valve 3.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 83: Defines the function assignment for bank 2 valve 3 (N763)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N763 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 2 valve 4 (N764)

This setting controls what option is assigned to [EOA](#) function 10. EOA function 10 is located at [MSB 2](#) valve 4.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 84: Defines the function assignment for bank 2 valve 4 (N764)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N764 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 2 valve 5 (N765)

This setting controls what option is assigned to [EOA](#) function 11. EOA function 11 is located at [MSB](#) 2 valve 5.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 85: Defines the function assignment for bank 2 valve 5 (N765)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N765 | 0 | 0 | 103 | DISCRETE |

Defines the function assignment for bank 2 valve 6 (N766)

This setting controls what option is assigned to [EOA](#) function 12. EOA function 12 is located at [MSB](#) 2 valve 6.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

See [EOA Parameter Options](#) on page 81 for the list of options available for this parameter.

Table 86: Defines the function assignment for bank 2 valve 6 (N766)










| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N766 | 0 | 0 | 103 | DISCRETE |














EOA Parameter Options













Kenworth EOA Parameter Options

This table includes the options available for [EOA](#) parameters for Kenworth trucks.

Table 87: EOA Functions








| Function Description | Function Number | Icon |
|---|-----------------|---|
| 2 (Two) Speed Rear Axle | 10 |  |
| 2 (Two) Speed Rear Axle With Park Brake Interlock | 9 |  |
| Air Accessory Control 1 | 62 |  |
| Air Accessory Control 1 With Park Brake Interlock | 63 |  |
| Air Accessory Control 2 | 92 |  |
| Air Accessory Control 2 With Park Brake Interlock | 93 |  |
| Air Accessory Control 3 | 94 |  |
| Air Accessory Control 3 With Park Brake Interlock | 95 |  |
| Air Accessory Control 4 | 96 |  |

| Function Description | Function Number | Icon |
|---|-----------------|---|
| Air Accessory Control 4 With Park Brake Interlock | 97 |  |
| Air Suspension Dump With Park Brake Interlock | 1 |  |
| Air Suspension Dump With Speed Interlock | 2 |  |
| Air Suspension Overinflation With Speed Interlock | 8 |  |
| Auxiliary Transmission 3 (Three) Position Control (High) | 35 |  |
| Auxiliary Transmission 3 (Three) Position Control (Neutral) | 86 |  |
| Auxiliary Transmission 3 (Three) Position Control With Park Brake Interlock (High) | 17 |  |
| Auxiliary Transmission 3 (Three) Position Control With Park Brake Interlock (Neutral) | 87 |  |
| Fifth Wheel Slide With Speed Interlock | 11 |  |
| Front Drive Axle Declutch With Speed Interlock | 12 |  |
| Interaxle <i>Differential lock (Diff lock)</i> With Speed Interlock | 13 |  |
| Kingpin Release With Park Brake Interlock | 14 |  |
| <i>PTO</i> #1 | 37 |  |

| Function Description | Function Number | Icon |
|---|-----------------|---|
| <i>PTO</i> #1 With Park Brake Interlock | 20 |  |
| <i>PTO</i> #2 | 38 |  |
| <i>PTO</i> #2 With Park Brake And <i>PTO</i> #1 Interlock | 79 |  |
| <i>PTO</i> #2 With Park Brake Interlock | 21 |  |
| <i>PTO</i> #2 With <i>PTO</i> #1 Interlock | 80 |  |
| <i>PTO</i> Speed High Low | 91 |  |
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) (Valve 1) | 36 |  |
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) (Valve 2) | 90 |  |
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) With Park Brake Interlock (Valve 1) | 19 |  |
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) With Park Brake Interlock (Valve 2) | 89 |  |
| Rear Axle Declutch With Park Brake Interlock (Valve 1) | 15 |  |
| Rear Axle Declutch With Park Brake Interlock (Valve 2) | 88 |  |

| Function Description | Function Number | Icon |
|--|-----------------|------|
| Trailer Air Suspension Dump With Park Brake Interlock | 4 | |
| Trailer Air Suspension Dump With Speed Interlock | 3 | |
| Trailer Belly Dump Gate (Forward) With Speed Interlock | 24 | |
| Trailer Belly Dump Gate (Rear) With Speed Interlock | 25 | |
| Trailer Dump Gate | 39 | |
| Trailer Dump Gate (Forward) | 41 | |
| Trailer Dump Gate (Rear) | 42 | |
| Trailer Dump Gate With Speed Interlock | 22 | |
| Trailer Lift Axle (Forward) | 6 | |
| Trailer Lift Axle (Rear) | 7 | |
| Trailer Lift Axle (Single) | 5 | |
| Trailer Tow / Pintle Hook | 43 | |
| Transfer Case (Hi/Low) With Speed Interlock | 16 | |
| Truck Dump Gate | 44 | |




| Function Description | Function Number | Icon |
|--|-----------------|---|
| Truck Dump Gate With Speed Interlock | 26 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Ctr Rear) | 47 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Ctr Rear) With Speed Interlock | 29 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Ctr Rear) With Two Speed Interlock | 100 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Dual Rear) | 49 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Dual Rear) With Speed Interlock | 31 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Dual Rear) With Two Speed Interlock | 102 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Front Axle) | 50 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Front Axle) With Speed Interlock | 32 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Front Axle) With Two Speed Interlock | 103 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Fwd Rear) | 46 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Fwd Rear) With Speed Interlock | 28 |  |














| Function Description | Function Number | Icon |
|---|-----------------|---|
| Wheel <i>Differential lock (Diff lock)</i> (Fwd Rear) With Two Speed Interlock | 99 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Rr Rear) | 48 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Rr Rear) With Speed Interlock | 30 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Rr Rear) With Two Speed Interlock | 101 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Single Rear) | 45 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Single Rear) With Speed Interlock | 27 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Single Rear) With Two Speed Interlock | 98 |  |













Peterbilt EOA Parameter Options

This table includes the options available for *EOA* parameters for Peterbilt trucks.

Table 88: EOA Functions



| Function Description | Function Number | Icon |
|---|-----------------|---|
| 2 (Two) Speed Rear Axle | 10 |  |
| 2 (Two) Speed Rear Axle With Park Brake Interlock | 9 |  |
| Air Accessory Control 1 | 62 |  |

| Function Description | Function Number | Icon |
|--|-----------------|---|
| Air Accessory Control 1 With Park Brake Interlock | 63 |  |
| Air Accessory Control 2 | 92 |  |
| Air Accessory Control 2 With Park Brake Interlock | 93 |  |
| Air Accessory Control 3 | 94 |  |
| Air Accessory Control 3 With Park Brake Interlock | 95 |  |
| Air Accessory Control 4 | 96 |  |
| Air Accessory Control 4 With Park Brake Interlock | 97 |  |
| Air Suspension Dump With Park Brake Interlock | 1 |  |
| Air Suspension Dump With Speed Interlock | 2 |  |
| Air Suspension Overinflation With Speed Interlock | 8 |  |
| Auxiliary Transmission 3 (Three) Position Control (High) | 35 |  |
| Auxiliary Transmission 3 (Three) Position Control (Neutral) | 86 |  |
| Auxiliary Transmission 3 (Three) Position Control With Park Brake Interlock (High) | 17 |  |

| Function Description | Function Number | Icon |
|---|-----------------|---|
| Auxiliary Transmission 3 (Three) Position Control With Park Brake Interlock (Neutral) | 87 |  |
| Fifth Wheel Slide With Speed Interlock | 11 |  |
| Front Drive Axle Declutch With Speed Interlock | 12 |  |
| Interaxle <i>Differential lock (Diff lock)</i> With Speed Interlock | 13 |  |
| Kingpin Release With Park Brake Interlock | 14 |  |
| <i>PTO</i> #1 | 37 |  |
| <i>PTO</i> #1 With Park Brake Interlock | 20 |  |
| <i>PTO</i> #2 | 38 |  |
| <i>PTO</i> #2 With Park Brake And <i>PTO</i> #1 Interlock | 79 |  |
| <i>PTO</i> #2 With Park Brake Interlock | 21 |  |
| <i>PTO</i> #2 With <i>PTO</i> #1 Interlock | 80 |  |
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) (Valve 1) | 36 |  |

| Function Description | Function Number | Icon |
|---|-----------------|------|
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) (Valve 2) | 90 | |
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) With Park Brake Interlock (Valve 1) | 19 | |
| <i>PTO</i> 2 (Two) Position (Fwd/Rev) With Park Brake Interlock (Valve 2) | 89 | |
| Trailer Air Suspension Dump With Park Brake Interlock | 4 | |
| Trailer Air Suspension Dump With Speed Interlock | 3 | |
| Transfer Case (Hi/Low) With Speed Interlock | 16 | |
| Wheel <i>Differential lock (Diff lock)</i> (Ctr Rear) | 47 | |
| Wheel <i>Differential lock (Diff lock)</i> (Ctr Rear) With Speed Interlock | 29 | |
| Wheel <i>Differential lock (Diff lock)</i> (Ctr Rear) With Two Speed Interlock | 100 | |
| Wheel <i>Differential lock (Diff lock)</i> (Dual Rear) | 49 | |
| Wheel <i>Differential lock (Diff lock)</i> (Dual Rear) With Speed Interlock | 31 | |
| Wheel <i>Differential lock (Diff lock)</i> (Dual Rear) With Two Speed Interlock | 102 | |

| Function Description | Function Number | Icon |
|---|-----------------|---|
| Wheel <i>Differential lock (Diff lock)</i> (Front Axle) | 50 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Front Axle) With Speed Interlock | 32 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Front Axle) With Two Speed Interlock | 103 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Fwd Rear) | 46 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Fwd Rear) With Speed Interlock | 28 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Fwd Rear) With Two Speed Interlock | 99 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Rr Rear) | 48 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Rr Rear) With Speed Interlock | 30 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Rr Rear) With Two Speed Interlock | 101 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Single Rear) | 45 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Single Rear) With Speed Interlock | 27 |  |
| Wheel <i>Differential lock (Diff lock)</i> (Single Rear) With Two Speed Interlock | 98 |  |

| Function Description | Function Number | Icon |
|---|-----------------|---|
| Work Brake (Winch Brake) | 53 |  |
| Work Brake (Winch Brake) With Speed Interlock | 52 |  |

Dump Functions

The following section details the [EOA](#) truck and trailer dump parameters.

Defines the speed threshold for Truck Dump Gate function (N767)

This setting controls the maximum speed the vehicle can be traveling and still allow the truck dump gate to be engaged. If the vehicle is traveling faster than the speed listed in this setting, then the truck dump gate cannot be engaged.

Table 89: Defines the speed threshold for Truck Dump Gate function (N767)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N767 | 24.85 | 0 | 40.39 | MPH |

Defines the speed threshold for Trailer Dump Single function (N768)

This setting controls the maximum speed the vehicle can be traveling and still allow the trailer dump single function to be engaged. If the vehicle is traveling faster than the speed listed in this setting, then the trailer dump single function cannot be engaged.

Table 90: Defines the speed threshold for Trailer Dump Single function (N768)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N768 | 24.85 | 0 | 40.39 | MPH |

Defines the speed threshold for Trailer Dump Forward function (N769)

This setting controls the maximum speed the vehicle can be traveling and still allow the trailer dump forward function to be engaged. If the vehicle is traveling faster than the speed listed in this setting, then the trailer dump forward function cannot be engaged.

Table 91: Defines the speed threshold for Trailer Dump Forward function (N769)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N769 | 24.85 | 0 | 40.39 | MPH |

Defines the speed threshold for Trailer Dump Center function (N770)

This setting controls the maximum speed the vehicle can be traveling and still allow the trailer dump center function to be engaged. If the vehicle is traveling faster than the speed listed in this setting, then the trailer dump center function cannot be engaged.

Table 92: Defines the speed threshold for Trailer Dump Center function (N770)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N770 | 24.85 | 0 | 40.39 | MPH |

Defines the speed threshold for Trailer Dump Rear function (N771)

This setting controls the maximum speed the vehicle can be traveling and still allow the trailer dump rear function to be engaged. If the vehicle is traveling faster than the speed listed in this setting, then the trailer dump rear function cannot be engaged.

Table 93: Defines the speed threshold for Trailer Dump Rear function (N771)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N771 | 24.85 | 0 | 40.39 | MPH |

Lift Axle Functions

Lift Axle control is handled through hardwired connections from the Chassis Modules to the Lift Axle solenoids. Switch functionality can be controlled through hardwired switches to the Chassis Modules, or through the Multiplexed dash switches via [CAN](#) messages. Each Chassis Module has a maximum capacity of two Lift Axle circuits, four total.

**NOTE**

Lift axle functionality is programmed through [PVP](#).

Lift Axle logic is determined by axle type. See the following table for more information.

Table 94: Steerable Lift Axle w/o Auto-Reverse

| Raise Condition Logic | Lower Condition Logic |
|----------------------------|---------------------------|
| Lift Switch is Inactive OR | Lift Switch is Active AND |

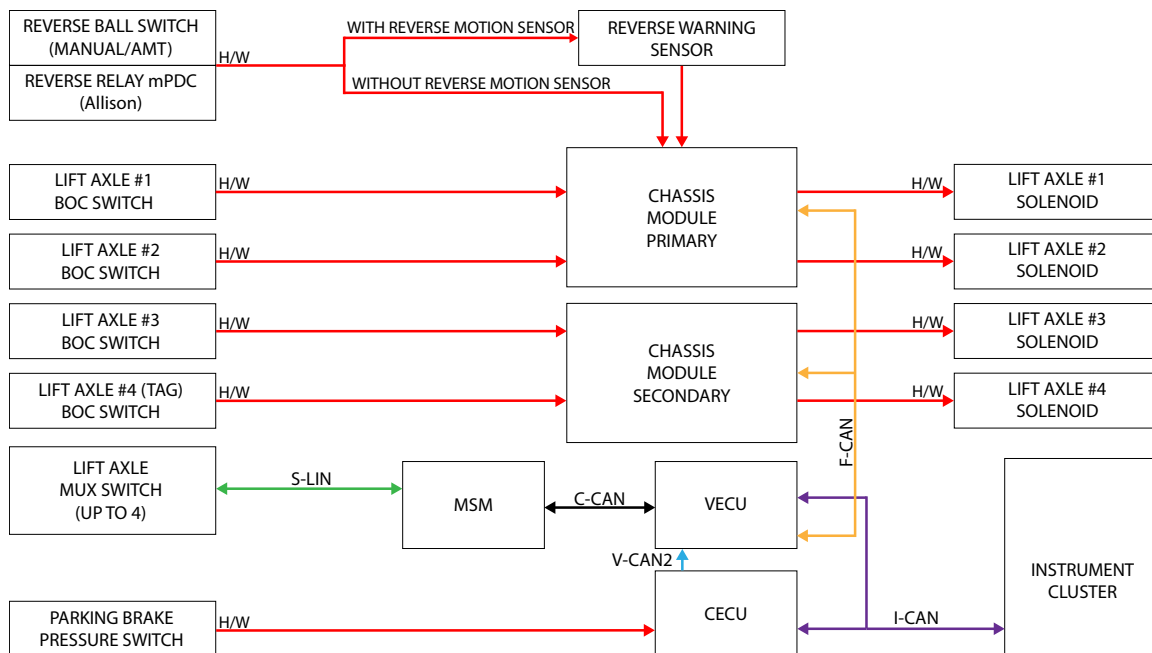
| Raise Condition Logic | Lower Condition Logic |
|-----------------------|---------------------------|
| Park Brake Engaged OR | Park Brake Disengaged AND |
| Trans in Reverse | Trans Not in Reverse |

Table 95: Steerable Lift Axle with Auto-Reverse OR Non-Steerable Lift Axle w/o Park Brake

| Raise Condition Logic | Lower Condition Logic |
|----------------------------|---------------------------|
| Lift Switch is Inactive OR | Lift Switch is Active AND |
| Park Brake Engaged | Park Brake Disengaged |

Table 96: Non-Steerable Lift Axle with Park Brake

| Raise Condition | Lower Condition |
|-----------------------------|--------------------------|
| Lift Switch is Inactive AND | Lift Switch is Active OR |
| Park Brake Disengaged | Park Brake Engaged |

Figure 5: Lift Axle Wiring Block Diagram**Determines what type of lift axle is installed at this location (N782)**

This setting controls what type of lift axle is installed at axle 1.

The possible values for this setting are:

- 0 - No lift axle installed
- 1 - Steerable lift axle
- 2 - Non-steerable lift axle

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 97: Determines what type of lift axle is installed at this location (N782)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N782 | 0 | 0 | 2 | DISCRETE |

Determines what type of lift axle is installed at this location (N783)

This setting controls what type of lift axle is installed at axle 2.

The possible values for this setting are:

- 0 - No lift axle installed
- 1 - Steerable lift axle
- 2 - Non-steerable lift axle

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 98: Determines what type of lift axle is installed at this location (N783)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N783 | 0 | 0 | 2 | DISCRETE |

Determines what type of lift axle is installed at this location (N785)

This setting controls what type of lift axle is installed at axle 4.

The possible values for this setting are:

- 0 - No lift axle installed
- 1 - Steerable lift axle
- 2 - Non-steerable lift axle

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 99: Determines what type of lift axle is installed at this location (N785)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N785 | 0 | 0 | 2 | DISCRETE |

Determines what type of lift axle is installed at this location (N784)

This setting controls what type of lift axle is installed at axle 3.

The possible values for this setting are:

- 0 - No lift axle installed
- 1 - Steerable lift axle
- 2 - Non-steerable lift axle

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 100: Determines what type of lift axle is installed at this location (N784)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N784 | 0 | 0 | 2 | DISCRETE |

Differential Lock Functions**Defines the speed threshold for Inter Axle Diff Lock function (N805)**

This setting controls the vehicle's speed threshold for the axle *Differential lock (Diff lock)* function.

Table 101: Defines the speed threshold for Inter Axle Diff Lock function (N805)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N805 | 39.77 | 0 | 70 | MPH |

Defines the speed threshold for Wheel Differential Lock Front Axle function (N806)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the front axle.

Table 102: Defines the speed threshold for Wheel Differential Lock Front Axle function (N806)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N806 | 24.85 | 0 | 70 | MPH |

Defines the speed threshold for Wheel Differential Lock Single Rear Axle function (N807)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on a single rear axle.

Table 103: Defines the speed threshold for Wheel Differential Lock Single Rear Axle function (N807)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N807 | 24.85 | 0 | 70 | MPH |

Defines the speed threshold for Wheel Differential Lock Forward Rear Axle function (N808)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the forward rear axle.

Table 104: Defines the speed threshold for Wheel Differential Lock Forward Rear Axle function (N808)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N808 | 24.85 | 0 | 70 | MPH |

Defines the speed threshold for Wheel Differential Lock Center Rear Axle function (N809)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the center rear axle.

Table 105: Defines the speed threshold for Wheel Differential Lock Center Rear Axle function (N809)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N809 | 24.85 | 0 | 70 | MPH |

Defines the speed threshold for Wheel Differential Lock Rear Rear Axle function (N810)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the rear rear axle.

Table 106: Defines the speed threshold for Wheel Differential Lock Rear Rear Axle function (N810)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N810 | 24.85 | 0 | 70 | MPH |

Defines the speed threshold for Wheel Differential Lock Dual Rear Axle function (N811)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on a dual rear axle.

Table 107: Defines the speed threshold for Wheel Differential Lock Dual Rear Axle function (N811)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N811 | 24.85 | 0 | 70 | MPH |

Defines the speed threshold for the work brakes function (N815)

This setting controls the vehicle's speed threshold for the work brakes function.

Table 108: Defines the speed threshold for the work brakes function (N815)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N815 | 3.11 | 3.11 | 6.21 | MPH |

Defines when EOH PTO is installed (N816)

This setting controls where *Electric Over Hydraulic (EOH) PTO* is installed, if the truck has it.

The possible values for this setting are:

- 0 - Not Electric Over Hydraulic
- 1 - Electric Over Hydraulic
- 2 - Electric Over Hydraulic with Park Brake
- 3 - Electric Over Hydraulic with Pump Mode

Table 109: Defines when EOH PTO is installed (N816)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N816 | 0 | 0 | 3 | DISCRETE |

Determines if Suspension Dump is required (N817)

This setting controls whether the trailer suspension dump function is installed or not.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 110: Determines if Suspension Dump is required (N817)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N817 | Not Installed | Not Installed | Installed | DISCRETE |

Defines the speed threshold for fifth wheel slide (N820)

This setting controls the vehicle's speed threshold for the fifth wheel slide function.

Table 111: Defines the speed threshold for fifth wheel slide (N820)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N820 | 6.84 | 0 | 9.94 | MPH |

Defines the speed threshold for Air Suspension Dump (N821)**Table 112: Defines the speed threshold for Air Suspension Dump (N821)**

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N821 | 4.35 | 0 | 158.45 | MPH |

Defines the speed threshold for trailer suspension dump function (N822)

This setting controls the vehicle's speed threshold for the trailer suspension dump function.

Table 113: Defines the speed threshold for trailer suspension dump function (N822)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N822 | 4.35 | 0 | 158.45 | MPH |

Defines the speed threshold for air over inflation function (N823)

This setting controls the vehicle's speed threshold for the air over-inflation function.

Table 114: Defines the speed threshold for air over inflation function (N823)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N823 | 15.53 | 0 | 158.45 | MPH |

Axle Interlock Functions

Determines Which Interlocks Are Present For Axle One (N786)

This setting controls the type of interlock on the first axle.

The possible values for this setting are:

- 0 - No Interlock
- 1 - Auto Reverse Interlock
- 2 - Park Brake Interlock



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 115: Determines Which Interlocks Are Present For Axle One (N786)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N786 | 0 | 0 | 2 | DISCRETE |

Determines Which Interlocks Are Present For Axle Two (N787)

This setting controls the type of interlock on the second axle.

The possible values for this setting are:

- 0 - No Interlock
- 1 - Auto Reverse Interlock
- 2 - Park Brake Interlock



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 116: Determines Which Interlocks Are Present For Axle Two (N787)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N787 | 0 | 0 | 2 | DISCRETE |

Determines Which Interlocks Are Present For Axle Three (N788)

This setting controls the type of interlock on the third axle.

The possible values for this setting are:

- 0 - No Interlock
- 1 - Auto Reverse Interlock
- 2 - Park Brake Interlock



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 117: Determines Which Interlocks Are Present For Axle Three (N788)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N788 | 0 | 0 | 2 | DISCRETE |

Determines Which Interlocks Are Present For Axle Four (N789)

This setting controls the type of interlock on the fourth axle.

The possible values for this setting are:

- 0 - No Interlock
- 1 - Auto Reverse Interlock
- 2 - Park Brake Interlock



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 118: Determines Which Interlocks Are Present For Axle Four (N789)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N789 | 0 | 0 | 2 | DISCRETE |

Boolean KW only parameter to enable single switch control of lift axles (TRACTOR ONLY) (S780)

This setting enables switch control for lift axles on the tractor. If the tractor has lift axles, this setting is used to enable the switch control needed to operate the lift axles.

The possible values for this setting are:

- 0 - Not Installed
- 1 - Installed

**NOTE**

This parameter only applies to Kenworth trucks.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 119: Boolean KW only parameter to enable single switch control of lift axles (TRACTOR ONLY) (S780)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N780 | 0 | 0 | 1 | DISCRETE |

Determines location of switches and which CAN will deliver control messages (S781)

This setting controls where the lift axle switches are located. The location of the lift axle switches also determines which **CAN** is used to deliver control messages.

The possible values for this setting are:

0 - Dash Mounted (MUX)

1 - Rocker Mounted

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 120: Determines location of switches and which CAN will deliver control messages (S781)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N781 | 0 | 0 | 1 | DISCRETE |

Defines the high speed threshold for Wheel Differential Lock Center Rear Axle function (N924)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the center rear axle.

Table 121: Defines the high speed threshold for Wheel Differential Lock Center Rear Axle function (N924)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N924 | 25.00 | 11.00 | 70.00 | MPH |

Defines the high speed threshold for Wheel Differential Lock Dual Rear Axle function (N925)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on a dual rear axle.

Table 122: Defines the high speed threshold for Wheel Differential Lock Dual Rear Axle function (N925)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N925 | 25.00 | 11.00 | 70.00 | MPH |

Defines the high speed threshold for Wheel Differential Lock Front Axle function (N926)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the front axle.

Table 123: Defines the high speed threshold for Wheel Differential Lock Front Axle function (N926)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N926 | 25.00 | 11.00 | 70.00 | MPH |

Defines the high speed threshold for Wheel Differential Lock Forward Rear Axle function (N927)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the forward rear axle.

Table 124: Defines the high speed threshold for Wheel Differential Lock Forward Rear Axle function (N927)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N927 | 25.00 | 11.00 | 70.00 | MPH |

Defines the high speed threshold for Wheel Differential Lock Rear Rear Axle function (N928)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on the rear rear axle.

Table 125: Defines the high speed threshold for Wheel Differential Lock Rear Rear Axle function (N928)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N928 | 25.00 | 11.00 | 70.00 | MPH |

Defines the high speed threshold for Wheel Differential Lock Single Rear Axle function (N929)

This setting controls the vehicle's speed threshold for the wheel *Differential lock (Diff lock)* function on a single rear axle.

Table 126: Defines the high speed threshold for Wheel Differential Lock Single Rear Axle function (N929)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N929 | 25.00 | 11.00 | 70.00 | MPH |

Chapter 15 | ELECTRIC TRAILER OPTIONS

| | |
|---|-----|
| Electric Trailer Options | 106 |
| Determine whether Trailer Dump Gate Single and Forward are present on the chassis. (N775) . | 106 |
| Determine whether Trailer Dump Gate Single and Rear are present on the chassis. (N776) | 106 |
| Set the function to be sent on the configurable pin 3 of the ISO 3731 connector. (N777) | 107 |
| Determine whether Trailer Dump Gate Single is present on the chassis. (N778) | 108 |
| Trailer Hotline Switch (N779) | 108 |

Electric Trailer Options

Options in this section control how the truck interacts with a connected trailer.

Determine whether Trailer Dump Gate Single and Forward are present on the chassis. (N775)

This setting controls what function is sent through pin #1 of the ISO 3731 trailer electric connector.

The possible values for this setting are:

- 0 - Not Installed
- 1 - (2) Dump Gates w/ 3m coil BOC LH rail (FWD)
- 2 - ISO 3731 switch 1 ID trailer floodlight
- 3 - ISO 3731 switch 1 ID trailer dump gate (Single)
- 4 - ISO 3731 switch 1 ID trailer air suspen
- 5 - ISO 3731 switch 1 ID trailer 3rd lift axle
- 6 - ISO 3731 switch 1 ID trailer Hotline
- 7 - 2-SP CKT THRU ABS ISO 3731 CONN
- 8 - ADD 7-WAY RECPT W/TRAC KIT WIRED TO 3 DASH SW & BKUP LAMP SW
- 9 - ADD 7-WAY RECPT TO EOF WIRED TO 3 DASH SW & BKUP LAMP SW
- 10 - ADD 4-WAY RECPT TO BOC WIRED TO 3 DASH
- 11 - (2) Dump Gates w/ 3m coil BOC LH rail (FWD) with Speed Interlock
- 12 - ISO 3731 switch 1 ID trailer dumpgate (Single) with Speed Interlock
- 13 - ISO 3731 switch 1 ID trailer air suspen with Speed Interlock
- 14 - ISO 3731 switch 1 ID trailer air suspen with Park Brake Interlock
- 15 - Trailer Beacon Light



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 127: Determine whether Trailer Dump Gate Single and Forward are present on the chassis. (N775)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N775 | 0 | 0 | 15 | DISCRETE |

Determine whether Trailer Dump Gate Single and Rear are present on the chassis. (N776)

This setting controls what function is sent through pin #2 of the ISO 3731 trailer electric connector.

The possible values for this setting are:

- 0 - Not Installed

- 1 - (2) Dump Gates w/ 3m coil BOC LH rail (REAR)
- 2 - ISO 3731 switch 2 ID trailer floodlight
- 3 - ISO 3731 switch 2 ID trailer dumpgate (Single)
- 4 - ISO 3731 switch 2 ID trailer air suspen
- 5 - ISO 3731 switch 2 ID trailer 3rd lift axle
- 6 - ISO 3731 switch 2 ID trailer Hotline
- 7 - 2-SP CKT THRU ABS ISO 3731 CONN
- 8 - ADD 7-WAY RECPT W/TRAC KIT WIRED TO 3 DASH SW & BKUP LAMP SW
- 9 - ADD 7-WAY RECPT TO EOF WIRED TO 3 DASH SW & BKUP LAMP SW
- 10 - ADD 4-WAY RECPT TO BOC WIRED TO 3 DASH
- 11 - (2) Dump Gates w/ 3m coil BOC LH rail (REAR) with Speed Interlock
- 12 - ISO 3731 switch 2 ID trailer dumpgate (Single) with Speed Interlock
- 13 - ISO 3731 switch 2 ID trailer air suspen with Speed Interlock
- 14 - ISO 3731 switch 2 ID trailer air suspen with Park Brake Interlock

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 128: Determine whether Trailer Dump Gate Single and Rear are present on the chassis. (N776)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N776 | 0 | 0 | 14 | DISCRETE |

Set the function to be sent on the configurable pin 3 of the ISO 3731 connector. (N777)

This setting controls what function is sent through pin #3 of the ISO 3731 trailer electric connector.

The possible values for this setting are:

0 - Not Installed

- 1 - (1) Trailer Dump Gate w/ 3m coil BOC (Single)
- 2 - (1) Trailer Dump Gate w/ 3m coil BOC (Center)
- 3 - (1) Truck Dump Gate w/ 3m coil BOC
- 4 - ADD 7-WAY RECPT W/TRAC KIT WIRED TO 3 DASH SW AND BKUP LAMP SW
- 5 - ADD 7-WAY RECPT TO EOF WIRED TO 3 DASH SW AND BKUP LAMP SW
- 6 - ADD 4-WAY RECPT TO BOC WIRED TO 3 DASH
- 7 - (1) Trailer Dump Gate w/ 3m coil BOC (Single) with Speed Interlock
- 8 - (1) Trailer Dump Gate w/ 3m coil BOC (Center) with Speed Interlock
- 9 - (1) Truck Dump Gate w/ 3m coil BOC with Speed Interlock
- 10 - Trailer Air Suspension
- 11 - Trailer Air Suspension with Speed Interlock
- 12 - Trailer Air Suspension with Park Brake Interlock



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 129: Set the function to be sent on the configurable pin 3 of the ISO 3731 connector. (N777)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N777 | 0 | 0 | 12 | DISCRETE |

Determine whether Trailer Dump Gate Single is present on the chassis. (N778)

This setting controls what function is sent through the configurable pin of the J560 connector pin.

The possible values for this setting are:

- 0 - Not Installed
- 1 - 7-Way switch, Trailer flood light
- 2 - 7-Way switch, Hotline
- 3 - 7-Way switch, Trailer air suspension
- 4 - 7-Way switch, Overfill
- 5 - 7-Way switch, 3rd Axle Lift
- 6 - 7-WAY SW: DUMP GATE /GUARD (Single)
- 7 - 7-WAY SW: DUMP GATE /GUARD (Single) with Speed Interlock
- 8 - Trailer Air Suspension with Speed Interlock
- 9 - Trailer Air Suspension with Park Brake Interlock



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 130: Determine whether Trailer Dump Gate Single is present on the chassis. (N778)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N778 | 0 | 0 | 9 | DISCRETE |

Trailer Hotline Switch (N779)

This setting enables single switch control of lift axles.

The possible values for this setting are:

- 0 - Not Installed
- 1 - Trailer Hotline IGN switched
- 2 - Trailer Hotline IGN switched w/Alarm

**NOTE**

This parameter is for MX engines only.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 131: Trailer Hotline Switch (N779)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N779 | 2 | 0 | 2 | DISCRETE |

Chapter 16 | BACKUP ALARM

Backup alarm parameters 112

Configuration parameter that enables the complete backup alarm function (S830) 112

Backup Alarm Mute Switch (S917) 112

Backup alarm parameters

A vehicle backup alarm is controlled by the vehicle control unit, through the chassis module, as a multiplex signal. The parameters enable the backup alarm function and has a separate parameter for a switch to mute the alarm if needed.

Configuration parameter that enables the complete backup alarm function (S830)

This setting controls whether the vehicle has a backup alarm system or not.

Table 132: Configuration parameter that enables the complete backup alarm function (S830)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S830 | NONE | NONE | BACKUP ALARM | FLAG |

Backup Alarm Mute Switch (S917)

This setting controls whether the vehicle has a backup alarm mute switch.

Table 133: Backup Alarm Mute Switch (S917)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S917 | OFF | OFF | ON | FLAG |

Chapter 17 | DRIVELINE PROTECTION & MULTI TORQUE

PACCAR Driveline Protection 114

Impact to vehicle speed/acceleration determination for trucks with multispeed axles. (S911) 114

No multi torque (S910) 114

Multi Torque with Cruise Control only (N890) 115

PACCAR Driveline Protection

The PACCAR Driveline Protection feature allows the engine to reduce the maximum torque output in order to protect driveline components when the drivetrain reduction is calculated to be above a calibrated ratio. This functionality provides the rated torque in all conditions, and only reduces torque output if one or both of the following conditions are met:

- The vehicle has an auxiliary transmission with gear ratio greater than 1.0:1
- Vehicle has a transmission in a forward or reverse gear with a gear ratio equal to or greater than 13.0:1

Driveline protection is automatically included within the programming for all multi-torque engine ratings, as it utilizes the same software functions to enable the higher torque values of the multi-torque rating.

Impact to vehicle speed/acceleration determination for trucks with multispeed axles. (S911)

This setting indicates if the input is fitted and therefore will be processed.

The possible values for this setting are:

0 - Single Speed Rear Axle

1 - Two Speed Rear Axle Is Equipped (Must Set Secondary Rear Axle Ratio Parameter And DLP Parameters If Enabled)

Table 134: Impact to vehicle speed/acceleration determination for trucks with multispeed axles. (S911)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S911 | 0 | 0 | 1 | FLAG |

No multi torque (S910)

This setting controls whether the vehicle has multi torque or not.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 135: No multi torque (S910)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S910 | OFF | OFF | ON | FLAG |

Multi Torque with Cruise Control only (N890)

This setting controls if multi-torque is available only when cruise control is active or at all times.

The possible values for this setting are:

0 - Multi-Torque enabled with and without cruise control active

1 - Multi-Torque enable only while cruise control active



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 136: Multi Torque with Cruise Control only (N890)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N890 | 0 | 0 | 1 | FLAG |

Chapter 18 | EXTERIOR LIGHTING

| | |
|---|-----|
| Exterior lighting parameters | 118 |
| Parameter to enable Flood light during reverse (N882) | 118 |
| Beacon Lamp DTC - On/Off (N930) | 118 |
| Spot Lamp DTC - On/Off (N931) | 118 |
| Sleeper Dome Lamp DTC - On/Off (N932) | 119 |
| Work Lights or Flood Lamps 2 DTC - On/Off (N933) | 119 |
| Work Lights or Flood Lamps 3 DTC - On/Off (N934) | 119 |
| Work Lights or Flood Lamps 1 DTC - On/Off (N935) | 119 |

Exterior lighting parameters

This group of parameters provide functionality with exterior lighting depending on specific application of the vehicle in motion or stationary.

Parameter to enable Flood light during reverse (N882)

This setting turns the vehicle's flood light on when the vehicle is in reverse.

The possible values for this setting are:

- 0 - Lights can turn ON in all cases
- 1 - Lights can turn ON ONLY with key OFF OR while in reverse
- 2 - Lights can turn ON ONLY with key OFF OR while park brake applied
- 3 - Lights can turn ON ONLY with key OFF OR while park brake applied OR while in in reverse

Table 137: Parameter to enable Flood light during reverse (N882)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N882 | 0 | 0 | 3 | DISCRETE |

Beacon Lamp DTC - On/Off (N930)

This setting enables *DTC* monitoring of the beacon lamp.

Table 138: Beacon Lamp DTC - On/Off (N930)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N930 | 0 | 0 | 1 | FLAG |

Spot Lamp DTC - On/Off (N931)

This setting enables *DTC* monitoring of the spot lamp.

Table 139: Spot Lamp DTC - On/Off (N931)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N931 | 0 | 0 | 1 | FLAG |

Sleeper Dome Lamp DTC - On/Off (N932)

This setting enables *DTC* monitoring of the sleeper dome lamp.

Table 140: Spot Lamp DTC - On/Off (N932)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N932 | 0 | 0 | 1 | FLAG |

Work Lights or Flood Lamps 2 DTC - On/Off (N933)

This setting enables *DTC* monitoring of the work lights or flood lamps 2.

Table 141: Work Lights or Flood Lamps 2 DTC - On/Off (N933)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N933 | 0 | 0 | 1 | FLAG |

Work Lights or Flood Lamps 3 DTC - On/Off (N934)

This setting enables *DTC* monitoring of the work lights or flood lamps 3.

Table 142: Work Lights or Flood Lamps 3 DTC - On/Off (N934)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N934 | 0 | 0 | 1 | FLAG |

Work Lights or Flood Lamps 1 DTC - On/Off (N935)

This setting enables *DTC* monitoring of the work lights or flood lamps 1.

Table 143: Work Lights or Flood Lamps 1 DTC - On/Off (N935)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N935 | 0 | 0 | 1 | FLAG |

Chapter 19 | VEHICLE PARAMETERS

Vehicle Parameters 122


Tires (S836) 122

Vehicle Parameters

Parameters in this section control basic functions related to the vehicle.

Tires (S836)

This setting contains the circumference of the vehicle's tires. The circumference of the tire is used to determine vehicle speed and distance traveled.

 NOTE

This parameter is for MX engines only.

Table 144: Tires (S836)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S836 | 10 | 3 | 16 | FT |

Chapter 20 | POWER TAKE OFF (PTO)

| | |
|---|-----|
| Power Take Off (PTO) | 124 |
| PTO Controls | 125 |
| PTO: PTO Mode Control Configurations | 127 |
| PTO: Cab Station Limits | 130 |
| PTO: Cab Station Engine Speed Control Interlocks | 133 |
| PTO: Cab Station Engine Speed Control Options | 136 |
| PTO: Cab Station Presets | 138 |
| PTO: Cab Station Custom Presets | 142 |
| PTO: Remote Station Limits | 145 |
| PTO: Remote Station Engine Speed Control Interlocks | 147 |
| PTO: Remote Station Engine Speed Control Options | 150 |
| PTO: Remote Station Presets | 152 |
| PTO: Cab And/Or Remote Station Custom Presets | 156 |
| PTO: Cab And/Or Remote Station: Engine Speed Control Interlocks | 159 |
| PTO: Pedal | 159 |
| PTO: Remote CAN Control | 160 |
| PTO: Advanced Settings | 161 |

Power Take Off (PTO)

PTO Mode is a PACCAR specific function to provide PACCAR MX speed controls to meet the needs of many different vehicle applications with VECU level control units. **PTO** Mode is fully customizable with multiple programmable engine, operator input functions and vehicle speed parameters and safety interlocks. Interlocks can make the operation of **PTO**-driven equipment safer and more convenient for the driver, and can protect both the chassis drivetrain and **PTO**-driven auxiliary equipment from misuse and potential damage.

The **EIST** may also be disabled in **PTO** Mode to allow for extended operations with the engine at idle. The engine is also capable of logging time and fuel consumption in **PTO** Mode separately from non-**PTO** operation.

While the engine is in **PTO** mode, many different limitations can be imposed by software in the vehicle controller. These limitations may include:

- Engine Speed
- Engine Speed Ramp-Up/Ramp-Down Rates
- Maximum Engine Torque Output
- Vehicle Speed
- Engine Idle Time
- Safety Interlocks

The purpose of this section is to describe the **PTO** Mode programming features and capabilities.

- **PTO Controls** on page 125 is intended to provide an overview of how control switches can be wired and integrated to the truck.
 - **PTO: PTO Mode Control Configurations** on page 127 begins to list all the parameters that define PTO Mode. Once these parameters are defined, more parameters are presented that customize how the operator will control the PTO Mode function.
1. Cab Station - These parameters are for switches and controls located inside the cab.
 - **PTO: Cab Station Engine Speed Control Options** on page 136
 - **PTO: Cab Station Presets** on page 138
 - **PTO: Cab Station Limits** on page 130
 - **PTO: Cab Station Engine Speed Control Interlocks** on page 133
 - **PTO: Cab Station Custom Presets** on page 142
 2. Remote Station - These parameters are for controls that are external to the cab.
 - **PTO: Remote Station Limits** on page 145
 - **PTO: Remote Station Engine Speed Control Interlocks** on page 147
 - **PTO: Remote Station Engine Speed Control Options** on page 150
 - **PTO: Remote Station Presets** on page 152
 3. Cab and/or Remote Station - These parameters are dedicated to applications that use a combination of cab and/or remote station controls.
 - **PTO: Cab And/Or Remote Station Custom Presets** on page 156
 - **PTO: Cab And/Or Remote Station: Engine Speed Control Interlocks** on page 159
 4. Advanced Parameters
 - **PTO: Pedal** on page 159
 - **PTO: Remote CAN Control** on page 160

- [PTO: Advanced Settings](#) on page 161

Additional transmission configuration may be necessary depending on the equipped transmission and/or transfer case. PACCAR recommends consulting the transmission manufacturer for information related to specific wiring harnesses and transmission programming requirements for proper [PTO](#) functionality.

PTO Controls

Default OE Installed PTO Controls

Enabling and controlling the engine for [PTO](#) Mode can be performed via a signal sent directly from a driver operated electric switch in dash (or from steering wheel switches, if equipped). Driver [PTO](#) Mode request options are usually installed at the factory for dash switches or for steering wheel switches.

The control hardware required for this feature is usually factory installed. Refer to [Figure 6: Cab Station Dash Switches](#) on page 125 for information on how the dash switches are implemented and [Figure 7: Cab Station Steering Wheel Switches](#) on page 125 for information on how the steering wheel switches are implemented.

Figure 6: Cab Station Dash Switches


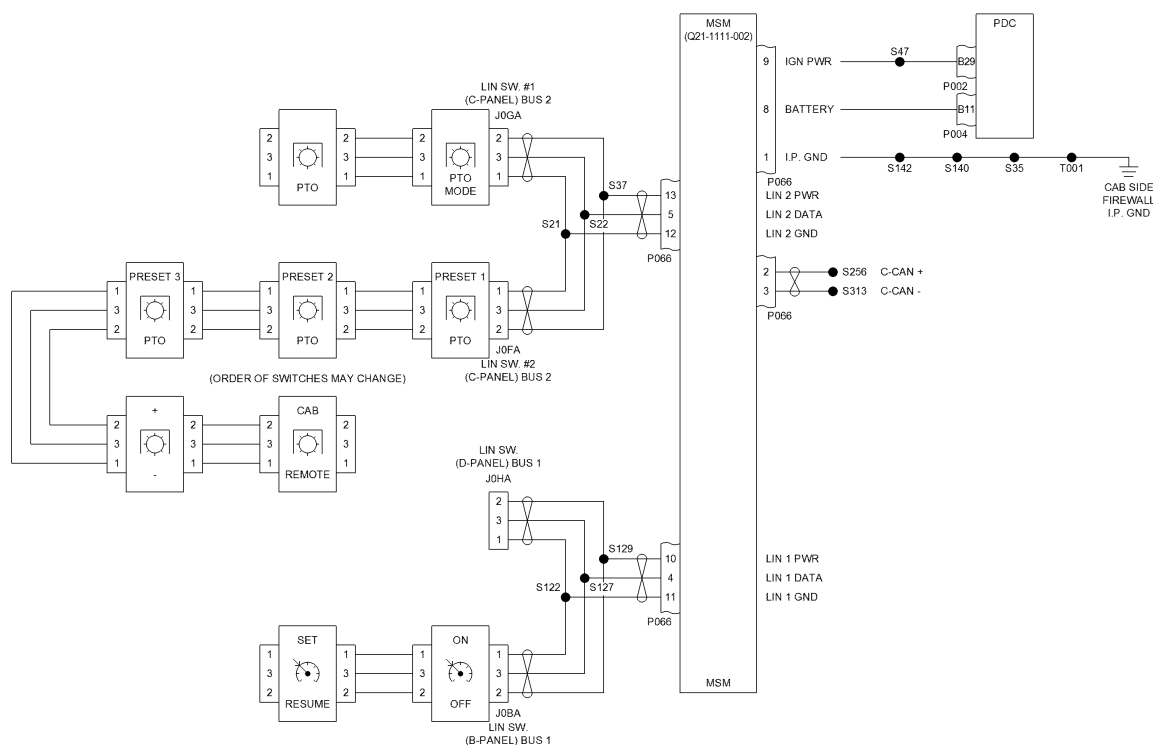


Figure 7: Cab Station Steering Wheel Switches

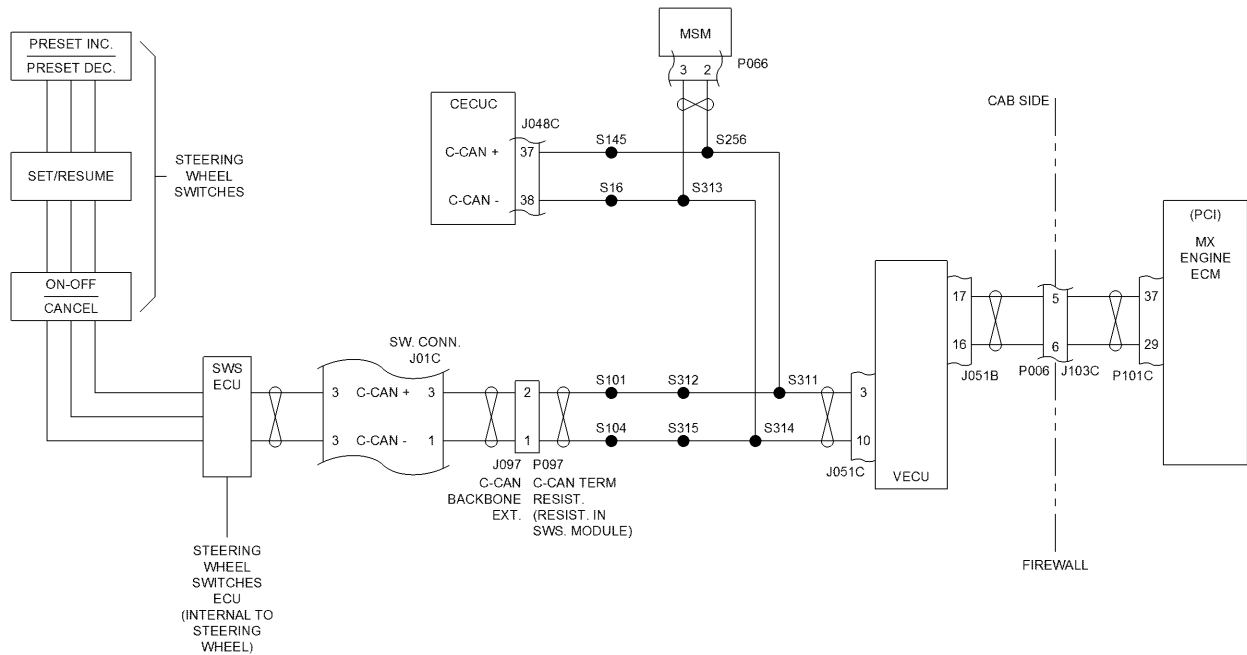

Factory OE Dash Controls for Aftermarket Air Operated PTO

Aftermarket air actuated **PTO's** may be installed and be controlled by the factory driver controls inside the cab. The signal is processed through the **VECU** unit to the multiplex solenoid bank to operate that assigned air solenoid. The VECU can be customized to required a feedback signal (such as the **PTO** engagement indicator lamp on the dash) before increasing engine speed.

The control hardware required for this feature is usually factory installed.

CAN Based PTO Mode Request

PTO Mode requests can be initiated when a signal is sent through a **CAN** network connection.

This setup requires a customer-provided **CAN** based controller.

Remote Station PMC

Remote Station *PTO Mode Control (PMC)* includes the following possible setups:

1. Remote Station Switches
2. Remote Station Accelerator
3. Remote Station CAN Based Controls

4. Remote Station TSC1 Controls

PMC Remote Station Accelerator

Remote Station Accelerator is generally a customer installed accelerator typically installed outside the cab. The accelerator can be used to implement *Engine Speed Control (ESC)* in Remote *PTO* Mode, if fitted. Remote Station accelerator will provide continuously variable *ESC* in a similar manner as the ordinary cab mounted accelerator used to drive the truck.

PMC Remote Station Accelerator requires additional programming and aftermarket parts to access and control this feature. With appropriate hardware and software, this feature may be combined with any of the following *PMC*:

1. *PTO* Mode Activation for one of the following options:
 - Remote Station Switches *ESC*
 - Cab Station *PTO* Switches *ESC* (steering wheel and/or dash switches)
 - *CAN* based *ESC*
 -
2. Factory installed Sensors that interact with Engine *PTO* (any/all of the following, depending on programming):
 - Service Brake Switch
 - Parking Brake Switch
 - Clutch Engagement Sensor
 - Neutral Attainment Indicator
 - Vehicle Speed Sensor
 - Engine Speed Sensor

PTO: PTO Mode Control Configurations

What is PTO Mode Control (PMC)?

PMC defines if the *PTO* function will be controlled via in cab station accelerator input or remote (outside the cab) station accelerator input. Additional parameters are defined to help identify how the input should be used and what other functions the vehicle should perform.

Type of PTO Controls - Cab/Remote/Both (S518)

This setting enables in-cab *PTO* controls. This setting must be enabled to allow any in cab controls related to PTO mode, such as dash switches or steering wheel switches, to be used.



NOTE

This parameter is for MX engines only.

Table 145: Type of PTO Controls - Cab/Remote/Both (S518)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| S518 | 0 (DISABLE) | 0 (DISABLE) | 1 (ENABLE) | FLAG |

PTO Governor Responsiveness (N517)

This setting adjusts the engine's response to speed or torque changes during *PTO* mode.



NOTE

This parameter is for MX engines only.

Table 146: PTO Mode Engine Speed Governor Responsiveness (N517)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N517 | 1 | 1 | 8 | FACTOR |

Cab Accelerator Pedal Type in PTO Mode (N544)

This setting controls whether the accelerator pedal is used to change engine torque or engine speed while in cab station *PTO* Mode. This setting allows operators to use the accelerator pedal in the way best suited for their vehicle operation.



NOTE

Cab Accelerator Active in Cab Station PMC (N545) on page 128 must be enabled for this setting to be changed.

The possible values for this setting are:

0 - Torque Pedal

1 - Speed Pedal



NOTE

This parameter is for MX engines only.

Table 147: Cab Accelerator Pedal Type in PTO Mode (N544)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N544 | 0 | 0 | 1 | FLAG |

Cab Accelerator Active in Cab Station PMC (N545)

This setting enables using the accelerator pedal while the vehicle is in cab station *PTO* Mode.

**NOTE**

This setting must be enabled to allow changes to the [Cab Accelerator Pedal Type in PTO Mode \(N544\)](#) on page 128 setting.

**NOTE**

This parameter is for MX engines only.

Table 148: Cab Accelerator Active in Cab Station PMC (N545)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N545 | YES | NO | YES | FLAG |

Cab Accelerator Active in Remote Station PMC (N577)

This setting enables using the accelerator pedal while the vehicle is in remote [PTO](#) Mode.

**NOTE**

This parameter is for MX engines only.

Table 149: Cab Accelerator Active in Remote Station PMC (N577)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N577 | NO | NO | YES | DISCRETE |

Flag To Allow Remote Pedal (N578)

This setting is used to enable remote pedal inputs during [PTO](#) mode. This option must be enabled to allow pedal input from remote locations.

**NOTE**

This parameter is for MX engines only.

Table 150: Flag To Allow Remote Pedal (N578)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N578 | Enabled | Disabled | Enabled | DISCRETE |

Cab and Remote Station: Fan On in PTO Mode (N885)

This setting turns engine fan on when PTO mode is active.

**NOTE**

This parameter is for MX engines only.

Table 151: Cab and Remote Station: Fan On in PTO Mode (N885)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N885 | Disabled | Disabled | Enabled | FLAG |

Open circuit detection on Allison MTD PTO Controls - PTO 1 (N921)

This setting enables open circuit detection on Allison MTD *PTO* controls.

Table 152: Open circuit detection on Allison MTD PTO Controls - PTO 1 (N921)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N921 | 0 | 0 | 1 | FLAG |

Open circuit detection on PTO Engaged Output for PTO Hourmeter and PTO Telltale (N922)

This setting enables open circuit detection on the *PTO* engaged output for both *PTO* hourmeter and *PTO* telltale.

Table 153: Open circuit detection on PTO Engaged Output for PTO Hourmeter and PTO Telltale (N922)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N922 | 0 | 0 | 1 | FLAG |

PTO: Cab Station Limits**Maximum Engine Speed - Accelerator Controlled (N519)**

This setting controls the maximum speed the engine can achieve when in cab station *PTO* Mode using the accelerator pedal. The engine will not go faster than the maximum speed entered no matter how much the accelerator pedal is depressed. This setting is initially equal to *Maximum Engine Speed - Switch Controlled (N520)* on page 131 .

**NOTE**

This parameter is for MX engines only.

Table 154: Maximum Engine Speed - Accelerator Controlled (N519)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N519 | 2000 | 650 | 2200 | RPM |

Maximum Engine Speed - Switch Controlled (N520)

This setting controls the maximum speed the engine can achieve when in cab station *PTO* Mode using the cab switches. The engine will not go faster than the maximum speed entered no matter how much the switch is depressed.



NOTE

This parameter is for MX engines only.

Table 155: Maximum Engine Speed - Switch Controlled (N520)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N520 | 2000 | 650 | 2200 | RPM |

Maximum Vehicle Speed (N523)

This setting controls the vehicle speed limit while in cab station *PTO* mode. This setting affects all input methods of increasing vehicle speed.



NOTE

This parameter is for MX engines only.

Table 156: Maximum Vehicle Speed (N523)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N523 | 6 | 6 | 158.45 | MPH |

Maximum Rate of Engine Speed INCREASE (N524)

This setting controls the rate of engine speed increase in cab station *PTO* mode. The value entered in this setting limits the rate of engine speed increase to a maximum number of rpm/s for any in-cab controls. This setting is closely connected with *Increment Amount (N526)* on page 136 .



NOTE

This parameter is for MX engines only.

Table 157: Maximum Rate of Engine Speed INCREASE (N524)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N524 | 1000 | 10 | 2000 | RPM/S |

Maximum Rate of Engine Speed DECREASE (N525)

This setting controls the rate of engine speed decrease in cab station *PTO* mode. The value entered in this setting limits the rate of engine speed decrease to a maximum number of rpm/s for any in-cab controls. This setting is closely connected with *Decrement Amount (N527)* on page 137 .

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

This parameter is for MX engines only.

Table 158: Maximum Rate of Engine Speed DECREASE (N525)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N525 | 1000 | 10 | 2000 | RPM/S |

Maximum Engine Torque Output (N528)

This setting controls the engine torque limit when the vehicle is in cab station *PTO* mode. The engine torque rate will not go higher than the value entered.

**NOTE**

This parameter is for MX engines only.

Table 159: Maximum Engine Torque Output (N528)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N528 | 1903 | 148 | 1903 | LB-FT |

Engine speed lower limit while in REMOTE PTO mode (N603)

This setting controls the minimum speed the engine will operate at while in remote *PTO* mode. The engine will retain this minimum speed if no other commands occur to increase the engine speed.

**NOTE**

This parameter is for MX engines only.

Table 160: Engine speed lower limit while in REMOTE PTO mode (N603)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N603 | 650 | 650 | 2200 | RPM |

**NOTE**

If [Maximum Vehicle Speed \(N556\)](#) on page 146 is less than 6.2 MPH, then the value entered in this setting cannot be greater than 800 RPM.

PTO: Cab Station Engine Speed Control Interlocks

Clutch Interlock (N546)

This setting controls how the clutch operates when the vehicle is in cab station [PTO](#) mode. This setting can control whether or not the clutch is usable during cab station [PTO](#) mode, and if depressing the clutch disables cab station [PTO](#) mode.

The possible values for this setting are:

- 0 - Clutch disabled, stay in [PTO Speed Control \(PSC\)](#)
- 1 - Clutch enabled, removed from [PSC](#) but remain in [PTO](#)
- 2 - All pedals disabled, stay in [PSC](#)

**NOTE**

This parameter is for MX engines only.

Table 161: Clutch Interlock (N546)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N546 | 1 | 0 | 2 | DISCRETE |

Custom Interlock (N547)

This setting controls how [PSC](#) operates when a customer interlock is active.

The possible values for this setting are:

- 0 - [PSC](#) with switches is disabled when customer interlock is active.
- 1 - [PSC](#) with switches is enabled when customer interlock is active.

2 - *PSC* with switches is enabled when customer interlock is active, but disabled when cab accelerator is enabled.

**NOTE**

This parameter is for MX engines only.

Table 162: Custom Interlock (N547)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N547 | 0 | 0 | 2 | DISCRETE |

Neutral Interlock (N548)

This setting controls how *PSC* operates when the vehicle is not in neutral.

The possible values for this setting are:

0 - *PSC* with switches is disabled when the vehicle is not in neutral.

1 - *PSC* with switches is enabled when the vehicle is not in neutral.

2 - *PSC* with switches is enabled when vehicle is not in neutral, but disabled when cab accelerator is enabled.

**NOTE**

This parameter is for MX engines only.

Table 163: Neutral Interlock (N548)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N548 | 1 | 0 | 2 | DISCRETE |

Park Brake Interlock (N549)

This setting controls how *PSC* operates when the parking brake is not set.

The possible values for this setting are:

0 - *PSC* control with switches is disabled when parking break is not set.

1 - *PSC* control with switches is enabled when parking break is not set.

2 - *PSC* control with switches is enabled when parking break is not set, but disabled when cab accelerator is enabled.

**NOTE**

This parameter is for MX engines only.

Table 164: Park Brake Interlock (N549)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N549 | 1 | 0 | 2 | DISCRETE |

Service Brake Interlock: Pressed Equals No PTO Speed Control (N550)

This setting controls how [PSC](#) operates when the service brake is pressed.

The possible values for this setting are:

0 - [PSC](#) with switches is disabled when the service brake is pressed.

1 - [PSC](#) with switches is enabled when the service brake is pressed.

2 - [PSC](#) with switches is enabled when service brake is pressed, but disabled when cab accelerator is enabled.



NOTE

This parameter is for MX engines only.

Table 165: Service Brake Interlock: Pressed Equals No PTO Speed Control (N550)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N550 | 1 | 0 | 2 | DISCRETE |



NOTE

If the entry in [Maximum Vehicle Speed \(N523\)](#) on page 131 is greater than 6.2 MPH, and the entries in both [Neutral Interlock \(N548\)](#) on page 134 and [Park Brake Interlock \(N549\)](#) on page 134 are 0, then this setting must be enabled.

Service Brake Interlock: NOT Pressed Equals No PTO Speed Control (N551)

This setting controls how [PSC](#) operates when the service brake is not pressed.

The possible values for this setting are:

0 - [PSC](#) with switches is disabled when the service brake is not pressed.

1 - [PSC](#) with switches is enabled when the service brake is not pressed.

2 - [PSC](#) with switches is enabled when service brake is not pressed, but disabled when cab accelerator is enabled.



NOTE

If the entry in [Service Brake Interlock: Pressed Equals No PTO Speed Control \(N550\)](#) on page 135 is a 1 or 2, then the entry in this field must be a 0.



NOTE

This parameter is for MX engines only.

Table 166: Service Brake Interlock: NOT Pressed Equals No PTO Speed Control (N551)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N551 | 0 | 0 | 2 | DISCRETE |

PTO: Cab Station Engine Speed Control Options

Accelerate Ramp Rate (N521)

This setting controls the engine acceleration rate from in-cab controls during cab station *PTO* mode. This setting affects the acceleration rate of all in-cab control options.



NOTE

This parameter is for MX engines only.

Table 167: Accelerate Ramp Rate (N521)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N521 | 250 | 10 | 1000 | RPM/S |

Decelerate Ramp Rate (N522)

This setting controls the engine deceleration rate from in-cab controls during cab station *PTO* mode. This setting affects the deceleration rate of all in-cab control options.



NOTE

This parameter is for MX engines only.

Table 168: Decelerate Ramp Rate (N522)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N522 | 250 | 10 | 1000 | RPM/S |

Increment Amount (N526)

This setting controls the amount the engine speed is increased with the short press of the Set switch. This setting is closely connected with *Maximum Rate of Engine Speed INCREASE (N524)* on page 131 .

**NOTE**

This parameter is for MX engines only.

Table 169: Increment Amount (N526)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N526 | 50 | 10 | 1000 | RPM |

Decrement Amount (N527)

This setting controls the amount the engine speed decreases when the operator short presses the Resume switch. This setting is closely connected with [Maximum Rate of Engine Speed DECREASE \(N525\)](#) on page 132 .

**NOTE**

This parameter is for MX engines only.

Table 170: Decrement Amount (N527)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N527 | 50 | 10 | 1000 | RPM |

Preset Increment/Decrement Switch Type (N543)

This setting controls the type of presets available while in remote [PTO](#) mode.

The possible values for this setting are:

- 0 - Preset engine settings disabled
- 1 - Enable Toggle (6 presets)
- 2 - Enable Dedicated (2 presets)

If using option 1, the presets are adjusted using [Toggle Preset 1 \(N529\)](#) on page 138 , [Toggle Preset 2 \(N530\)](#) on page 139 , [Toggle Preset 3 \(N531\)](#) on page 139 , [Toggle Preset 4 \(N532\)](#) on page 139 , [Toggle Preset 5 \(N533\)](#) on page 140 , and [Toggle Preset 6 \(N534\)](#) on page 140 . If using option 2, the presets are adjusted using [Dedicated Preset 1 \(N535\)](#) on page 141 and [Dedicated Preset 2 \(N536\)](#) on page 141 .

**NOTE**

This parameter is for MX engines only.

Table 171: Preset Increment/Decrement Switch Type (N543)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N543 | 2 | 0 | 2 | DISCRETE |

Set/Res Enabled (N610)

This setting is used to enable cab *PTO* controls using the Enable/Disable switch in the cab. If this setting is enabled, cab PTO functions can be activated using the Enable/Disable switch on the cab's dashboard or steering wheel (if installed).

**NOTE**

This parameter is for MX engines only.

Table 172: Set/Res Enabled (N610)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N610 | Enabled | Disabled | Enabled | FLAG |

PTO: Cab Station Presets**Toggle Preset 1 (N529)**

This setting controls the cab pre-programmed speed 1 variable. This option is only available if *Preset Increment/Decrement Switch Type (N543)* on page 137 is set to a value of "1". The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 173: Toggle Preset 1 (N529)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N529 | 800 | 1 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in *Engine speed lower limit while in REMOTE PTO mode (N603)* on page 132 and lower than the *Maximum Engine Speed - Switch Controlled (N520)* on page 131 . If there is an entry in *Toggle Preset 2 (N530)* on page 139 , then the entry in this field must be lower than that value instead.

Toggle Preset 2 (N530)

This setting controls the cab pre-programmed speed 2 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N543\)](#) on page 137 is set to a value of "1" and there is a value entered in [Toggle Preset 1 \(N529\)](#) on page 138 . The preset is reached by pressing the increment/decrement (+/-) switch.



NOTE

This parameter is for MX engines only.

Table 174: Toggle Preset 2 (N530)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N530 | 900 | 0 | 2200 | RPM |



NOTE

The value entered in this variable must be higher than the entry in [Toggle Preset 1 \(N529\)](#) on page 138 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 . If there is an entry in [Toggle Preset 3 \(N531\)](#) on page 139 , then the entry in this field must be lower than that value instead.

Toggle Preset 3 (N531)

This setting controls the cab pre-programmed speed 3 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N543\)](#) on page 137 is set to a value of "1" and there is a value entered in [Toggle Preset 2 \(N530\)](#) on page 139 . The preset is reached by pressing the increment/decrement (+/-) switch.



NOTE

This parameter is for MX engines only.

Table 175: Toggle Preset 3 (N531)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N531 | 1000 | 0 | 2200 | RPM |



NOTE

The value entered in this variable must be higher than the entry in [Toggle Preset 2 \(N530\)](#) on page 139 ,and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 . If there is an entry in [Toggle Preset 4 \(N532\)](#) on page 139 , then the entry in this field must be lower than that value instead.

Toggle Preset 4 (N532)

This setting controls the cab pre-programmed speed 4 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N543\)](#) on page 137 is set to a value of "1" and there is a

value entered in [Toggle Preset 3 \(N531\)](#) on page 139 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 176: Toggle Preset 4 (N532)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N532 | 1100 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 3 \(N531\)](#) on page 139 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 . If there is an entry in [Toggle Preset 5 \(N533\)](#) on page 140 , then the entry in this field must be lower than that value instead.

Toggle Preset 5 (N533)

This setting controls the cab pre-programmed speed 5 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N543\)](#) on page 137 is set to a value of "1" and there is a value entered in [Toggle Preset 4 \(N532\)](#) on page 139 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 177: Toggle Preset 5 (N533)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N533 | 1200 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 4 \(N532\)](#) on page 139 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 . If there is an entry in [Toggle Preset 6 \(N534\)](#) on page 140 , then the entry in this field must be lower than that value instead.

Toggle Preset 6 (N534)

This setting controls the cab pre-programmed speed 6 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N543\)](#) on page 137 is set to a value of "1" and there is a value entered in [Toggle Preset 5 \(N533\)](#) on page 140 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 178: Toggle Preset 6 (N534)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N534 | 1300 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 5 \(N533\)](#) on page 140 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131.

Dedicated Preset 1 (N535)

This setting controls the cab dedicated speed 1 variable. This speed is set by pressing the decrement (-) button on the increment/decrement (+/-) switch. This option is only available if [Preset Increment/Decrement Switch Type \(N543\)](#) on page 137 is set to a value of "2".

**NOTE**

This parameter is for MX engines only.

Table 179: Dedicated Preset "-" (N535)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N535 | 800 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Engine speed lower limit while in REMOTE PTO mode \(N603\)](#) on page 132 and lower than the entry in [Dedicated Preset 2 \(N536\)](#) on page 141.

Dedicated Preset 2 (N536)

This setting controls the cab dedicated speed 2 variable. This speed is set by pressing the increment (+) button on the increment/decrement (+/-) switch. This option is only available if [Preset Increment/Decrement Switch Type \(N543\)](#) on page 137 is set to a value of "2" and there is a value entered in [Dedicated Preset 1 \(N535\)](#) on page 141.

**NOTE**

This parameter is for MX engines only.

Table 180: Dedicated Preset "+" (N536)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N536 | 900 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Dedicated Preset 1 \(N535\)](#) on page 141 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 .

PTO: Cab Station Custom Presets

Custom Preset 1 Functionality (N537)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote [PTO](#) modes. This setting enables using cab switch 1 to set engine speed during cab station PTO Mode. When this setting is enabled, using the associated switch sets the engine speed to the value defined in [Custom Preset 1 \(N538\)](#) on page 142 .

**NOTE**

See [Custom Preset 1 Functionality \(N570\)](#) on page 156 for information on enabling engine speed control using cab switch 1 during remote PTO mode.

**NOTE**

This parameter is for MX engines only.

Table 181: Custom Preset 1 Functionality (N537)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N537 | Cancel | Cancel | Latch | FLAG |

Custom Preset 1 (N538)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote [PTO](#) modes. This setting indicates the speed the engine goes to when cab switch 1 is enabled during cab station PTO mode. This setting requires [Custom Preset 1 Functionality \(N537\)](#) on page 142 to be enabled.

**NOTE**

See [Custom Preset 1 \(N571\)](#) on page 157 for information on setting the engine speed on cab switch 1 during remote PTO mode.

**NOTE**

This parameter is for MX engines only.

Table 182: Custom Preset 1 (N538)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N538 | 750 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Remote: Minimum Engine Speed \(N602\)](#) on page 147 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 . If there is an entry in [Custom Preset 2 \(N540\)](#) on page 143 , then the entry in this field must be lower than that value instead.

Custom Preset 2 Functionality (N539)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote [PTO](#) modes. This setting enables using cab switch 2 to set engine speed during cab station PTO Mode. When this setting is enabled, using the associated switch sets the engine speed to the value defined in [Custom Preset 2 Functionality \(N539\)](#) on page 143 .

**NOTE**

This parameter is for MX engines only.

Table 183: Custom Preset 2 Functionality (N539)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N539 | Cancel | Cancel | Latch | FLAG |

Custom Preset 2 (N540)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote [PTO](#) modes. This setting indicates the speed the engine goes to when cab switch 2 is enabled during cab station PTO mode. This setting requires [Custom Preset 2 Functionality \(N539\)](#) on page 143 to be enabled. There must also be an entry in [Custom Preset 1 \(N538\)](#) on page 142 .

**NOTE**

See for setting the engine speed on cab switch 1 during remote PTO mode.

**NOTE**

This parameter is for MX engines only.

Table 184: Custom Preset 2 (N540)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N540 | 850 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Custom Preset 1 \(N538\)](#) on page 142 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 . If there is an entry in [Custom Preset 3 \(N542\)](#) on page 144 , then the entry in this field must be lower than that value instead.

Custom Preset 3 Functionality (N541)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote [PTO](#) modes. This setting enables using cab switch 3 to set engine speed during cab station PTO Mode. When this setting is enabled, using the associated switch sets the engine speed to the value defined in [Custom Preset 3 \(N542\)](#) on page 144 .

**NOTE**

This parameter is for MX engines only.

Table 185: Custom Preset 3 Functionality (N541)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N541 | Cancel | Cancel | Latch | FLAG |

Custom Preset 3 (N542)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote [PTO](#) modes. This setting indicates the speed the engine goes to when cab switch 3 is enabled during cab station PTO mode. This setting requires [Custom Preset 3 Functionality \(N541\)](#) on page 144 to be enabled. There must also be an entry in [Custom Preset 2 \(N540\)](#) on page 143 .

**NOTE**

See for setting the engine speed on cab switch 1 during remote PTO mode.

**NOTE**

This parameter is for MX engines only.

Table 186: Custom Preset 3 (N542)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N542 | 950 | 0 | 2200 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Custom Preset 2 \(N540\)](#) on page 143 and lower than the entry in [Maximum Engine Speed - Switch Controlled \(N520\)](#) on page 131 .

PTO: Remote Station Limits

Maximum Engine Speed - Cab and Remote Accelerator Controlled (N552)

This setting controls the maximum speed the engine can achieve when in remote [PTO](#) Mode using the accelerator pedal or from the remote accelerator. The engine will not go faster than the maximum speed entered no matter how much the accelerator pedal is depressed.

**NOTE**

This parameter is for MX engines only.

Table 187: Maximum Engine Speed - Cab and Remote Accelerator Controlled (N552)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N552 | 2000 | 650 | 2200 | RPM |

Maximum Engine Speed - Switch or TSC1 Controlled (N553)

This setting controls the maximum speed the engine can achieve when in remote [PTO](#) Mode using the switches. The engine will not go faster than the maximum speed entered no matter how much the switch is depressed.

**NOTE**

This parameter is for MX engines only.

Table 188: Maximum Engine Speed - Switch or TSC1 Controlled (N553)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N553 | 2000 | 650 | 2200 | RPM |

Maximum Vehicle Speed (N556)

This setting controls the vehicle speed limit while in remote *PTO* mode. This setting affects all input methods of increasing vehicle speed.



NOTE

If the value in *Park Brake Interlock (N583)* on page 149 is not 0, then the entry in this field must be set to the maximum value.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 189: Maximum Vehicle Speed (N556)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N556 | 0 | 0 | 6.21 | MPH |

Maximum Rate of Engine Speed INCREASE (N557)

This setting controls the rate of engine speed increase in cab station *PTO* mode. The value entered in this setting limits the rate of engine speed increase to a maximum number of RPMs for any in-cab controls. This setting is closely connected with *Increment Amount (N559)* on page 151 .



NOTE

This parameter is for MX engines only.

Table 190: Maximum Rate of Engine Speed INCREASE (N557)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N557 | 1000 | 10 | 2000 | RPM/S |

Maximum Rate of Engine Speed DECREASE (N558)

This setting controls the rate of engine speed decrease in cab station *PTO* mode. The value entered in this setting limits the rate of engine speed decrease to a maximum number of RPMs for any in-cab controls. This setting is closely connected with *Decrement Amount (N560)* on page 152 .



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

**NOTE**

This parameter is for MX engines only.

Table 191: Maximum Rate of Engine Speed DECREASE (N558)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N558 | 1000 | 10 | 2000 | RPM/S |

Maximum Engine Torque Output (N561)

This setting controls the engine torque limit when the vehicle is in remote *PTO* mode. The engine torque rate will not go higher than the value entered.

**NOTE**

This parameter is for MX engines only.

Table 192: Maximum Engine Torque Output (N561)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N561 | 1903 | 148 | 1903 | LB-FT |

Remote: Minimum Engine Speed (N602)

This setting controls the minimum speed the engine will operate at while in cab station PTO Mode. The engine will retain this minimum speed if no other commands occur to increase the engine speed.

**NOTE**

This parameter is for MX engines only.

Table 193: Remote: Minimum Engine Speed (N602)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N602 | 650 | 650 | 2200 | RPM |

PTO: Remote Station Engine Speed Control Interlocks

Clutch Interlock (N580)

This setting controls if remote **PTO** mode is enabled when the clutch pedal is pressed.

The possible values for this setting are:

0 - Remote PTO mode is not enabled when the clutch pedal is pressed.

1 - Remote PTO mode is enabled when the clutch pedal is pressed. Pressing the cab accelerator pedal does not disable remote PTO mode.

2 - Remote PTO mode is enabled when the clutch pedal is pressed. Pressing the cab accelerator pedal disables remote PTO mode.



NOTE

This parameter is for MX engines only.

Table 194: Clutch Interlock (N580)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N580 | 2 | 0 | 2 | DISCRETE |

Custom Interlock (N581)

This setting controls if remote **PTO** mode is enabled when a custom interlock input is active.

The possible values for this setting are:

0 - Remote PTO mode is not enabled when a custom interlock input is active.

1 - Remote PTO mode is enabled when a custom interlock input is active. Pressing the cab accelerator pedal does not disable remote PTO mode.

2 - Remote PTO mode is enabled when a custom interlock input is active. Pressing the cab accelerator pedal disables remote PTO mode.



NOTE

This parameter is for MX engines only.

Table 195: Custom Interlock (N581)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N581 | 0 | 0 | 2 | DISCRETE |

Neutral Interlock (N582)

This setting controls if remote **PTO** mode is disabled when the vehicle is not in neutral.

The possible values for this setting are:

0 - Remote PTO mode is not disabled when the vehicle is not in neutral.

1 - Remote PTO mode is disabled when the vehicle is not in neutral. Pressing the cab accelerator pedal does not disable remote PTO mode.

2 - Remote PTO mode is disabled when the vehicle is not in neutral. Pressing the cab accelerator pedal disables remote PTO mode.



NOTE

This parameter is for MX engines only.

Table 196: Neutral Interlock (N582)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N582 | 2 | 0 | 2 | DISCRETE |

Park Brake Interlock (N583)

This setting controls if remote **PTO** mode is disabled when the parking brake is set or not.

The possible values for this setting are:

0 - Remote PTO mode is not disabled when the parking brake is not set.

1 - Remote PTO mode is disabled when the parking brake is not set. Pressing the cab accelerator pedal does not disable remote PTO mode.

2 - Remote PTO mode is disabled when the parking brake is not set. Pressing the cab accelerator pedal disables remote PTO mode.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 197: Park Brake Interlock (N583)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N583 | 2 | 0 | 2 | DISCRETE |

Service Brake Interlock, Pressed equals No PTO Speed Control (N584)

This setting controls if remote **PTO** mode is disabled when the service brake is pressed.

The possible values for this setting are:

0 - Remote PTO mode is not disabled when the service brake is pressed.

1 - Remote PTO mode is disabled when the service brake is pressed. Pressing the cab accelerator pedal does not disable remote PTO mode.

2 - Remote PTO mode is disabled when the service brake is pressed. Pressing the cab accelerator pedal disables remote PTO mode.

**NOTE**

This parameter is for MX engines only.

Table 198: Service Brake Interlock, Pressed equals No PTO Speed Control (N584)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N584 | 2 | 0 | 2 | DISCRETE |

Service Brake Interlock, NOT Pressed equals No PTO Speed Control (N585)

This setting controls if remote **PTO** mode is disabled when the service brake is not pressed.

The possible values for this setting are:

- 0 - Remote PTO mode is not disabled when the service brake is not pressed.
- 1 - Remote PTO mode is disabled when the service brake is not pressed. Pressing the cab accelerator pedal does not disable remote PTO mode.
- 2 - Remote PTO mode is disabled when the service brake is not pressed. Pressing the cab accelerator pedal disables remote PTO mode.

**NOTE**

This parameter is for MX engines only.

Table 199: Service Brake Interlock, NOT Pressed equals No PTO Speed Control (N585)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N585 | 0 | 0 | 2 | DISCRETE |

PTO: Remote Station Engine Speed Control Options

Set/Res Enabled (N611)

This setting is enables the remote Set/Resume switches for Remote **PTO** use.

**NOTE**

This parameter is for MX engines only.

Table 200: Set/Res Enabled (N611)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N611 | Enabled | Disabled | Enabled | FLAG |

Accelerate Ramp Rate (N554)

This setting controls the engine acceleration rate during remote PTO mode. This setting affects the acceleration rate of all remote control options.

Table 201: Accelerate Ramp Rate (N554)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N554 | 250 | 10 | 1000 | RPM/S |

Decelerate Ramp Rate (N555)

This setting controls the engine deceleration rate during remote PTO mode. This setting affects the deceleration rate of all remote control options.

Table 202: Decelerate Ramp Rate (N555)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N555 | 250 | 10 | 1000 | RPM/S |

Increment Amount (N559)

This setting controls the amount the engine speed is increased when a *PSC* increase command is requested from a remote control. This setting is closely connected with *Maximum Rate of Engine Speed INCREASE (N557)* on page 146 .



NOTE

This parameter is for MX engines only.

Table 203: Increment Amount (N559)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N559 | 50 | 10 | 1000 | RPM |

Decrement Amount (N560)

This setting controls the amount the engine speed is decreased when a *PSC* increase command is requested from a remote control. This setting is closely connected with *Maximum Rate of Engine Speed DECREASE (N558)* on page 146 .



NOTE

This parameter is for MX engines only.

Table 204: Decrement Amount (N560)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N560 | 50 | 10 | 1000 | RPM |

PTO: Remote Station Presets

Toggle Preset 1 (N562)

This setting controls the remote pre-programmed speed 1 variable. This option is only available if *Preset Increment/Decrement Switch Type (N576)* on page 155 is set to a value of "1". The preset is reached by pressing the increment/decrement (+/-) switch.



NOTE

This parameter is for MX engines only.

Table 205: Toggle Preset 1 (N562)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N562 | 800 | 0 | 2000 | RPM |



NOTE

The value entered in this variable must be higher than the entry in *Engine speed lower limit while in REMOTE PTO mode (N603)* on page 132 and lower than the entry in *Maximum Engine Speed - Switch or TSC1 Controlled (N553)* on page 145 . If there is an entry in *Toggle Preset 2 (N530)* on page 139 , then the entry in this field must be lower than that value instead.

Toggle Preset 2 (N563)

This setting controls the cab pre-programmed speed 2 variable. This option is only available if *Preset Increment/Decrement Switch Type (N576)* on page 155 is set to a value of "1" and there is a value entered in *Toggle Preset 1 (N562)* on page 152 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 206: Toggle Preset 2 (N563)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N563 | 900 | 0 | 2000 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 1 \(N562\)](#) on page 152 and lower than the entry in [Maximum Engine Speed - Switch or TSC1 Controlled \(N553\)](#) on page 145 . If there is an entry in [Toggle Preset 3 \(N564\)](#) on page 153 , then the entry in this field must be lower than that value instead.

Toggle Preset 3 (N564)

This setting controls the cab pre-programmed speed 3 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N576\)](#) on page 155 is set to a value of "1" and there is a value entered in [Toggle Preset 2 \(N563\)](#) on page 152 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 207: Toggle Preset 3 (N564)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N564 | 1000 | 0 | 2000 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 2 \(N563\)](#) on page 152 and lower than the entry in [Maximum Engine Speed - Switch or TSC1 Controlled \(N553\)](#) on page 145 . If there is an entry in [Toggle Preset 4 \(N565\)](#) on page 153 , then the entry in this field must be lower than that value instead.

Toggle Preset 4 (N565)

This setting controls the cab pre-programmed speed 4 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N576\)](#) on page 155 is set to a value of "1" and there is a value entered in [Toggle Preset 3 \(N564\)](#) on page 153 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 208: Toggle Preset 4 (N565)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N565 | 1100 | 0 | 2000 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 3 \(N564\)](#) on page 153 and lower than the entry in [Maximum Engine Speed - Switch or TSC1 Controlled \(N553\)](#) on page 145 . If there is an entry in [Toggle Preset 5 \(N566\)](#) on page 154 , then the entry in this field must be lower than that value instead.

Toggle Preset 5 (N566)

This setting controls the cab pre-programmed speed 5 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N576\)](#) on page 155 is set to a value of "1" and there is a value entered in [Toggle Preset 4 \(N565\)](#) on page 153 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 209: Toggle Preset 5 (N566)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N566 | 1200 | 0 | 2000 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 4 \(N565\)](#) on page 153 and lower than the entry in [Maximum Engine Speed - Switch or TSC1 Controlled \(N553\)](#) on page 145 . If there is an entry in [Toggle Preset 6 \(N567\)](#) on page 154 , then the entry in this field must be lower than that value instead.

Toggle Preset 6 (N567)

This setting controls the cab pre-programmed speed 6 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N576\)](#) on page 155 is set to a value of "1" and there is a value entered in [Toggle Preset 5 \(N566\)](#) on page 154 . The preset is reached by pressing the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 210: Toggle Preset 6 (N567)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N567 | 1300 | 0 | 2000 | RPM |

**NOTE**

The value entered in this variable must be higher than the entry in [Toggle Preset 5 \(N566\)](#) on page 154 and lower than the entry in [Maximum Engine Speed - Switch or TSC1 Controlled \(N553\)](#) on page 145 .

Dedicated Preset 1 (N568)

This setting controls the remote dedicated preset 1 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N576\)](#) on page 155 is set to a value of "2". The preset is reached by pressing the decrement (-) button on the increment/decrement (+/-) switch. The entry in this setting must be less than or equal to the entry in [Dedicated Preset 2 \(N569\)](#) on page 155 .

**NOTE**

This parameter is for MX engines only.

Table 211: Dedicated Preset 1 (N568)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N568 | 800 | 0 | 2000 | RPM |

Dedicated Preset 2 (N569)

This setting controls the remote dedicated preset 2 variable. This option is only available if [Preset Increment/Decrement Switch Type \(N576\)](#) on page 155 is set to a value of "2". The preset is reached by pressing the increment (+) button on the increment/decrement (+/-) switch.

**NOTE**

This parameter is for MX engines only.

Table 212: Dedicated Preset 2 (N569)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N569 | 900 | 0 | 2000 | RPM |

Preset Increment/Decrement Switch Type (N576)

This setting controls the type of presets available while in remote [PTO](#) mode. Presets are reached by pressing the increment/decrement (+/-) switch.

The possible values for this setting are:

- 0 - Preset engine settings disabled
- 1 - Enable Toggle (6 presets)
- 2 - Enable Dedicated (2 presets)

If using option 1, the presets are adjusted using [Toggle Preset 1 \(N562\)](#) on page 152 , [Toggle Preset 2 \(N563\)](#) on page 152 , [Toggle Preset 3 \(N564\)](#) on page 153 , [Toggle Preset 4 \(N565\)](#) on page 153 , [Toggle Preset 5 \(N566\)](#) on page 154 , and [Toggle Preset 6 \(N567\)](#) on page 154 . If using option 2, the presets are adjusted using [Dedicated Preset 1 \(N568\)](#) on page 155 and [Dedicated Preset 2 \(N569\)](#) on page 155 .



NOTE

This parameter is for MX engines only.

Table 213: Preset +/- Switch Type (N576)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N576 | 2 | 0 | 2 | DISCRETE |

PTO: Cab And/Or Remote Station Custom Presets

Custom Preset 1 Functionality (N570)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote [PTO](#) modes. This setting enables using cab switch 1 to set engine speed during remote PTO Mode. When this setting is enabled, using the associated switch sets the engine speed to the value defined in [Custom Preset 1 \(N571\)](#) on page 157 .



NOTE

See [Custom Preset 1 Functionality \(N537\)](#) on page 142 for information on enabling engine speed control using cab switch 1 during cab station PTO mode.



NOTE

This parameter is for MX engines only.

Table 214: Custom Preset 1 Functionality (N570)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N570 | Cancel | Cancel | Latch | FLAG |

Custom Preset 1 (N571)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote *PTO* modes. This setting indicates the speed the engine goes to when cab switch 1 is enabled during remote PTO mode. This setting requires *Custom Preset 1 Functionality (N570)* on page 156 to be enabled.



NOTE

See *Custom Preset 1 (N538)* on page 142 for information on setting the engine speed on cab switch 1 during cab station PTO mode.



NOTE

This parameter is for MX engines only.

Table 215: Custom Preset 1 (N571)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N571 | 750 | 0 | 2000 | RPM |



NOTE

The value entered in this variable must be higher than the entry in *Engine speed lower limit while in REMOTE PTO mode (N603)* on page 132 and lower than the entry in *Maximum Engine Speed - Switch or TSC1 Controlled (N553)* on page 145 . If there is an entry in *Custom Preset 2 (N573)* on page 158 , then the entry in this field must be lower then that value instead.

Custom Preset 2 Functionality (N572)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote *PTO* modes. This setting enables using cab switch 2 to set engine speed during remote PTO Mode. When this setting is enabled, using the associated switch sets the engine speed to the value defined in *Custom Preset 2 (N573)* on page 158 .



NOTE

See *Custom Preset 2 Functionality (N539)* on page 143 for information on enabling engine speed control using cab switch 1 during cab station PTO mode.



NOTE

This parameter is for MX engines only.

Table 216: Custom Preset 2 Functionality (N572)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N572 | Cancel | Cancel | Latch | FLAG |

Custom Preset 2 (N573)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote *PTO* modes. This setting indicates the speed the engine goes to when cab switch 2 is enabled during remote PTO mode. This setting requires [Custom Preset 2 Functionality \(N572\)](#) on page 157 to be enabled.



NOTE

See [Custom Preset 2 \(N540\)](#) on page 143 for information on setting the engine speed on cab switch 1 during cab station PTO mode.



NOTE

This parameter is for MX engines only.

Table 217: Custom Preset 2 (N573)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N573 | 850 | 0 | 2000 | RPM |



NOTE

The value entered in this variable must be higher than the entry in [Custom Preset 1 \(N571\)](#) on page 157 and lower than the entry in [Maximum Engine Speed - Switch or TSC1 Controlled \(N553\)](#) on page 145 . If there is an entry in [Custom Preset 3 \(N575\)](#) on page 159 , then the entry in this field must be lower then that value instead.

Custom Preset 3 Functionality (N574)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote *PTO* modes. This setting enables using cab switch 3 to set engine speed during remote PTO Mode. When this setting is enabled, using the associated switch sets the engine speed to the value defined in [Custom Preset 3 \(N575\)](#) on page 159 .



NOTE

See [Custom Preset 3 Functionality \(N541\)](#) on page 144 for information on enabling engine speed control using cab switch 1 during cab station PTO mode.



NOTE

This parameter is for MX engines only.

Table 218: Custom Preset 3 Functionality (N574)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N574 | Cancel | Cancel | Latch | FLAG |

Custom Preset 3 (N575)

There are up to three custom preset switches available in the cab that can be set up to control engine speed, both during cab station and remote *PTO* modes. This setting indicates the speed the engine goes to when cab switch 3 is enabled during remote PTO mode. This setting requires [Custom Preset 3 Functionality \(N574\)](#) on page 158 to be enabled.



NOTE

See [Custom Preset 3 \(N542\)](#) on page 144 for information on setting the engine speed on cab switch 1 during cab station PTO mode.



NOTE

This parameter is for MX engines only.

Table 219: Custom Preset 3 (N575)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N575 | 950 | 0 | 2000 | RPM |



NOTE

The value entered in this variable must be higher than the entry in [Custom Preset 2 \(N573\)](#) on page 158 and lower than the entry in [Maximum Engine Speed - Switch or TSC1 Controlled \(N553\)](#) on page 145 .

PTO: Cab And/Or Remote Station: Engine Speed Control Interlocks

Custom Interlock Switch Behavior (N888)

This setting determines if open circuit or closed circuit is treated as an active interlock.



NOTE

This parameter is for MX engines only.

Table 220: Custom Interlock Switch Behavior (N888)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N888 | ON | OFF | ON | FLAG |

PTO: Pedal

Enable slew rate limit for speed pedal if configured for speed control (N886)

This setting enables the slew rate limit using the accelerator pedal to control engine speed during *PTO* mode.



NOTE

This parameter is for MX engines only.

Table 221: Enable slew rate limit for speed pedal if configured for speed control (N886)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N886 | Disabled | Disabled | Enabled | FLAG |

Enable slew rate limit for torque pedal if configured for torque control (N887)

This setting enables the slew rate limit using the accelerator pedal to control engine torque during *PTO* mode.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 222: Enable slew rate limit for torque pedal if configured for torque control (N887)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N887 | Disabled | Disabled | Enabled | FLAG |

PTO: Remote CAN Control

Enable Body Control from Source Address 7 (N586)

This setting controls use of a remote *PTO* switch from SA7.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 223: Enable Body Control from Source Address 7 (N586)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N586 | Enabled | Disabled | Enabled | DISCRETE |

Enable Body Control from Source Address 33 (N587)

This setting controls use of a remote *PTO* switch from SA33.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 224: Enable Body Control from Source Address 33 (N587)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N587 | Enabled | Disabled | Enabled | DISCRETE |

PTO: Advanced Settings

Disables PSC with Stop Lamp Active (N516)

This setting disables *PSC* for both cab and remote station controls when Stop Lamp is illuminated.



WARNING

Continued command of engine speed when a stop engine lamp is illuminated may damage the engine.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 225: Disables PSC with Stop Lamp Active (N516)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N516 | Enabled | Disabled | Enabled | DISCRETE |

Allows Remote additional inputs to control engine speed in CAB PTO mode (N913)

This setting allows remote additional inputs to control engine speed in CAB *PTO* mode.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 226: Allows Remote additional inputs to control engine speed in CAB PTO mode (N913)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N913 | ON | OFF | OFF | FLAG |

Retarder Interlock (N914)

This setting cancels *PSC* when retarders become active.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.



NOTE

This parameter is for MX engines only.

Table 227: Retarder Interlock (N914)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N914 | OFF | OFF | ON | DISCRETE |

Chapter 21 | CMP - ANALOG DTC ENABLE/ DISABLE

| | |
|--|-----|
| Chassis Modules (CMP and CMS) | 164 |
| Fuel Level Sensor (Secondary) (N401) | 164 |
| Main Transmission Oil Temp (N403) | 164 |
| Filter Gauges (fuel filter restriction) (N404) | 164 |
| Axle Temp Gauges (Rear Rear) (N406) | 165 |
| Battery Energy Monitoring (via Ammeter) (N407) | 165 |
| Remote Throttle Input (N408) | 165 |
| Axle Temp Gauges (Rear Front) (N409) | 165 |

Chassis Modules (CMP and CMS)

There are two modules for chassis component control; the *CMP* and the *Chassis Module Secondary (CMS)* (Also referred to as the *SCM*, and *Optional Chassis Module (OCM)*, respectively). The *CMP* is standard equipment for all *VECU* system trucks as it controls major functions such as exterior lighting, fuel level, and other options. The *CMS* may be found on trucks built from the factory with certain options such as more than two lift axles, snow plow, or a *Body Builder CAN (B-CAN)*.

Chassis Module Parameters

These parameters will enable or disable fault code monitoring of current and voltage at the chassis module for the assigned device. These parameters could be useful if the device is multiplexed, factory installed, and the specific parameter is enabled to monitor.

Fuel Level Sensor (Secondary) (N401)

This setting enables fault code monitoring of the secondary fuel level sensor.

Table 228: Fuel Level Sensor (Secondary) (N401)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N401 | OFF | OFF | ON | FLAG |

Main Transmission Oil Temp (N403)

This setting enables fault code monitoring of the main transmission oil temperature.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 229: Main Transmission Oil Temp (N403)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N403 | OFF | OFF | ON | FLAG |

Filter Gauges (fuel filter restriction) (N404)

This setting enables fault code monitoring of the filter gauges and fuel filter restriction.

Table 230: Filter Gauges (fuel filter restriction) (N404)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N404 | OFF | OFF | ON | FLAG |

Axle Temp Gauges (Rear Rear) (N406)

This setting enables fault code monitoring of the rear rear axle temperature gauges.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 231: Axle Temp Gauges (Rear Rear) (N406)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N406 | OFF | OFF | ON | FLAG |

Battery Energy Monitoring (via Ammeter) (N407)

This setting enables fault code monitoring of the battery energy levels via ammeter.

Table 232: Battery Energy Monitoring (via Ammeter) (N407)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N407 | OFF | OFF | ON | FLAG |

Remote Throttle Input (N408)

This setting enables fault code monitoring of the remote throttle input.

Table 233: Remote Throttle Input (N408)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N408 | OFF | OFF | ON | FLAG |

Axle Temp Gauges (Rear Front) (N409)

This setting enables fault code monitoring of the rear front axle temperature gauges.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 234: Axle Temp Gauges (Rear Front) (N409)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N409 | OFF | OFF | ON | FLAG |

Chapter 22 | CMS - ANALOG DTC ENABLE/ DISABLE

| | |
|---|-----|
| Chassis Modules (CMP and CMS) | 168 |
| Auto Start/Stop Hood Tilt Switch (N421) | 168 |
| Axle Temp Gauges (Rear Center) (N422) | 168 |
| Axle Temp Gauges (Steer) (N423) | 168 |
| Fuel Temp Sensor (N424) | 169 |
| Oil Temp Gauges (Aux Trans) (N429) | 169 |
| Oil Temp Gauges (Split shaft PTO/transfer case) (N430) | 169 |
| Lift Axle Air PressureGauge (#1) - DTC Enable (N425) | 170 |
| Lift Axle Air PressureGauge (#2) - DTC Enable (N426) | 170 |
| Lift Axle Air PressureGauge (#3) - DTC Enable (N427) | 170 |
| Lift Axle Air PressureGauge (tag) - DTC Enable (N428) | 171 |
| Spare Analog Input DTC Enable (NA-OCM60) (N431) | 171 |
| Spare Analog Input DTC Enable (NA-OCM61) (N432) | 171 |
| Spare Analog Input DTC Enable (NA-OCM62) (N433) | 171 |
| Suspension Load Air Pressure Gauge #2 - DTC Enable (N434) | 172 |

Chassis Modules (CMP and CMS)

There are two modules for chassis component control; the **CMP** and the **CMS** (Also referred to as the **SCM**, and **OCM**, respectively). The **CMP** is standard equipment for all **VECU** system trucks as it controls major functions such as exterior lighting, fuel level, and other options. The **CMS** may be found on trucks built from the factory with certain options such as more than two lift axles, snow plow, or a **B-CAN**.

Chassis Module Parameters

These parameters will enable or disable fault code monitoring of current and voltage at the chassis module for the assigned device. These parameters could be useful if the device is multiplexed, factory installed, and the specific parameter is enabled to monitor.

Auto Start/Stop Hood Tilt Switch (N421)

This setting enables fault code monitoring of the auto start/stop hood tilt switch.

Table 235: Auto Start/Stop Hood Tilt Switch (N421)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N421 | OFF | OFF | ON | FLAG |

Axle Temp Gauges (Rear Center) (N422)

This setting enables fault code monitoring of the rear center axle temperature gauges.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 236: Axle Temp Gauges (Rear Center) (N422)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N422 | OFF | OFF | ON | FLAG |

Axle Temp Gauges (Steer) (N423)

This setting enables fault code monitoring of the steer axle temperature gauges.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 237: Axle Temp Gauges (Steer) (N423)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N423 | OFF | OFF | ON | FLAG |

Fuel Temp Sensor (N424)

This setting enables fault code monitoring of the fuel temperature sensor.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 238: Fuel Temp Sensor (N424)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N424 | OFF | OFF | ON | FLAG |

Oil Temp Gauges (Aux Trans) (N429)

This setting enables fault code monitoring of the auxiliary transmission oil temperature gauges.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 239: Oil Temp Gauges (Aux Trans) (N429)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N429 | OFF | OFF | ON | FLAG |

Oil Temp Gauges (Split shaft PTO/transfer case) (N430)

This setting enables fault code monitoring of the split shaft PTO transfer case oil temperature gauges.

**NOTE**

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 240: Oil Temp Gauges (Split shaft PTO/transfer case) (N430)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N430 | OFF | OFF | ON | FLAG |

Lift Axle Air PressureGauge (#1) - DTC Enable (N425)

This setting enables fault code monitoring of the #1 lift axle pressure gauge.

Table 241: Lift Axle Air PressureGauge (#1) - DTC Enable (N425)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N425 | OFF | OFF | ON | FLAG |

Lift Axle Air PressureGauge (#2) - DTC Enable (N426)

This setting enables fault code monitoring of the #2 lift axle pressure gauge.

Table 242: Lift Axle Air PressureGauge (#2) - DTC Enable (N426)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N426 | OFF | OFF | ON | FLAG |

Lift Axle Air PressureGauge (#3) - DTC Enable (N427)

This setting enables fault code monitoring of the #3 lift axle pressure gauge.

Table 243: Lift Axle Air PressureGauge (#3) - DTC Enable (N427)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N427 | OFF | OFF | ON | FLAG |

Lift Axle Air PressureGauge (tag) - DTC Enable (N428)

This setting enables fault code monitoring of the lift axle pressure gauge.

Table 244: Lift Axle Air PressureGauge (tag) - DTC Enable (N428)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N428 | OFF | OFF | ON | FLAG |

Spare Analog Input DTC Enable (NA-OCM60) (N431)

This setting enables NA-OCM60 for fault code monitoring.

Table 245: Spare Analog Input DTC Enable (NA-OCM60) (N431)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N431 | OFF | OFF | ON | FLAG |

Spare Analog Input DTC Enable (NA-OCM61) (N432)

This setting enables NA-OCM61 for fault code monitoring.

Table 246: Spare Analog Input DTC Enable (NA-OCM61) (N432)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N432 | OFF | OFF | ON | FLAG |

Spare Analog Input DTC Enable (NA-OCM62) (N433)

This setting enables NA-OCM62 for fault code monitoring.

Table 247: Spare Analog Input DTC Enable (NA-OCM62) (N433)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N433 | OFF | OFF | ON | FLAG |

Suspension Load Air Pressure Gauge #2 - DTC Enable (N434)

This setting enables fault code monitoring of the suspension load air pressure gauge #2.

Table 248: Suspension Load Air Pressure Gauge #2 - DTC Enable (N434)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N434 | OFF | OFF | ON | FLAG |

Chapter 23 | AFTER-TREATMENT

Exterior Notification of Regen 174

Exterior Notification for Regen Active (N915) 174

Exterior Notification of Regen

An external signal shall be provided to notify the operator that regeneration is occurring. The intention is that this signal shall drive a relay to power a notification method such as beacon lamps or horns. The parameter can disable the feature or can turn on the exterior device either in any active *PTO* state or only on when the *PTO* is turned on. In any case the function will only turn on when the vehicle is parked and an active regeneration is occurring.

Exterior Notification for Regen Active (N915)

This setting controls when exterior notifications occur during active regeneration.

The possible values for this setting are:

- 0 - OFF
- 1 - ON with Regen Active and Park Brake
- 2 - Regen Active with Park Brake and PTO active



NOTE

This parameter is for MX engines only.

Table 249: Exterior Notification for Regen Active (N915)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N915 | 1 | 0 | 2 | DISCRETE |

Chapter 24 | CMP - DIGITAL OUTPUT FMI 5 (UNDERCURRENT / OPEN)

| | |
|--|-----|
| Chassis Modules (CMP and CMS) | 176 |
| Lift Axle #1 Solenoid Undercurrent/Open DTC Control (N412) | 176 |
| Lift Axle #2 Solenoid Undercurrent/Open DTC Control (N413) | 176 |
| Electric Over Air Solenoid Kingpin Release (N414) | 176 |
| Direction Indication/Hazard Lights LH Trailer (rear) Undercurrent/Open DTC Control (N415) | 177 |
| Direction Indication/Hazard Lights RH Trailer (rear) Undercurrent/Open DTC Control (N416) | 177 |
| Daytime Running Lights (DRL) LH (Peterbilt) Undercurrent/Open DTC Control (N417) | 177 |
| Daytime Running Lights (DRL) RH (Peterbilt) Undercurrent/Open DTC Control (N418) | 178 |
| Fog/Driving Lamps (front) 1st set Undercurrent/Open DTC Control (N419) | 178 |
| Front Tractor Position Lights (Park Lamps) Undercurrent/Open DTC Control (N420) | 178 |
| Main Beam (High Beam) LH Undercurrent/Open DTC Control (N489) | 179 |
| Main Beam (High Beam) RH Undercurrent/Open DTC Control (N490) | 179 |
| Rear Tractor Position Lamps (Park Lamps) Undercurrent/Open DTC Control (N491) | 179 |
| Reverse Lamps Undercurrent/Open DTC Control (N492) | 179 |
| Tractor Direction Indication, Brake and Hazard - RH Rear Lamp Undercurrent/Open DTC Control (N493) | 180 |
| Tractor Direction Indication, Brake and Hazard - LH Rear Lamp Undercurrent/Open DTC Control (N494) | 180 |
| Reverse Warning (aka Backup Alarm) Undercurrent/Open DTC Control (N495) | 180 |
| Tractor Direction Indication/Hazard/Side Turn Indication RH Front Lamp Undercurrent/Open DTC Control (N496) | 181 |
| Tractor Direction Indication/Hazard/Side Turn Indication LH Front Lamp Undercurrent/Open DTC Control (N497) | 181 |
| Tractor Direction Indication/Hazard/DRL - RH Front Lamp Undercurrent/Open DTC Control (N498) | 181 |
| Tractor Direction Indication/Hazard/DRL - LH Front Lamp Undercurrent/Open DTC Control (N499) | 182 |

Chassis Modules (CMP and CMS)

There are two modules for chassis component control; the **CMP** and the **CMS** (Also referred to as the **SCM**, and **OCM**, respectively). The **CMP** is standard equipment for all **VECU** system trucks as it controls major functions such as exterior lighting, fuel level, and other options. The **CMS** may be found on trucks built from the factory with certain options such as more than two lift axles, snow plow, or a **B-CAN**.

Chassis Module Parameters

These parameters will enable or disable fault code monitoring of current and voltage at the chassis module for the assigned device. These parameters could be useful if the device is multiplexed, factory installed, and the specific parameter is enabled to monitor.

Lift Axle #1 Solenoid Undercurrent/Open DTC Control (N412)

This setting enables fault code monitoring of the lift axle #2 solenoid.

Table 250: Main Beam (High Beam) LH Undercurrent/Open DTC Control (N489)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N489 | ON | OFF | ON | FLAG |

Lift Axle #2 Solenoid Undercurrent/Open DTC Control (N413)

This setting enables fault code monitoring of the lift axle #2 solenoid.

Table 251: Lift Axle #2 Solenoid Undercurrent/Open DTC Control (N413)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N413 | OFF | OFF | ON | FLAG |

Electric Over Air Solenoid Kingpin Release (N414)

This setting enables **EOA** solenoid kingpin release.

Table 252: Electric Over Air Solenoid Kingpin Release (N414)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N414 | ON | OFF | ON | FLAG |

Direction Indication/Hazard Lights LH Trailer (rear) Undercurrent/Open DTC Control (N415)

This setting enables fault code monitoring of the trailer rear left side direction indication/hazard lights.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 253: Direction Indication/Hazard Lights LH Trailer (rear) Undercurrent/Open DTC Control (N415)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N415 | ON | OFF | ON | FLAG |

Direction Indication/Hazard Lights RH Trailer (rear) Undercurrent/Open DTC Control (N416)

This setting enables fault code monitoring of the trailer rear right side direction indication/hazard lights.



NOTE

This parameter must be modified by a PACCAR employee. Contact PACCAR if this parameter needs to be changed.

Table 254: Direction Indication/Hazard Lights RH Trailer (rear) Undercurrent/Open DTC Control (N416)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N416 | ON | OFF | ON | FLAG |

Daytime Running Lights (DRL) LH (Peterbilt) Undercurrent/Open DTC Control (N417)

This setting enables fault code monitoring of the left side daytime running lights.



NOTE

This parameter only applies to Peterbilt trucks.

Table 255: Daytime Running Lights (DRL) LH (Peterbilt) Undercurrent/Open DTC Control (N417)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N417 | OFF | OFF | ON | FLAG |

Daytime Running Lights (DRL) RH (Peterbilt) Undercurrent/Open DTC Control (N418)

This setting enables fault code monitoring of the right side daytime running lights.



NOTE

This parameter only applies to Peterbilt trucks.

Table 256: Daytime Running Lights (DRL) RH (Peterbilt) Undercurrent/Open DTC Control (N418)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N418 | OFF | OFF | ON | FLAG |

Fog/Driving Lamps (front) 1st set Undercurrent/Open DTC Control (N419)

This setting enables fault code monitoring of the first set of front fog/driving lamps.

Table 257: Fog/Driving Lamps (front) 1st set Undercurrent/Open DTC Control (N419)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N419 | OFF | OFF | ON | FLAG |

Front Tractor Position Lights (Park Lamps) Undercurrent/Open DTC Control (N420)

This setting enables fault code monitoring of the front tractor position lights/park lamps.

Table 258: Front Tractor Position Lights (Park Lamps) Undercurrent/Open DTC Control (N420)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N420 | ON | OFF | ON | FLAG |

Main Beam (High Beam) LH Undercurrent/Open DTC Control (N489)

This setting enables fault code monitoring of the left side high beam.

Table 259: Main Beam (High Beam) LH Undercurrent/Open DTC Control (N489)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N489 | ON | OFF | ON | FLAG |

Main Beam (High Beam) RH Undercurrent/Open DTC Control (N490)

This setting enables fault code monitoring of the right side high beam.

Table 260: Main Beam (High Beam) RH Undercurrent/Open DTC Control (N490)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N490 | ON | OFF | ON | FLAG |

Rear Tractor Position Lamps (Park Lamps) Undercurrent/Open DTC Control (N491)

This setting enables fault code monitoring of the rear tractor position lamps/park lamps.



NOTE

The factory default value of this setting is OFF. Vehicles equipped with LED lighting should keep this setting to OFF. Turning this setting to ON on a vehicle with LED lighting can create a fault code error in the system.

Table 261: Rear Tractor Position Lamps (Park Lamps) Undercurrent/Open DTC Control (N491)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N491 | OFF | OFF | ON | FLAG |

Reverse Lamps Undercurrent/Open DTC Control (N492)

This setting enables fault code monitoring of the reverse lamps.

Table 262: Reverse Lamps Undercurrent/Open DTC Control (N492)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N492 | ON | OFF | ON | FLAG |

Tractor Direction Indication, Brake and Hazard - RH Rear Lamp Undercurrent/Open DTC Control (N493)

This setting enables fault code monitoring of the right side rear tractor direction indication, brake, and hazard lights.

Table 263: Tractor Direction Indication, Brake and Hazard - RH Rear Lamp Undercurrent/Open DTC Control (N493)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N493 | ON | OFF | ON | FLAG |

Tractor Direction Indication, Brake and Hazard - LH Rear Lamp Undercurrent/Open DTC Control (N494)

This setting enables fault code monitoring of the left side rear tractor direction indication, brake, and hazard lights.

Table 264: Tractor Direction Indication, Brake and Hazard - LH Rear Lamp Undercurrent/Open DTC Control (N494)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N494 | ON | OFF | ON | FLAG |

Reverse Warning (aka Backup Alarm) Undercurrent/Open DTC Control (N495)

This setting enables fault code monitoring of the reverse warning/backup alarm.

Table 265: Reverse Warning (aka Backup Alarm) Undercurrent/Open DTC Control (N495)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N495 | OFF | OFF | ON | FLAG |

Tractor Direction Indication/Hazard/Side Turn Indication RH Front Lamp Undercurrent/Open DTC Control (N496)

This setting enables fault code monitoring of the right side front light.



NOTE

The factory default value of this setting is OFF. Vehicles equipped with LED lighting should keep this setting to OFF. Turning this setting to ON on a vehicle with LED lighting can create a fault code error in the system.

Table 266: Tractor Direction Indication/Hazard/Side Turn Indication RH Front Lamp Undercurrent/Open DTC Control (N496)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N496 | OFF | OFF | ON | FLAG |

Tractor Direction Indication/Hazard/Side Turn Indication LH Front Lamp Undercurrent/Open DTC Control (N497)

This setting enables fault code monitoring of the left side front light.



NOTE

The factory default value of this setting is OFF. Vehicles equipped with LED lighting should keep this setting to OFF. Turning this setting to ON on a vehicle with LED lighting can create a fault code error in the system.

Table 267: Tractor Direction Indication/Hazard/Side Turn Indication LH Front Lamp Undercurrent/Open DTC Control (N497)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N497 | OFF | OFF | ON | FLAG |

Tractor Direction Indication/Hazard/DRL - RH Front Lamp Undercurrent/Open DTC Control (N498)

This setting enables fault code monitoring of the right side front tractor direction indication, hazard, and daytime running lights.

Table 268: Tractor Direction Indication/Hazard/DRL - RH Front Lamp Undercurrent/Open DTC Control (N498)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N498 | OFF | OFF | ON | FLAG |

Tractor Direction Indication/Hazard/DRL - LH Front Lamp Undercurrent/ Open DTC Control (N499)

This setting enables fault code monitoring of the left side front tractor direction indication, hazard, and daytime running lights.

Table 269: Tractor Direction Indication/Hazard/DRL - LH Front Lamp Undercurrent/Open DTC Control (N499)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N499 | OFF | OFF | ON | FLAG |

Chapter 25 | CMS - DIGITAL OUTPUT FMI 5 (UNDERCURRENT / OPEN)

| | |
|--|-----|
| Chassis Modules (CMP and CMS) | 184 |
| City Horn Relay Undercurrent/Open DTC Control (N435) | 184 |
| Aftertreatment External Notification Undercurrent/Open DTC Control (N436) | 184 |
| Spare Digital Output Undercurrent/Open DTC Control (NA-OCM02) (N437) | 184 |
| Lift Axle #3 Solenoid Undercurrent/Open DTC Control (N438) | 185 |
| Lift Axle #4 Solenoid Undercurrent/Open DTC Control (N439) | 185 |
| Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM69) (N480) | 185 |
| Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM72) (N481) | 185 |
| Trailer Options - Dump Gate/Configurable Output Undercurrent/Open DTC Control (NA-OCM10) (N482) | 186 |
| Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM25) (N483) | 186 |
| Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM26) (N484) | 186 |
| Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM33) (N485) | 187 |
| Sky/Aux Lights (Panel) Undercurrent/Open DTC Control (N486) | 187 |
| Work Lamps (Frame Mounted) Undercurrent/Open DTC Control (N487) | 187 |
| Snow Plow Lamp Undercurrent/Open DTC Control (N488) | 187 |

Chassis Modules (CMP and CMS)

There are two modules for chassis component control; the **CMP** and the **CMS** (Also referred to as the **SCM**, and **OCM**, respectively). The **CMP** is standard equipment for all **VECU** system trucks as it controls major functions such as exterior lighting, fuel level, and other options. The **CMS** may be found on trucks built from the factory with certain options such as more than two lift axles, snow plow, or a **B-CAN**.

Chassis Module Parameters

These parameters will enable or disable fault code monitoring of current and voltage at the chassis module for the assigned device. These parameters could be useful if the device is multiplexed, factory installed, and the specific parameter is enabled to monitor.

City Horn Relay Undercurrent/Open DTC Control (N435)

This setting enables fault code monitoring of the city horn relay.

Table 270: City Horn Relay Undercurrent/Open DTC Control (N435)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N435 | OFF | OFF | ON | FLAG |

Aftertreatment External Notification Undercurrent/Open DTC Control (N436)

This setting enables fault code monitoring of the aftertreatment external notification.

Table 271: Aftertreatment External Notification Undercurrent/Open DTC Control (N436)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N436 | OFF | OFF | ON | FLAG |

Spare Digital Output Undercurrent/Open DTC Control (NA-OCM02) (N437)

This setting enables NA-OCM02 for fault code monitoring.

Table 272: Spare Digital Output Undercurrent/Open DTC Control (NA-OCM02) (N437)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N437 | OFF | OFF | ON | FLAG |

Lift Axle #3 Solenoid Undercurrent/Open DTC Control (N438)

This setting enables fault code monitoring of lift axle #3 solenoid.

Table 273: Lift Axle #3 Solenoid Undercurrent/Open DTC Control (N438)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N438 | OFF | OFF | ON | FLAG |

Lift Axle #4 Solenoid Undercurrent/Open DTC Control (N439)

This setting enables fault code monitoring of the lift axle #4 solenoid.

Table 274: Lift Axle #4 Solenoid Undercurrent/Open DTC Control (N439)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N439 | OFF | OFF | ON | FLAG |

Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM69) (N480)

This setting enables NA-OCM69 fault code monitoring.

Table 275: Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM69) (N480)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N480 | OFF | OFF | ON | FLAG |

Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM72) (N481)

This setting enables NA-OCM72 fault code monitoring.

Table 276: Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM72) (N481)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N481 | OFF | OFF | ON | FLAG |

Trailer Options - Dump Gate/Configurable Output Undercurrent/Open DTC Control (NA-OCM10) (N482)

This setting enables NA-OCM10 fault monitoring.

Table 277: Trailer Options - Dump Gate/Configurable Output Undercurrent/Open DTC Control (NA-OCM10) (N482)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N482 | OFF | OFF | ON | FLAG |

Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM25) (N483)

This setting enables NA-OCM25 fault monitoring.

Table 278: Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM25) (N483)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N483 | OFF | OFF | ON | FLAG |

Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM26) (N484)

This setting enables NA-OCM26 fault monitoring.

Table 279: Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM26) (N484)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N484 | OFF | OFF | ON | FLAG |

Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM33) (N485)

This setting enables NA-OCM33 fault monitoring.

Table 280: Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM33) (N485)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N485 | OFF | OFF | ON | FLAG |

Sky/Aux Lights (Panel) Undercurrent/Open DTC Control (N486)

This setting enables fault code monitoring of the sky/auxiliary lights panel.

Table 281: Sky/Aux Lights (Panel) Undercurrent/Open DTC Control (N486)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N486 | OFF | OFF | ON | FLAG |

Work Lamps (Frame Mounted) Undercurrent/Open DTC Control (N487)

This setting enables fault code monitoring of frame-mounted work lamps.

Table 282: Work Lamps (Frame Mounted) Undercurrent/Open DTC Control (N487)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N487 | OFF | OFF | ON | FLAG |

Snow Plow Lamp Undercurrent/Open DTC Control (N488)

This setting enables fault code monitoring of snow plow mounted lamps.

Table 283: Snow Plow Lamp Undercurrent/Open DTC Control (N488)

| SEL Code | Default Value | Minimum Value | Maximum Value | Unit Type |
|----------|---------------|---------------|---------------|-----------|
| N488 | OFF | OFF | ON | FLAG |

Glossary

Adaptive Cruise Control - An electronic system that automatically adjusts the speed of a truck in cruise control to a predetermined following distance and/or time. This feature includes a warning system to warn the driver for collision avoidance.

Anti-lock Braking System - A federally mandated anti-skid braking device used on cars and trucks.

Automatic Traction Control - A function within a motor vehicle that can be switched on to help limit tire slip in acceleration on slippery surfaces by limiting engine torque and/or differential braking.

Body Builder CAN - CAN that handles communication between the *CMS* and body builder items such as body controller/PTO and starter battery *State of Charge (SoC)*.

Cab CAN - A vehicle bus standard designed to allow microcontrollers and devices to communicate with each other within a vehicle without a host computer. This network is specific to the cab area.

Cab Electronic Control Unit - Cab control located inside the cab on vehicles with Namux 4 architecture between 2010 and 2018. It is replaced by the VECU controller that was phased in starting in 2018.

CECU VECU Multiplex - New vehicle multiplex architecture that uses both a *CECU* and a *VECU* to handle CAN communication.

Chassis Module Primary - Chassis Module with standard functionality such as exterior lighting and electric-over-air.

Chassis Module Secondary - Chassis Module with optional functionality like different temp sensors and body builder functionality.

Controller Area Network - A vehicle bus standard designed to allow microcontrollers and devices to communicate with each other within a vehicle without a host computer.

Cruise Control - A function within a motor vehicle that can be switched on to maintain a selected constant speed without the use of the accelerator.

DAVE4 - A diagnostic tool used for programming and troubleshooting *ECUs* on the vehicle.

Diagnostic Trouble Code - These are standard and OEM specific codes that request vehicle data or identify vehicle problems. Typically used with service tools. Technically defined as OBD-II PIDS, or on-board diagnostics parameter IDs.

Diesel Exhaust Fluid - A solution containing urea that is injected in the SCR aftertreatment system.

Differential lock - A device that disables the differential of a motor vehicle in slippery conditions to improve grip.

Downhill Speed Control - System that allows the engine to provide braking when the vehicle speed exceeds pre-determined vehicle speeds when the vehicle is in Cruise Control mode.

Downhill Speed Limiter - System that allows the engine to provide braking when the vehicle speed exceeds pre-determined vehicle speeds when speed is being controlled through pedal input.

Driver Shift Aid - A software module used to communicate the need to execute an upshift event to a customer to improve engine fuel consumption. Also known as DRSA.

Dynamic Cruise Control - System that detects objects in front of the vehicle to adjust the vehicle's speed to accommodate slower moving objects.

Electronic Catalog - System dealers and service personnel use to look up the specific chassis components when a truck comes in for service.

Electronic Control Unit - A device responsible for overseeing, regulating, and altering the operation of the truck's electronic systems.

Electronic Service Analyst - A PC based diagnostic service tool that supports both Kenworth and Peterbilt multiplexed cab electronics. The ESA tool is used in PACCAR factories, at dealership and fleet locations.

Electric Over Air - A term meant to highlight the difference between air system architectures. One is a pure air system that changes states using air valves, while an EOA system uses electrical switches to actuate/control air solenoids.

Electric Over Hydraulic - EOA system that uses electrical switches to actuate/control hydraulic functions.

Engine Idle Shutdown Timer - A function that shuts down the engine after a customer-prescribed amount of time when no overrule conditions are present.

Engine Over-speed Air Shutdown - Provides emergency overspeed shutdown protection for diesel engines and are the most effective way of preventing a runaway situation.

Engine Speed Control - Module used to limit the vehicle's engine speed in cab station or remote station *PTO* mode.

Fast Idle Control - Engine function that controls the idle of the engine when a higher idle is required, such as instances where a Power Take Off is being used or when stationary idling needs more coolant flow.

Frame CAN - FD capable CAN.

G-CAN - Sub CAN off of ABS (Bendix only).

Gear Down Protection - Module that encourages the driver to shift into top gear when operating the vehicle at the target operating speed.

Hill Start Aid - Momentarily prevents vehicle from moving while on a steep grade when brake pedal is released.

HVAC - System to control the temperature of the air inside the cab and the sleeper.

J-CAN - CAN network that handles communications between the *CMP* and the *MSB*.

Legal Speed Limit - The maximum speed the vehicle can normally travel, before modifications from the Driver Reward system and similar functions.

Master Switch Module - A smart module that interfaces with all of the multiplexed switches on the dash.

Menu Control Switch - Switch used to control the vehicle's system menu located on the dash.

Multiplex Solenoid Bank - This is a device with a set of electric over air solenoid connecting electric switches to air operated devices. On occasion this will be shortened to Solenoid Bank. The term Multiplex is added to clarify that the device is multiplexed with the vehicle controller as opposed to a bank of solenoids that are individually wired to the switch.

Multiplexed - Method by which multiple analog or digital signals are combined into one signal over a shared medium.

On Board Diagnostics - The vehicle's self-diagnostic and reporting system.

Optional Chassis Module - See *Chassis Module Secondary* on page 189 .

Original Equipment Manufacturer - Refers to the company that originally manufactured the product. Often synonymous with the truck makers/truck divisions unless otherwise noted.

Outside Air Temperature - Refers to the ambient temperature outside of the vehicle.

PACCAR Engine Pro - Former North American software application used to make changes or adjust engine parameters. Replaced by *PVP*.

PACCAR Vehicle Pro - North American software application used to make changes or adjust engine parameters.

Power Take Off - A term for methods of taking power from an operating power source, such as a running engine, which can be used to provide power to attachments or separate machines.

Predictive Cruise Control - An optional cruise control function that increases or decreases vehicle speed based on geographical terrain.

Progressive Shift - Module typically used to encourage earlier shifts in lower gears to improve fuel economy.

PTO Mode Control - System that provides configurable interlocks to restrict *PTO* Mode (if required).

PTO Speed Control - System that provides engine speed controls when vehicle is in *PTO* mode.

Right Hand Stalk - Multiplexed Stalk on the right side of the steering column controlling retarder. Mounted on the right stalk.

Selective Catalytic Reduction - An aftertreatment technology that eliminates NOx by using DEF.

Smart Clutch - Horton fan clutch for optional variable speed fan functionality.

Soft Top Speed Limit - The maximum speed the vehicle can travel, after modifications from the Driver Reward system and similar functions.

Solenoid Bank #1 - A J1939 based solenoid bank for controlling electric-over-air functions.

Solenoid Bank #2 - A J1939 based solenoid bank for controlling electric-over-air functions.

Standard Chassis Module - See [Chassis Module Primary](#) on page 189 .

State of Charge - Measurement of the amount of charge in the vehicle's battery.

Steering Wheel Switches - Switch controls installed on the vehicle's Smartwheel.

System Address 33 - This is the internal identifier for the Body Builder Module on a truck with VECU architecture.

Transmission Control Module - [ECU](#) that controls the vehicle's transmission.

Telematics - Customer installed 3rd party systems for tracking/monitoring trucks in the field. Also typically called "Communications Units".

Vehicle Acceleration Limiter - System designed to improve fuel economy by limiting the maximum vehicle acceleration.

Vehicle Electronic Control Unit - Control unit, computer, installed inside the cab and processes all input and output from the driver controls to the cab and chassis.

Vehicle Identification Number - Unique code, including a serial number, used to identify a vehicle.

Vehicle Speed Limiter - System designed to improve fuel economy by reducing the vehicle's maximum speed in pre-defined situations.

Index

Special Characters

(Auto-Retarder) Target Vehicle Speed Offset (N871) [55](#)

A

[10](#)

Accelerate Ramp Rate (N521) [136](#)

Accelerate Ramp Rate (N554) [151](#)

Accessing PACCAR Vehicle Pro [20](#)

Aftertreatment External Notification Undercurrent/Open DTC Control (N436) [184](#)

Air Solenoids [74](#)

Allows Remote additional inputs to control engine speed in CAB PTO mode (N913) [162](#)

Ambient temp above which the idle timer will be overridden (N686) [59](#)

Ambient temp below which the idle timer will be overridden (N687) [60](#)

Application Guidelines [29](#)

Auto Start/Stop Hood Tilt Switch (N421) [168](#)

Axle Temp Gauges (Rear Center) (N422) [168](#)

Axle Temp Gauges (Rear Front) (N409) [165](#)

Axle Temp Gauges (Rear Rear) (N406) [165](#)

Axle Temp Gauges (Steer) (N423) [168](#)

B

Backup Alarm Mute Switch (S917) [112](#)

Backup alarm parameters [112](#)

Battery Energy Monitoring (via Ammeter) (N407) [165](#)

Beacon Lamp DTC - On/Off (N930) [118](#)

Boolean KW only parameter to enable single switch control of lift axles (TRACTOR ONLY) (S780) [100](#)

Build Information for Models with VECU [14](#)

C

Cab Accelerator Active in Cab Station PMC (N545) [128](#)

Cab Accelerator Active in Remote Station PMC (N577) [129](#)

Cab Accelerator Pedal Type in PTO Mode (N544) [128](#)

Cab and Remote Station: Fan On in PTO Mode (N885) [129](#)

CAN Based PTO Mode Request [126](#)

Chassis Module Parameters [164](#), [168](#), [176](#), [184](#)

Chassis Modules (CMP and CMS) [164](#), [168](#), [176](#), [184](#)

City Horn Relay Undercurrent/Open DTC Control (N435) [184](#)

Clutch Interlock (N546) [133](#)

Clutch Interlock (N580) [148](#)

Configuration parameter that enables the complete backup alarm function (S830) [112](#)

Cruise Control (CC) [48](#)

Cummins Engine Integration on Vehicles with VECU [10](#)

Custom Interlock (N547) [133](#)

Custom Interlock (N581) [148](#)

Custom Interlock Switch Behavior (N888) [159](#)

Custom Preset 1 (N538) [142](#)

Custom Preset 1 (N571) [157](#)

Custom Preset 1 Functionality (N537) [142](#)

Custom Preset 1 Functionality (N570) [156](#)

Custom Preset 2 (N540) [143](#)

Custom Preset 2 (N573) [158](#)

Custom Preset 2 Functionality (N539) [143](#)

Custom Preset 2 Functionality (N572) [157](#)

Custom Preset 3 (N542) [144](#)

Custom Preset 3 (N575) [159](#)

Custom Preset 3 Functionality (N541) [144](#)

Custom Preset 3 Functionality (N574) [158](#)

D

Daytime Running Lights (DRL) LH (Peterbilt) Undercurrent/Open DTC Control (N417) [177](#)

Daytime Running Lights (DRL) RH (Peterbilt) Undercurrent/Open DTC Control (N418) [178](#)

Decelerate Ramp Rate (N522) [136](#)

Decelerate Ramp Rate (N555) [151](#)

Decrease in FIC Target Engine Speed on a Bump of the RESUME/DECEL SWITCH (N729) [25](#)

Decrease in FIC Target Engine Speed on a Long Press of the RESUME/DECEL SWITCH (N728) [25](#)

Decrement Amount (N527) [137](#)

Decrement Amount (N560) [152](#)

Decrement step for the cruise target speed when the km/H - mph switch is set to km/h (N502) [48](#)

Dedicated Preset 1 (N535) [141](#)

Dedicated Preset 1 (N568) [155](#)

Dedicated Preset 2 (N536) [141](#)

Dedicated Preset 2 (N569) [155](#)

Default OE Installed PTO Controls [125](#)

Defines the function assignment for bank 1 valve 1 (N755) [76](#)

Defines the function assignment for bank 1 valve 2 (N756) [76](#)

Defines the function assignment for bank 1 valve 3 (N757) [77](#)

Defines the function assignment for bank 1 valve 4 (N758) [77](#)

Defines the function assignment for bank 1 valve 5 (N759) [77](#)

Defines the function assignment for bank 1 valve 6 (N760) [78](#)

Defines the function assignment for bank 2 valve 1 (N761) [78](#)

Defines the function assignment for bank 2 valve 2 (N762) [79](#)

Defines the function assignment for bank 2 valve 3 (N763) [79](#)

Defines the function assignment for bank 2 valve 4 (N764) [79](#)

Defines the function assignment for bank 2 valve 5 (N765) [80](#)

Defines the function assignment for bank 2 valve 6 (N766) [80](#)

Defines the high speed threshold for Wheel Differential Lock Center Rear Axle function (N924) [101](#)

Defines the high speed threshold for Wheel Differential Lock Dual Rear Axle function (N925) [102](#)

Defines the high speed threshold for Wheel Differential Lock Forward Rear Axle function (N927) [102](#)

Defines the high speed threshold for Wheel Differential Lock Front Axle function (N926) [102](#)

Defines the high speed threshold for Wheel Differential Lock Rear Rear Axle function (N928) [102](#)

Defines the high speed threshold for Wheel Differential Lock Single Rear Axle function (N929) [103](#)

Defines the speed threshold for air over inflation function (N823) [98](#)

Defines the speed threshold for Air Suspension Dump (N821) [98](#)

Defines the speed threshold for fifth wheel slide (N820) [98](#)

Defines the speed threshold for Inter Axle Diff Lock function (N805) [95](#)

Defines the speed threshold for the work brakes function (N815) [97](#)

Defines the speed threshold for Trailer Dump Center function (N770) [92](#)

Defines the speed threshold for Trailer Dump Forward function (N769) [91](#)

Defines the speed threshold for Trailer Dump Rear function (N771) [92](#)

Defines the speed threshold for Trailer Dump Single function (N768) [91](#)

Defines the speed threshold for trailer suspension dump function (N822) [98](#)

Defines the speed threshold for Truck Dump Gate function (N767) [91](#)

Defines the speed threshold for Wheel Differential Lock Center Rear Axle function (N809) [96](#)

Defines the speed threshold for Wheel Differential Lock Dual Rear Axle function (N811) [97](#)

Defines the speed threshold for Wheel Differential Lock Forward Rear Axle function (N808) [96](#)

Defines the speed threshold for Wheel Differential Lock Front Axle function (N806) [95](#)

Defines the speed threshold for Wheel Differential Lock Rear Rear Axle function (N810) [96](#)

Defines the speed threshold for Wheel Differential Lock Single Rear Axle function (N807) [96](#)

Defines when EOH PTO is installed (N816) [97](#)

Delay time (in seconds) before the engine brakes become active when engaged by the driver (N874) [56](#)

Determine whether Trailer Dump Gate Single and Forward are present on the chassis. (N775) [106](#)

Determine whether Trailer Dump Gate Single and Rear are present on the chassis. (N776) [106](#)

Determine whether Trailer Dump Gate Single is present on the chassis. (N778) [108](#)

Determines if Suspension Dump is required (N817) [97](#)

Determines what type of lift axle is installed at this location (N782) [93](#)

Determines what type of lift axle is installed at this location (N783) [94](#)

Determines what type of lift axle is installed at this location (N784) [95](#)

Determines what type of lift axle is installed at this location (N785) [94](#)

Determines Which Interlocks Are Present For Axle Four (N789) [100](#)

Determines Which Interlocks Are Present For Axle One (N786) [99](#)

Determines Which Interlocks Are Present For Axle Three (N788) [100](#)

Determines Which Interlocks Are Present For Axle Two (N787) [99](#)

Direction Indication/Hazard Lights LH Trailer (rear) Undercurrent/Open DTC Control (N415) [177](#)

Direction Indication/Hazard Lights RH Trailer (rear) Undercurrent/Open DTC Control (N416) [177](#)

Disables PSC with Stop Lamp Active (N516) [161](#)

Driver Reward [36](#)

Driver Shift Aid [44](#)

DSL target vehicle speed offset (N870) [55](#)

Dump Functions [91](#)

E

EIST Enable Park brake reset (N681) [58](#)

Electric Over Air Solenoid Kingpin Release (N414) [176](#)

Electric Trailer Options [106](#)

Enable accelerator position as timer reset condition (N699) [64](#)

Enable Air temperature idle timer override (S683) [59](#)

Enable Body Control from Source Address 33 (N587) [161](#)

Enable Body Control from Source Address 7 (N586) [160](#)

Enable clutch pedal position as timer reset condition (N701) [64](#)

Enable EIST in PTO mode (S691) [61](#)
Enable EIST park brake timer (N705) [65](#)
Enable EIST timer when the parking brake is not set (N694) [63](#)
Enable Engine Idle Shutdown Timer (S682) [58](#)
Enable engine load as idle time reset condition (N692) [62](#)
Enable engine load as idle timer overrule condition (N693) [62](#)
Enable foot brake position as timer reset condition (N700) [64](#)
Enable or disable the corrective braking functionality. (N512) [51](#)
Enable Override Conditions In PTO Mode (N702) [66](#)
Enable slew rate limit for speed pedal if configured for speed control (N886) [160](#)
Enable slew rate limit for torque pedal if configured for torque control (N887) [160](#)
Enable the Driver Fuel Efficiency part of the Driver Reward Speed Limiter (S624) [38](#)
Enable the Driver reward speed limiter functionality. (S615) [37](#)
Enable the Dynamic Cruise Control function. (N509) [50](#)
Enable the gear down protection feature (S864) [29](#)
Enable the progressive shift feature (S865) [30](#)
Enable the Vehicle Idle Time Percentage (S628) [40](#)
Enables driver shift aid functionality (S636) [44](#)
Enables to overrule EIST to recharge vehicle batteries (S703) [65](#)
Engine brake uninterrupted if cruise control is 'set' while engine brakes are active (N923) [52](#)
Engine Idle Shutdown Timer (EIST) [58](#)
Engine load above which the idle timer will reset (N685) [59](#)
Engine speed lower limit while in REMOTE PTO mode (N603) [132](#)
Engine Speed Soft Limit for PGS Step 1 (N862) [33](#)
Engine Speed Soft Limit for PGS Step 2 (N863) [33](#)
EOA Parameter Options
 Kenworth [81](#)
 Peterbilt [86](#)
Exterior lighting parameters [118](#)
Exterior Notification for Regen Active (N915) [174](#)
Exterior Notification of Regen [174](#)

F

Factory OE Dash Controls for Aftermarket Air Operated PTO [126](#)
Fast Idle Control (FIC) [24](#)
Filter Gauges (fuel filter restriction) (N404) [164](#)
Flag To Allow Remote Pedal (N578) [129](#)
Fog/Driving Lamps (front) 1st set Undercurrent/Open DTC Control (N419) [178](#)
Front Tractor Position Lights (Park Lamps) Undercurrent/Open DTC Control (N420) [178](#)
Fuel consumption threshold for BONUS driver reward state (N625) [38](#)
Fuel consumption threshold for EXPECTED driver reward state (N626) [39](#)
Fuel consumption threshold for PENALTY driver reward state (N627) [39](#)
Fuel Level Sensor (Secondary) (N401) [164](#)
Fuel Temp Sensor (N424) [169](#)

G

GDP Engine Speed Limit (N851) [30](#)
Gear Down Protection (GDP) [29](#)

H

Highest transmission gear ratio that DSA will be active (Lowest Gear) (N638) [44](#)
How to Read This Document [10](#)

I

Identifying Control Units [14](#)
Identifying System Using DAVIE4 [14](#)
Idle percentage threshold for BONUS driver reward state (N629) [40](#)
Idle percentage threshold for EXPECTED driver reward state (N630) [40](#)
Idle percentage threshold for PENALTY driver reward state (N631) [41](#)
Idle time in PTO mode (N688) [60](#)
Idle time with park brake not set (N690) [61](#)
Idle time with park brake set (N689) [61](#)
Impact to vehicle speed/acceleration determination for trucks with multispeed axles. (S911) [114](#)
Increase in FIC Target Engine Speed on a Bump of the SET/ACCEL SWITCH (N730) [26](#)
Increase in FIC Target Engine Speed on a Long Press of the SET/ACCEL SWITCH (N727) [25](#)
Increment Amount (N526) [136](#)
Increment Amount (N559) [151](#)
Increment step for brief operation of switch (N503) [49](#)

L

Large decrement step for the cruise target speed when the km/h - mph switch is set to km/h. (N510) [50](#)
Large increment step for the cruise target speed when the km/h - mph switch is set to km/h. (N511) [51](#)
Lift Axle #1 Solenoid Undercurrent/Open DTC Control (N412) [176](#)
Lift Axle #2 Solenoid Undercurrent/Open DTC Control (N413) [176](#)
Lift Axle #3 Solenoid Undercurrent/Open DTC Control (N438) [185](#)
Lift Axle #4 Solenoid Undercurrent/Open DTC Control (N439) [185](#)

Lift Axle Air PressureGauge (#1) - DTC Enable (N425) [170](#)
Lift Axle Air PressureGauge (#2) - DTC Enable (N426) [170](#)
Lift Axle Air PressureGauge (#3) - DTC Enable (N427) [170](#)
Lift Axle Air PressureGauge (tag) - DTC Enable (N428) [171](#)
Lift Axle Functions [92](#)
Lowest transmission gear ratio that DSA will be active (Highest Gear) (N639) [45](#)

M

Main Beam (High Beam) LH Undercurrent/Open DTC Control (N489) [179](#)
Main Beam (High Beam) RH Undercurrent/Open DTC Control (N490) [179](#)
Main Transmission Oil Temp (N403) [164](#)
Maximum Accelerator Pedal Vehicle Speed (Vmax, non-GHG) (N711) [68](#)
Maximum Engine Speed - Accelerator Controlled (N519) [130](#)
Maximum Engine Speed - Cab and Remote Accelerator Controlled (N552) [145](#)
Maximum Engine Speed - Switch Controlled (N520) [131](#)
Maximum Engine Speed - Switch or TSC1 Controlled (N553) [145](#)
Maximum Engine Torque Output (N528) [132](#)
Maximum Engine Torque Output (N561) [147](#)
Maximum gear for GDP to be enabled (N856) [31](#)
Maximum gear for PGS Step 1 (N860) [32](#)
Maximum gear for PGS Step 2 (N858) [31](#)
Maximum Rate of Engine Speed DECREASE (N525) [132](#)
Maximum Rate of Engine Speed DECREASE (N558) [146](#)
Maximum Rate of Engine Speed INCREASE (N524) [131](#)
Maximum Rate of Engine Speed INCREASE (N557) [146](#)
Maximum target engine speed in fast idle control (N726) [24](#)
Maximum Vehicle Speed (N523) [131](#)
Maximum Vehicle Speed (N556) [146](#)
Maximum Vehicle Speed Bonus 1 (N618) [37](#)
Maximum Vehicle Speed Penalty 1 (N621) [38](#)
Min Vehicle Speed for Driver Shift Aid Active (N637) [44](#)
Minimum gear for PGS Step 1 (N861) [32](#)
Minimum gear for PGS Step 2 (N859) [32](#)
Minimum gear to enable GDP (N850) [30](#)
Multi Torque with Cruise Control only (N890) [115](#)
Multiplex Solenoid Bank (MSB) Functions [76](#)
Multiplexed Solenoid Bank (MSB) System [74](#)

N

Neutral Interlock (N548) [134](#)
Neutral Interlock (N582) [148](#)
No multi torque (S910) [114](#)

O

Offset Mode (N632) [41](#)
Offset to enable cruise control (N506) [50](#)
Oil Temp Gauges (Aux Trans) (N429) [169](#)
Oil Temp Gauges (Split shaft PTO/transfer case) (N430) [169](#)
Open circuit detection on Allison MTD PTO Controls - PTO 1 (N921) [130](#)
Open circuit detection on PTO Engaged Output for PTO Hourmeter and PTO Telltale (N922) [130](#)

P

PACCAR Driveline Protection [114](#)
PACCAR Engine Brake [54](#)
Parameter to enable Flood light during reverse (N882) [118](#)
Park Brake Interlock (N549) [134](#)
Park Brake Interlock (N583) [149](#)
PMC Remote Station Accelerator [127](#)
Power Take Off (PTO) [124](#)
Preset Increment/Decrement Switch Type (N543) [137](#)
Preset Increment/Decrement Switch Type (N576) [155](#)
Programming a new Multiplex Switch [22](#)
Programming Modules on a Truck [20](#)
Progressive Shift (PGS) [28](#)
PTO Governor Responsiveness (N517) [128](#)

R

Rear Tractor Position Lamps (Park Lamps) Undercurrent/Open DTC Control (N491) [179](#)
Remote Station PMC [126](#)
Remote Throttle Input (N408) [165](#)
Remote: Minimum Engine Speed (N602) [147](#)
Resets EIST on PTO change (N704) [66](#)
Retarder Interlock (N914) [162](#)
Retarder mode when cruise control switch on but not active (S875) [56](#)
Reverse Lamps Undercurrent/Open DTC Control (N492) [179](#)
Reverse Warning (aka Backup Alarm) Undercurrent/Open DTC Control (N495) [180](#)

S

Scale acceleration target based on customer choice (N750) [72](#)

Service Brake Interlock, NOT Pressed equals No PTO Speed Control (N585) [150](#)
 Service Brake Interlock, Pressed equals No PTO Speed Control (N584) [149](#)
 Service Brake Interlock: NOT Pressed Equals No PTO Speed Control (N551) [135](#)
 Service Brake Interlock: Pressed Equals No PTO Speed Control (N550) [135](#)
 Set the function to be sent on the configurable pin 3 of the ISO 3731 connector. (N777) [107](#)
 Set/Res Enabled (N610) [138](#)
 Set/Res Enabled (N611) [150](#)
 Sky/Aux Lights (Panel) Undercurrent/Open DTC Control (N486) [187](#)
 Sleeper Dome Lamp DTC - On/Off (N932) [119](#)
 Snow Plow Lamp Undercurrent/Open DTC Control (N488) [187](#)
 Spare Analog Input DTC Enable (NA-OCM60) (N431) [171](#)
 Spare Analog Input DTC Enable (NA-OCM61) (N432) [171](#)
 Spare Analog Input DTC Enable (NA-OCM62) (N433) [171](#)
 Spare Digital Output Undercurrent/Open DTC Control (NA-OCM02) (N437) [184](#)
 Special Tools [18](#)
 Speed Control Management (SCM) [28](#)
 Spot Lamp DTC - On/Off (N931) [118](#)
 Standard Maximum Speed Limit (LSL) (N718) [69](#)
 Suspension Load Air Pressure Gauge #2 - DTC Enable (N434) [172](#)

T

The maximal cruise control set speed. Can be set offline to reduce the fuel consumption (N504) [49](#)
 Time remaining to shutdown from the moment of EIST warning (N696) [63](#)
 Tires (S836) [122](#)
 Toggle Preset 1 (N529) [138](#)
 Toggle Preset 1 (N562) [152](#)
 Toggle Preset 2 (N530) [139](#)
 Toggle Preset 2 (N563) [152](#)
 Toggle Preset 3 (N531) [139](#)
 Toggle Preset 3 (N564) [153](#)
 Toggle Preset 4 (N532) [139](#)
 Toggle Preset 4 (N565) [153](#)
 Toggle Preset 5 (N533) [140](#)
 Toggle Preset 5 (N566) [154](#)
 Toggle Preset 6 (N534) [140](#)
 Toggle Preset 6 (N567) [154](#)
 Tractor Direction Indication, Brake and Hazard - LH Rear Lamp Undercurrent/Open DTC Control (N494) [180](#)
 Tractor Direction Indication, Brake and Hazard - RH Rear Lamp Undercurrent/Open DTC Control (N493) [180](#)
 Tractor Direction Indication/Hazard/DRL - LH Front Lamp Undercurrent/Open DTC Control (N499) [182](#)
 Tractor Direction Indication/Hazard/DRL - RH Front Lamp Undercurrent/Open DTC Control (N498) [181](#)
 Tractor Direction Indication/Hazard/Side Turn Indication LH Front Lamp Undercurrent/Open DTC Control (N497) [181](#)
 Tractor Direction Indication/Hazard/Side Turn Indication RH Front Lamp Undercurrent/Open DTC Control (N496) [181](#)
 Trailer Hotline Switch (N779) [108](#)
 Trailer Options - Dump Gate/Configurable Output Undercurrent/Open DTC Control (NA-OCM10) (N482) [186](#)
 Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM25) (N483) [186](#)
 Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM26) (N484) [186](#)
 Trailer Options - ISO 3731/Spare/Aux Trailer Conn/Berg Box Undercurrent/Open DTC Control (NA-OCM33) (N485) [187](#)
 Trans gear ratio (S642) [45](#)
 Type of PTO Controls - Cab/Remote/Both (S518) [127](#)

V

VECU [22](#)
 Vehicle Acceleration Limiter [72](#)
 Vehicle Parameters [122](#)
 Vehicle Speed Limiter (VSL) [68](#)
 Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM69) (N480) [185](#)
 Vehicle Thermal Management Undercurrent/Open DTC Control (NA-OCM72) (N481) [185](#)

W

What is PTO Mode Control (PMC)? [127](#)
 Work Lamps (Frame Mounted) Undercurrent/Open DTC Control (N487) [187](#)
 Work Lights or Flood Lamps 1 DTC - On/Off (N935) [119](#)
 Work Lights or Flood Lamps 2 DTC - On/Off (N933) [119](#)
 Work Lights or Flood Lamps 3 DTC - On/Off (N934) [119](#)

